Manualslib.com - The Global Manuals Library

Manuals / Brands / Sharp Manuals / TV / 14R2BK / Service manual / PDF

SHARP 14R2BK SERVICE MANUAL

Table of Contents

Table of Contents
SPECIFICATIONS
IMPORTANT SERVICE NOTES
ADJUSTMENT PRECAUTIONS
MEMORY MAP
GA1 HOTEL MODE APPLICATION
TROUBLE SHOOTING FLOWCHART
CHASSIS LAYOUT
BLOCK DIAGRAM
BLOCK DIAGRAM:CRT UNIT

BLOCK DIAGRAM:HEADPHONE UNIT
SOLID STATE DEVICE BASE DIAGRAM
TOP VIEW
SIDE VIEW
DESCRIPTION OF SCHEMATIC DIAGRAM
WAVEFORMS
SCHEMATIC DIAGRAMË CRT UNIT
Ë HEADPHONE UNIT
SCHEMATIC DIAGRAM:HEADPHONE UNIT
SCHEMATIC DIAGRAM:MAIN UNIT
Ë MAIN UNIT
PRINTED WIRING BOARD ASSEMBLIES
PARTS LIST
MAIN UNIT
PARTS REPLACEMENT
PICTURE TUBE
CRT UNIT
HEADPHONE UNIT
Ë SUPPLIED ACCESSORIES
Ë PACKING PARTS
CABINET PARTS LOCATION
PACKING OF THE SET
ALL RIGHTS RESERVED
Other ManualsLib Projects

SHARP SERVICE MANUAL

S03K114R2BK//

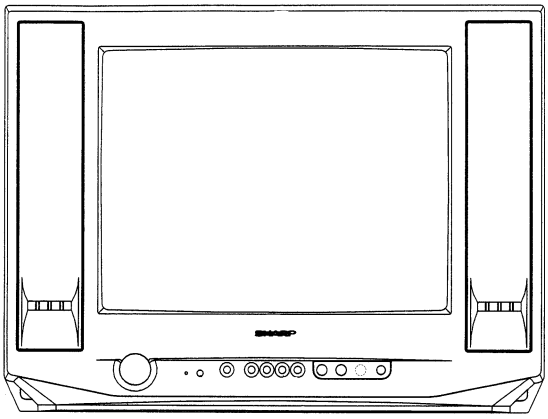

COLOUR TELEVISION

Chassis No. GA-1AM

MODEL 14R2BK

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

FEATURES

- Multi 18 systems
- Full Auto Channel Preset and Auto Channel Skip
- 100-CH Program Memory
- CATV(Hyper Band) Ready
  <Used Frequency Synthesizer Tuner>
- AVL(Sound Keeper) Function
- Black Stretch Circuit
- On Timer/Sleep Timer/Reminder Timer
- Blue Back Noise Mute
- Front Headphone Terminal
- Front AV-In & Rear AV-In/Out Terminals (Front Priority)
- Colour Comb Filter(NTSC only)
- High Contrast Picture
- Hotel Mode
- Arabic/Chinese/English/French/Malay 5 Languages OSD
- White Temperature Adjustment

CONTENTS

	Page
● SPECIFICATIONS	2
● IMPORTANT SERVICE NOTES	2
● ADJUSTMENT PRECAUTIONS	3
● MEMORY MAP	12
● GA1 HOTEL MODE APPLICATION	16
● TROUBLE SHOOTING FLOWCHART	16
● CHASSIS LAYOUT	19
● BLOCK DIAGRAM	20
● SOLID STATE DEVICE BASE DIAGRAM	23
● DESCRIPTION OF SCHEMATIC DIAGRAM	24
● WAVEFORMS	24
● SCHEMATIC DIAGRAM	
■ CRT UNIT	25
■ HEADPHONE UNIT	25
■ MAIN UNIT	26
● PRINTED WIRING BOARD ASSEMBLIES	28
● REPLACEMENT PARTS LIST	
■ ELECTRICAL PARTS	
MAIN UNIT	33
CRT UNIT	36
HEADPHONE UNIT	37
■ SUPPLIED ACCESSORIES	37
■ PACKING PARTS	37
■ CABINET PARTS	38
● PACKING OF THE SET	39

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis. To prevent electric shock, do not remove cover. No user – serviceable parts inside. Refer servicing to qualified service personnel.

SHARP CORPORATION

SPECIFICATIONS

Convergence	Self Convergence System
Focus	Quadra-Potential Electrostatic
Sweep Deflection	Magnetic
Intermediate Frequencies	
Picture IF Carrier	38.9MHz
Sound IF Carrier Frequency	
6.5MHz	32.4MHz
6.0MHz	32.9MHz
5.5MHz	33.4MHz
Colour Sub-Carrier Frequency	34.47MHz
Power Input	110 ~ 240V AC 50/60 Hz
Power Consumption	62W
Audio Power Output Rating	5.0W(at Max.)
Speaker	
Size	5 x 9 cm Elliptic (2pcs)
Voice Coil Impedance	16 ohms at 400 Hz
Aerial Input Impedance	
VHF/UHF	75 ohms Unbalanced
Receiving System	CCIR SECAM/PAL B, G,D,K,I
Tuner Ranges	
VHF-Channels	E2(48.25MHz) thru E12(224.25MHz)
	C1(49.75MHz) thru C12(216.25 MHz)
	S1(105.25MHz) thru S36(423.25HMz)
UHF-Channels	E21(471.25MHz) thru E69(855.25MHz)
	C13(471.25MHz) thru C57(863.25MHz)
	S37(431.25MHz) thru S41(463.25MHz)
Dimensions	Width: 446.0mm
	Height: 333.0mm
	Depth: 364.0mm
	Weight(approx): 9.7 kg
Cabinet material	All Plastics

Specifications are subject to change without prior notice.

IMPORTANT SERVICE NOTES

Maintenance and repairing of this receiver should be done by qualified service personnel only.

SERVICE OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove static charge from it by Connecting a 10K ohm Resistor in series with an insulated wire(such as a test probe) between picture tube dag and 2nd anode lead. (AC line cord should be disconnected from AC outlet.)

1. **Picture tube in this receiver employs integral implosion protection.**
2. **Replace with tube of the same type number for continued safety.**
3. **Do not lift picture tube by the neck.**
4. **Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage completely.**

X-RAY

This receiver is designed so that any X-Ray radiation is kept to an absolute Minimum. Since certain malfunctions or servicing may produce potentially hazardous radiation with prolonged exposure at close range, the following precautions should be observed:

1. **When repairing the circuit, be sure not to increase the high voltage to more than 23.7kV(at beam 0 μA) for the set.**
2. **To keep the set in a normal operation , be sure to make it function on 22.5kV±1.5kV(at beam 800 μA) in the case of the set. The set has been factory - Adjusted to the above-mentioned high voltage.**
   - *** If there is a possibility that the high voltage fluctuates as a result of the repairing, never forget to check for such high voltage after the work.**
3. **Do not substitute a picture tube with unauthorized types and/or brands which may cause excess X-ray radiation.**

BEFORE RETURNING THE RECEIVER

Before returning the receiver to the user, perform the following safety Checks.

1. **Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.**
2. **Inspect all protective devices such as non-metallic control knobs, insulating fishpapers, cabinet backs, adjustment and compartment covers or shields, isolation resistor- capacity networks, mechanical insulators etc.**

ADJUSTMENT PRECAUTIONS

This model's setting are adjusted in two different ways: through the I²C bus control and in the conventional analog manner. The adjustments via the I²C bus control include preset-only items and variable data.
CAUTION: Make sure TV Set is in "Normal Condition" before switch to Service Mode for adjustment.

1. Setting the service mode by the microprocessor.

①. Short JA 137 & JA 138 for 1 second and release to switch to the service mode position, and the microprocessor is in input mode. (Adjustment through the I²C bus control). (Use JWS Key to set as well).

②. Press the CH DOWN / UP key on the remote controller to get ready to select the mode one by one.

③. Press the CH DOWN / UP key on the remote controller to select the modes reversibly one by one.

④. Using the VOLUME UP/ DOWN key on the remote controller, the data can be modified.

⑤. Short JA 137 & JA 138 for 1 second and release to switch to the normal mode (OFF) position, and the microprocessor is in out of the service mode.

2. Factory Presetting.

①.Short JA 137 & JA 138 then turn "ON" the main power and release to switch to the Service Mode position.Initial values are automatically preset, only when a new EEPROM is used (Judge with the first 4 bytes).

②. The initial data are preset as listed in page 5 & 6.

③. Make sure the data need modification or not (Initial data).

Note: Once the chassis has been assembly together and ready to be POWER ON for the FIRST TIME, make sure to short JA137 & JA138 to switch to the service mode position first and then turn on the main power switch (See 2-① above).

Precaution: If haven't done this initialization, it may possibly generate excessive Beam current.

3. For reference please check with memory map (GA-1AM Series type RH-IX3368CE Attachment)

■ SERVICE MODE

(1) In the Service Mode, Key is used to select the mode in the following order.

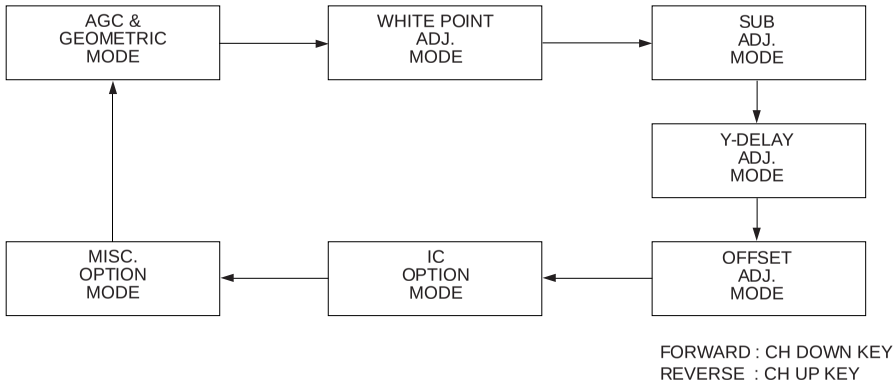

FORWARD : CH DOWN KEY
REVERSE : CH UP KEY

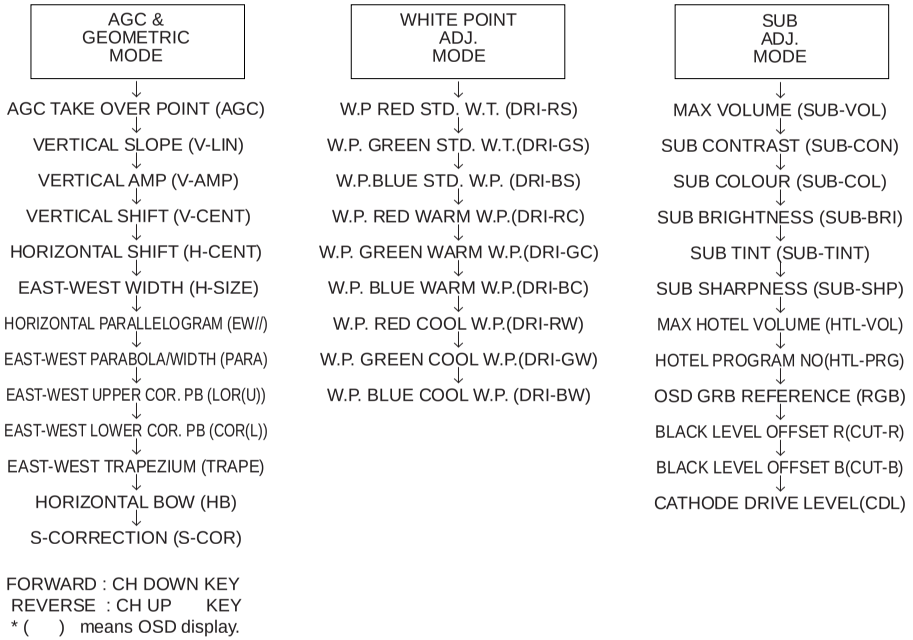

FORWARD : CH DOWN KEY
REVERSE : CH UP KEY
* ( ) means OSD display.

Y-DELAY ADJ. MODE
Y-D TIME FOR PAL (TV) (DL-PT)
Y-D TIME FOR SECAM (TV) (DL-ST)
Y-D TIME FOR N358 (TV) (DL-3T)
Y-D TIME FOR N443 (TV) (DL-4T)
Y-D TIME FOR B/W (TV) (DL-TV)
Y-D TIME FOR PAL (AV) (DL-PA)
Y-D TIME FOR SECAM (AV) (DL-SA)
Y-D TIME FOR N358 (AV) (DL-3A)
Y-D TIME FOR N443(AV) (DL-4A)
Y-D TIME FOR B/W (AV) (DL-AV)
*(Y-D : Y-DELAY)
OFFSET ADJ. MODE
COLOUR OFFSET (PAL) (COL-OP)
COLOUR OFFSET (SECAM) (COL-OS)
COLOUR OFFSET (NTSC358) (COL-O3)
COLOUR OFFSET (NTSC443) (COL-O4)
SHARPNESS OFFSET (PAL) (SHP-OP)
SHARPNESS OFFSET (SECAM) (SHP-OS)
SHARPNESS OFFSET (NTSC358) (COL-O3)
SHARPNESS OFFSET (NTSC443) (COL-O4)
IC OPTION MODE
VERTICAL SCAN DISABLE(VSD)
BLACK STRETCH (BKS)
AUTO VOLUME LEVELING(AVL)
FAST FILTER IF-PLL(FFI)
ENABLE VERTICAL GUARD (EVG)
EHT TRACKING MODE (EHT)
OVERSCAN SWITCH OFF(OSO)
AUTO COLOUR LIMIT(ACL)
FORCED COLOUR LIMIT(FCO)
MISC. OPTION MODE
SOUND SYSTEM M (S-M)
SOUND SYSTEM DK (S-DK)
SOUND SYSTEM I (S-I)
SOUND SYSTEM BG (S-BG)
PLAYBACK SECAM (P-SECAM)
FE (RF) NTSC 3.58 (F-N358)
FE (RF) NTSC 4.43 (F-N443)
FE (RF) SECAM (F-SECAM)
VIDEO MUTE AT IDENT LOSS (VMI)
VIDEO MUTE AT PROGRAM /SOURCE CHANGE (VMC)
HOTEL MODE (HTL)
REDUCED FM DEMODULATION GAIN FOR BTSC SIGNAL (BTSC)
A
A
NUMBER OF EXT AV SOURCE (AV)
FM WINDOW SELECTION (FMWS)
SOUND MUTE BIT 0 (SM0)
SOUND MUTE BIT 1 (SM1)
THAI LANGUAGE (THA)
ARABIC LANGUAGE (ARA)
MALAY LANGUAGE (MAL)
CHINESE LANGUAGE (CHI)
FRENCH LANGUAGE (FRE)
RUSSIAN LANGUAGE (RUS)
FORCED V-SYNC SLICING LEVEL(FSL)
SYNC OF OSD (HP2)
TUNER SELECTION (CPT)
B
B
BILINGUAL(BIL)
IF AGC SPEED BIT 0 (AGC0)
IF AGC SPEED BIT 1 (AGC1)
FOA Time Constant-RF (FOA-FE)
FOB Time Constant-RF (FOB-FE)
FOA Time Constant-AV (FOA-AV)
FOB Time Constant-AV (FOB-AV)
LED BLINK SPEED (LED-F)
VOLUME CONTROL TABLE (MSA)
OUTPUT VERTICAL GUARD (NDF)

* Direct Key-in for Service Item in Service Mode

RC COMMAND	SERVICE-ITEM
FUNCTION	AGC
CONTRAST DOWN	V-LIN
COLOUR DOWN	V-AMP
BRIGHTNESS DOWN	V-CENT
TINT DOWN	H-CENT
SHARPNESS DOWN	EW / /
SYSTEM	HB
BLUEBACK	S-COR
TIMER	SUB-VOL
CONTRAST UP	SUB-CON
COLOUR UP	SUB-COL
BRIGHTNESS UP	SUB-BRI
TINT UP	SUB TINT
SHARPNESS UP	SUB-SHP

AFTER SHORT JA 137 & JA 138 ,AND TURN ON THE MAIN POWER SWITCH,READ DATA FROM EEPROM ADDRESS 00H ~ 03H,AND COMPARE TO THE LIST BELOW, IF DIFFERENT, INITIALIZE THE EEPROM.

Address	:	Data	Address	:	Data
00H	:	55H	02H	:	43H
01H	:	4FH	03H	:	A1H

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	14R2BK	REMARK
AGC TAKE OVER POINT	AGC	0~63	14	ADJ	
VERTICAL SLOPE	V-LIN	0~63	32	ADJ	
VERTICAL AMPLITUDE	V-AMP	0~63	32	ADJ	
VERTICAL SHIFT	V-CENT	0~63	32	ADJ	
HORIZONTAL SHIFT	H-CENT	0~63	32	ADJ	
EAST-WEST WIDTH	H-SIZE	0~63	32	32	
HORIZONTAL PARALLELOGRAM	EW//	0~63	32	32	
EAST-WEST PARABOLA/WIDTH	PARA	0~63	32	32	
EAST-WEST UPPER CORNER PARABOLA	COR (U)	0~63	32	32	
EAST-WEST LOWER CORNER PARABOLA	COR (L)	0~63	32	32	
EAST-WEST TRAPEZIUM	TRAPE	0~63	32	32	
HORIZONTAL BOW	HB	0~63	32	32	
S-CORRECTION	S-COR	0~63	0	17	
WHITE POINT RED STD WHITE TEMP	DRI-RS	0~63	32	32	
WHITE POINT GREEN STD WHITE TEMP	DRI-GS	0~63	32	ADJ	
WHITE POINT BLUE STD WHITE TEMP	DRI-BS	0~63	32	ADJ	
WHITE POINT RED COOL WHITE TEMP	DRI-RC	0~63	25	27	
WHITE POINT GREEN COOL WHITE TEMP	DRI-GC	0~63	32	ADJ	Data(DRI-GS)-5
WHITE POINT BLUE COOL WHITE TEMP	DRI-BC	0~63	32	ADJ	Same as data (DRI-BS)
WHITE POINT RED WARM WHITE TEMP	DRI-RW	0~63	32	32	
WHITE POINT GREEN WARM WHITE TEMP	DRI-GW	0~63	32	ADJ	Data (DRI-GS)-7
WHITE POINT BLUE WARM WHITE TEMP	DRI-BW	0~63	32	ADJ	Data (DRI-BS)-7
MAX VOLUME	SUB-VOL	0~63	63	63	
SUB CONTRAST	SUB-CON	0~63	63	52	
SUB COLOUR	SUB-COL	0~63	32	ADJ	
SUB BRIGHTNESS	SUB-BRI	0~63	32	ADJ	
SUB TINT	SUB-TINT	0~63	32	ADJ	
SUB SHARPNESS	SUB-SHP	0~63	32	20	
MAX HOTEL VOLUME	HTL-VOL	0~63	32	32	
HOTEL PROGRAM NUMBER	HTL-PRG	0~99 OR>99FOR NONE	255	255	
OSD GRB REFERENCE	RGB	0~15	15	6	
BLACK LEVEL OFF-SET R	CUT-R	0~63	32	ADJ	
BLACK LEVEL OFF-SET G	CUT-G	0~63	32	ADJ	
CATHODE DRIVE LEVEL	CDL	0~15	0	5	
Y-DELAY TIME FOR PAL(TV) [YD]	DL-PT	0~15	12	12	
Y-DELAY TIME FOR SECAM(TV) [YD]	DL-ST	0~15	15	15	
Y-DELAY TIME FOR N358 (TV) [YD]	DL-3T	0~15	12	12	
Y-DELAY TIME FOR N443 (TV) [YD]	DL-4T	0~15	12	12	
Y-DELAY TIME FOR B/W (TV) [YD]	DL-TV	0~15	12	12	
Y-DELAY TIME FOR PAL (AV) [YD]	DL-PA	0~15	12	12	
Y-DELAY TIME FOR SECAM (AV) [YD]	DL-SA	0~15	15	15	
Y-DELAY TIME FOR N358 (AV) [YD]	DL-3A	0~15	12	12	
Y-DELAY TIME FOR N443 (AV) [YD]	DL-4A	0~15	12	12	
Y-DELAY TIME FOR B/W (AV) [YD]	DL-AV	0~15	12	12	
COLOUR OFFSET (PAL)	COL-OP	0~15	8	14	
COLOUR OFFSET (SECAM)	COL-OS	0~15	8	14	
COLOUR OFFSET (NTSC358)	COL-O3	0~15	4	10	
COLOUR OFFSET (NTSC443)	COL-O4	0~15	4	10	
SHARPNESS OFFSET (PAL)	SHP-OP	0~15	8	8	
SHARPNESS OFFSET (SECAM)	SHP-OS	0~15	4	4	
SHARPNESS OFFSET (NTSC358)	SHP-O3	0~15	12	8	

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	14R2BK	REMARK
SHARPNESS OFFSET (NTSC443)	SHP-O4	0~15	8	8	
VERTICAL SCAN DISABLE	VSD	0(DISABLE)/1(ENABLE)	0	0	
BLACK STRETCH	BKS	0(DISABLE)/1(ENABLE)	1	1	
AUTOMATIC VOLUME LEVELING	AVL	0(DISABLE)/1(ENABLE)	1	1	
FAST FILTER IF-PLL	FFI	0(DISABLE)/1(ENABLE)	0	0	
ENABLE VERTICAL GUARD (RGB BLANKING)	EVG	0(DISABLE)/1(ENABLE)	1	1	
EHT TRACKING MODE (HCO)	EHT	0(DISABLE)/1(ENABLE)	1	1	
OVERSCAN SWITCH OFF	OSO	0(DISABLE)/1(ENABLE)	0	0	
AUTO COLOUR LIMIT	ACL	0(DISABLE)/1(ENABLE)	0	0	
FORCED COLOUR LIMIT	FCO	0(DISABLE)/1(ENABLE)	0	0	
SOUND SYSTEM M	S-M	0(DISABLE)/1(ENABLE)	0	0	
SOUND SYSTEM DK	S-DK	0(DISABLE)/1(ENABLE)	1	1	
SOUND SYSTEM I	S-I	0(DISABLE)/1(ENABLE)	1	1	
SOUND SYSTEM BG	S-BG	0(DISABLE)/1(ENABLE)	1	1	
PLAYBACK SECAM	P-SECAM	0(DISABLE)/1(ENABLE)	1	1	
FE (RF) NTSC 3.58	F-N358	0(DISABLE)/1(ENABLE)	0	0	
FE (RF) NTSC 4.43	F-N443	0(DISABLE)/1(ENABLE)	1	1	
FE (RF) SECAM	F-SECAM	0(DISABLE)/1(ENABLE)	1	1	
VIDEO MUTE AT IDENT LOSS	VMI	0(DISABLE)/1(ENABLE)	1	1	
VIDEO MUTE AT PROGRAM/SOURCE CHANGE	VMC	0(DISABLE)/1(ENABLE)	1	1	
HOTEL MODE	HTL	0(DISABLE)/1(ENABLE)	0	0	
REDUCED FM DEMODULATOR GAIN FOR BTSC SIGNAL	BTSC	0(DISABLE)/1(ENABLE)	0	0	
NUMBER OF EXTERNAL AV SOURCE	AV	0 FOR1 AV/1 FOR 2AV	1	0	
FM WINDOW SELECTION	FMWS	0(DISABLE)/1(ENABLE)	0	0	
SOUND MUTE BIT 0	SM0	0(DISABLE)/1(ENABLE)	1	1	
SOUND MUTE BIT 1	SM1	0(DISABLE)/1(ENABLE)	0	0	
THAI LANGUAGE	THA	0(DISABLE)/1(ENABLE)	0	0	
ARABIC LANGUAGE	ARA	0(DISABLE)/1(ENABLE)	1	1	
MALAY LANGUAGE	MAL	0(DISABLE)/1(ENABLE)	1	1	
CHINESE LANGUAGE	CHI	0(DISABLE)/1(ENABLE)	1	1	
FRENCH LANGUAGE	FRE	0(DISABLE)/1(ENABLE)	1	1	
RUSSIAN LANGUAGE	RUS	0(DISABLE)/1(ENABLE)	1	0	
FORCED V-SYNC SLICING LEVEL	FSL	0(DISABLE)/1(ENABLE)	0	0	
SYNC OF OSD	HP2	0(DISABLE)/1(ENABLE)	0	0	
TUNER SELECTION (0:SHARP/ALPS;1:MURATA)	CPT	0(DISABLE)/1(ENABLE)	0	0	
BILINGUAL	BIL	0(DISABLE)/1(ENABLE)	0	0	
IF AGC SPEED BIT 0	AGC0	0(DISABLE)/1(ENABLE)	1	1	
IF AGC SPEED BIT 1	AGC1	0(DISABLE)/1(ENABLE)	0	0	
PHI-1 TIME CONSTANT (RF)	FOA-FE	0(DISABLE)/1(ENABLE)	0	0	
PHI-1 TIME CONSTANT (RF)	FOB-FE	0(DISABLE)/1(ENABLE)	0	0	
PHI-1 TIME CONSTANT (OFF AIR)	FOA-AV	0(DISABLE)/1(ENABLE)	1	1	
PHI-1 TIME CONSTANT (OFF AIR)	FOB-AV	0(DISABLE)/1(ENABLE)	1	1	
LED BLINK SPEED	LED_F	0(DISABLE)/1(ENABLE)	0	1	
VOLUME CONTROL PWM TABLE	MSA	0(DISABLE)/1(ENABLE)	0	1	
OUTPUT VERTICAL GUARD	NDF	0(DISABLE)/1(ENABLE)	0	1	

NOTE :
1) Please follow the fixed data according to model.
2) ADJ meaning adjustment data.

INITIAL SETTING

(1). Please set the MCL to **MCL1.**

Note:

MCL1					
CH-NO	**Fv (MHz)**	**SOUND SYS**	**CH-NO**	**Fv (MHz)**	**SOUND SYS**
0	41.10		25	855.25	B/G
1	48.25	B/G	26	55.25	M
2	62.25	B/G	27	83.25	M
3	77.25	D/K	28	183.25	M
4	175.25	B/G	29	193.25	M
5	182.25	B/G	30	217.25	M
6	183.25	D/K	31	471.25	M
7	191.25	D/K	32	477.25	M
8	196.25	B/G	33	693.25	M
9	199.25	M	34	41.10	
10	210.25	B/G	35	112.25	B/G
11	224.25	B/G	36	168.25	B/G
12	471.25	B/G	37		
13	487.25	I	38	294.25	B/G
14	503.25	B/G	39	463.25	B/G
15	575.25	B/G	40		
16	583.25	B/G	41	647.25	B/G
17	599.25	B/G	42	663.25	B/G
18	621.25	M	43	679.25	B/G
19	639.25	D/K	44	174.95	B/G
20	703.25	B/G	45	175.55	B/G
21	735.25	I	46	41.10	
22	767.25	B/G	↓		
23	815.25	B/G			
24	855.25	I			
			99	41.10	

(2). After set the MCL, please set the INITIAL SETTING to **INITIAL 4.**

Note:
INITIAL 1: For China (All Channel Sound System are set to D/K)
INITIAL 2: For Hong Kong (All Channel Sound System are set to I)
INITIAL 3: For Malaysia, Singapore,Africa and Australia (All Channel Sound System are set to B/G)
INITIAL 4: For Middle-East (All Channel Sound System are set to B/G)
INITIAL 5: For Russia (All Channel Sound System are set to D/K)

SHIPPING SETTING & CHECKING

(1) The following default data has been factory-set for the EEPROM follow by INITIAL DATA selected.

ITEMS	DATA SETTING
LAST PROGRAM/CHANNEL	1
FLASHBACK PROGARM/CH	1
CHANNEL ENTRY DIGIT NUMBER	1
C-SYSTEM	AUTO
S-SYSTEM	*1
SKIP	OFF
AFC	ON
VOLUME	1
CONTRAST	60 (MAX)
COLOUR	0 (CENTER)
BRIGHTNESS	0 (CENTER)
TINT	0 (CENTER)
SHARPNESS	0 (CENTER)
WHITE TEMP	STANDARD
REMINDER TIMER	In-active, "--:--"
ON TIMER	In-active, "--:--"
OFF TIMER	In-active, "--:--"
LAST POWER	POWER-ON
LANGUAGE	*1
BLUE BACK MUTE	ON
HOTEL MODE	OFF
0 CHANNEL SKIP	ON
LAST TV/AV	TV

*1: Please refer defaults for LANGUAGE and SOUND SYSTEM per MODEL as follows.

INITIAL	LANGAUGE	SOUND SYSTEM
4	ARABIC	B/G

FACTORY SETTING BY MODEL
(Reference: Geomagnetism Adjustment)

MODEL	Geomagnetism (V,H) nT	Background	Lang.	S-SYS	Lang. QTY
MID EAST	30,000 20,000	18000K	ARABIC	B/G	5

LANGUAGE QTY: ENGLISH/CHINESE/ARABIC/FRENCH/MALAY

ADJUSTMENT PRECAUTION:
Make sure TV Set is in "Normal Condition" before switch to service mode for adjustment.

PIF ADJUSTMENT

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**Tuner IFT (PRESET)**	1. Get the tuner ready to receive the CH. E - 9 signal,but with no signal input. Adjust the PLL data. 2. Connect the sweep generator's output cable to the tuner antenna. (RF SWEEP) 3. Adjust the sweep generator's to 80dBuV. 4. Connect the response lead (use LOW IMPEDANCE probe with wave detector ; see Fig.1) to the tuner's IF output terminal. (This terminal must have the probe alone connected). 5. Set the RF AGC to 0 - 6 V with no saturation with the waveform. 6. Adjust the tuner IF coil to obtain the waveform as shown in Fig. 2. **Note: Be sure to keep the tuner cover in position during this adjustment.**	 Fig.1  Fig.2
2	**RF-AGC TAKE OVER POINT ADJUSTMENT (I²C BUS CONTROL)**	1. Receive "PAL COLOUR BAR" signal. Signal Strength: 57 ± 1 dBμV (75 ohm open) 2. Connect the oscilloscope to TP201(Tuner's AGC Terminal) as shown in Fig. 3. 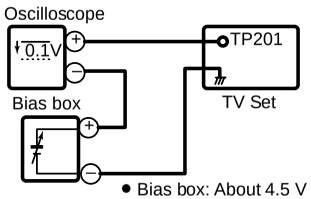 Fig. 3 3. Call "AGC" mode in service mode. Adjust the "AGC" bus data to obtain the Tuner output pin drop 0.1V below maximum voltage. 4. Change the antenna input signal to 63~67dBμV, and make sure there is no noise. 5. Turn up the input signal to 90~95 dBμV to be sure that there is no cross modulation beat.	**Note: For the 50 ohm signal strength gauge, when not using 50/75 impedance adapter, signal strength is 52±1dBμV(75 ohm open), instead of 57±1dBμV (75 ohm open).** **Precaution: The loss of using impedance adapter**

PURITY ADJUSTMENT

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**PURITY ADJ.**	1. Receive the GREEN-ONLY signal. Adjust the beam current to ~500μA. 2. Degauss the CRT enough with the degausing coil. **Note: Follow the Job Instruction Sheet to adjust the magnetic field.** Vertical Bv: +0.030mT (0.30 gauss) Horizontal Bh: +0.020mT (0.20 gauss) (Reference: page 6) 3. Maintain the purity magnet at the zero magnetic field and keep the static convergence roughly adjusted. 4. Observe the points a, b as shown in Fig. 4-1 through the microscope. Adjust the landing to the rank A requirements. 5. Orient the raster rotation to 0 eastward. 6. Tighten up the deflection coil screws. Tightening torque: 108 ± 20 N (11 ± 2 kgf) 7. Make sure the CRT corners landing meet the A rank requirements. If not, stick the magnet sheet to correct it. **Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500 μA.** **Note: Set the service mode by JA137 & 138(short) then press factory process R/C RGB key to change to RGB mono colour mode.** * For the following colours press R/C RGB key to change. 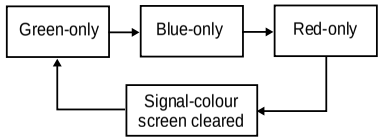	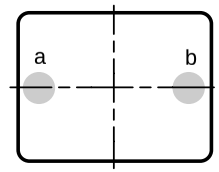 Fig. 4-1 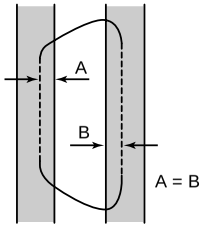 Fig. 4-2 Rank "A" (on the right of the CRT) 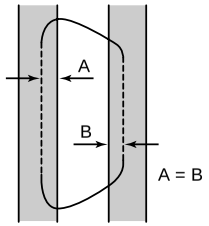 Fig. 4-3 Rank "A" (on the left of the CRT) * Press R/C RGB key for 1 second in NORMAL MODE, the colour will change to RGB mono colour mode.

CONVERGENCE ADJUSTMENT

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**CONVERGENCE ADJ. (To be done after the purity adjustment.**	1. Receive the "Crosshatch Pattern" signal. 2. Using the remote controller, call NORMAL mode. **STATIC CONVERGENCE** 1. Turn the 4-pole magnet to a proper opening angle in order to superpose the blue and red colours. 2. Turn the 6-pole magnet to a proper opening angle in order to superpose the green colour over the blue and red colours. **DYNAMIC CONVERGENCE** 1. Adjust the convergence on the fringes of the screen in the following steps. a) Fig. 5-1: Drive the wedge at point "a" and swing the deflection coil upward. b) Fig. 5-2: Drive the wedge at points "b" and "c" and swing the deflection coil downward. c) Fig. 5-3: Drive the "c" wedge deeper and swing the deflection coil rightward. d) Fig. 5-4: Drive the "b" wedge deeper and swing the deflection coil leftward. 2. Fix all the wedges on the CRT and apply glass tape over them. 3. Apply lacquer to the deflection yoke lock screw, magnet unit (purity, 4-pole, 6-pole magnets) and magnet unit lock screw. Finally received the Red-only and Blue-only signals to make sure there is no other colours on the screen. **Note*** **SAMSUNG CRT : 32mm** **CPT CRT : 35mm** **TOSHIBA CRT : 35mm**	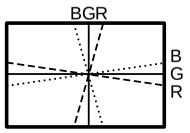 Fig. 5-1 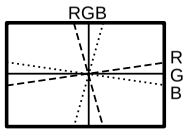 Fig. 5-2 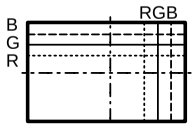 Fig. 5-3 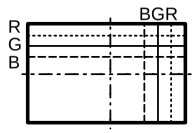 Fig. 5-4 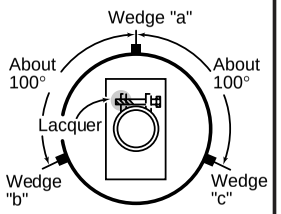 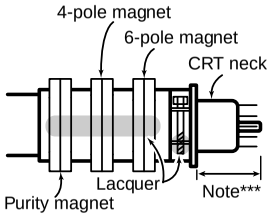

CRT CUT-OFF, BACKGROUND AND SUB-CONTRAST ADJUSTMENT

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**CRT CUTOFF ADJUSTMENT (I²C BUS CONTROL)**	Remark 1. Before CRT cutoff adjustment, SUB-BRIGHT, DRI-RS/RW/RC, DRI-GS/GW/GC, DRI-BS/BW/BC, CUT-R and CUT-G must be INITIAL DATA. 2. CRT Cutoff adjustment must be done inside a dark room. 1. Switch TV to VIDEO mode,BLUE BACK OFF, with NO VIDEO signal. 2. Press R/C to set Picture Normal condition. 3. First, off the screen by adjust screen variable resistor. *4. Next, checking AKB circuit function by slowly increase screen variable resistor until colour raster suddenly on and off (AKB start function). 5. Then continue adjust until retrace line appear. 6. Finally, slowly decrease the screen variable resistor until screen retrace line cut off. (Not Raster) **Note :** **Must confirm the AKB function in set before continue the next adjustment.**	*Alternative Procedure (1) Step (1), (2), (3) and (4) are same as beside procedure. (2) Then continue adjust until retrace line appear and make sure the colour appear whether red, green or blue. (3) Connect the oscilloscope to related test points as below which is based on colour appear at (2) RED = TP47R, GREEN = TP47G, BLUE = TP47B. (4) Then adjust Screen VR until the tip of signal reach 3.3Vdc. 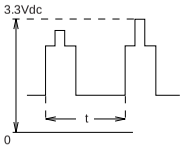
2	**SUB-BRIGHTNESS ADJUSMENT (I²C BUS CONTROL)**	1. Call " SUB-BRI" in service mode. (Receive Crosshatch pattern with 5 black level windows) *(2) Adjust the " SUB BRIGHT " bus data in order that the line 1and 2 have the same darkness wherelse line 3 is one step (data) brighter than line 2. Finally data minus 1 to make line 1, 2, and 3 are in same level (darkness).	1 Line 3 is one step (data) brighter than line 2 2

CRT CUT-OFF, BACKGROUND AND SUB-CONTRAST ADJUSTMENT (Continued)

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
3	**WHITE BALANCE SERVICE MODE ADJ. (I²C BUS CONTROL)**	1. Receive the "WHITE" pattern with BURST signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between TP602 (-) TP603 (+). 4. Check Beam current should be around 800μA. 5. Set it to service mode and adjust the DRI-GS, & DRI-BS data to have a colour temperature of 12300°K or 18000°K or 7500°K(white). * Note . 6. Receive "WHITE" pattern, WITH BURST signal, and set BRIGHTNESS Y by generator, to **10 cd/m2 (MINOLTA CA-100) by reducing LUMINATE Y signal. 7. Adjust "CUT-R" & "CUT-G" to get desired colour temperature #. Then go back NORMAL mode (HIGH BRIGHT**) to check colour temperature. If out of range, back to (1). **Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500μA.** * ADJUST DRI-GC/GW, DRI-BC/BW as following DATA, after finishing DRI-BS and DRI-GS DATA ADJUSTMENT. DRI-RW = 32 (FIXED), DRI-RS = 32 (FIXED) DRI-BC = "DRI-BS" (For 12300°K And 18000°K And 7500°K Condition)	# 7500°K X : 0.30 Y : 0.31 # 12300°K X : 0.272 Y : 0.275 # 18000°K X : 0.255 Y : 0.255 (MINOLTA COLOUR ANALYZER CA-100) ***Note: Above Data can be UP/DOWN by Volume key.** LOW HIGH 10cd/m2 200cd/m2 * 7500°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-5 DRI-GC="DRI-GS"-5 DRI-RC=25 * 12300°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-7 DRI-RC=25 * 18000°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-5 DRI-RC=27
4	**Max beam check**	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between TP603 (+) & TP602 (–). (Full Scale: 3 mA Range) 4. Beam current must be within 800 ± 100 μA.	

HORIZONTAL AND VERTICAL DEFLECTION LOOP ADJUSTMENT

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**V-SLOPE (I²C BUS CONTROL)**	1. Receive Monoscope Pattern Signal. 2. Call the "V-LIN" mode. 3. Increase or decrease "V-LIN" by Volume key till the horizontal line in the center of monoscope is just at the position where the blanking starts.	
2	**V-SHIFT-50 (I²C BUS CONTROL)**	1. Call the "V-CENT" mode. 2. Increase or decrease "V-CENT" by Volume key till the picture is centered.	
3	**V-AMP50 (I²C BUS CONTROL)**	1. Call the "V-AMP" mode. 2. Increase or decrease "V-AMP" by Volume key to set overscan of 9.5% typical. Adjustment Spec 9.5% range +1% -0%.	
4	**H-SHIFT (50) (H-CENTER)**	1. Call the "H-CENT" mode. 2. Increase or decrease "H-CENT" by Volume key to center the picture horizontal.	
5	**S-CORRECTION (I²C BUS CONTROL)**	1. SET DATA TO 17 . * Check the E-5 CH Monoscope Pattern then re-adjust V-Slope, V-Shift and V-Amp to makesure adjustment is in acceptable Ring-Shaped.	
6	**SUB-SHARPNESS**	1. SET DATA TO 20.	
1	**Focus**	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Adjust the focus control to get the best focusing.	

PAL CHROMA ADJUSTMENT

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**SUB COLOUR (I²C BUS CONTROL)**	1. Receive the "PAL Colour Bar" signal. 2. Press R/C to set Picture Normal condition. 3. Connect the oscilloscope to Red cathode(D881 Cathode) (Mini Neck) Range : 20 V/div. (AC) (Using 10:1 probe) Sweep time : 10 μsec/div. 4. Using the R/C call "SUB COL" in SERVICE mode. Adjust SUB COLOUR bus data, so that the 75% White & Red portions of PAL Color Bar be at the same level shown as **Fig. 1-1**. *Before adjust SUB-COL,make sure COL-OP=8,COL-OS=8,COL-03=4,COL-04=4. After adjust SUB-COL,set COL-OP=14,COL-OS=14,COL-03=10,COL-04=10. ***Note: For Austraria models,no need to change COL-OS.(COL-OS=8)** 5. Clear the SERVICE mode.	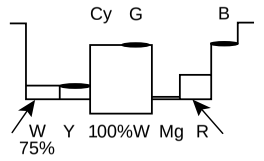 Fig. 1-1

NTSC CHROMA ADJUSTMENT

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**SUB-TINT (I^2C BUS CONTROL)**	1. Receive the "NTSC 3.58 Colour Bar" signal thru AV in. 2. Connect the oscilloscope to TP47B (P882 pin 5) BLUE-OUT. ● Range : 100mV/div. (AC)(Use Probe 10:1) ● Sweep time : 10 µsec/div. 3. Call the "SUB-TINT" mode in service mode. Adjust the "SUB-TINT" bus data to obtain the waveform shown as Fig. 1-1. 4. Clear the SERVICE mode.	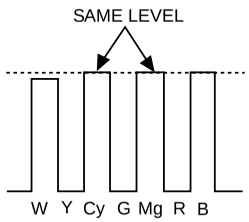 Fig. 1-1

PROTECTOR OPERATION CHECKING

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**BEAM PROTECTOR**	1. Receive "Monoscope Pattern" signal. 2. Set CONTRAST MAX. 3. Set BRIGHT MAX. 4. During the Collector & Emitter of Q883/5/7 short, make sure the protector ON and switch to standby mode.	* Select one of Q883/5/7 to do each short test.
2	**H•V PROTECTOR**	1. Receive "Monoscope Pattern" signal. 2. Connect output of Bias Box to D603 cathode (R610 side). 3. Set voltage of Bias Box to 18V and make sure the protector is not work. 4. Set voltage of Bias Box to 27V, and make sure the protector is work.	
3	**Other protector**	1. Once finish rectified Electrolytic Capacitor short testing in +B line, check all possible damaged components on +B line. (Use random selected set for inspection)	

A/V INPUT AND OUTPUT CHECKING

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**VIDEO AND AUDIO OUTPUT CHECK**	1. Receive the "PAL Colour Bar" signal (100% White Color Bar, Sound 400 Hz 100% Mod). 2. Terminate the Video output with a 75 ohm impedance. Make sure the output is as specified (1.0 Vp-p ±3 dB). 3. Terminate the Audio output with a 10k ohm impedance. Make sure the O/P is as specified (1.76 Vp-p ±3 dB).	
2	**VIDEO AND AUDIO INPUT CHECK**	1. Using the TV/AV key on the remote controller, make sure that the modes change in order of TV, AV & TV again and the video & audio output are according to the input terminal for each mode.If connect input to Front and Rear AV terminal, input terminal of Front AV will be selected.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**CONTRAST key**	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select CONTRAST. 3. Press Volume Up/Down key to check whether the CONTRAST effect is OK or not.	
2	**COLOUR key**	1. Receive "Colour Bar" signal. 2. Set P-Mode to select COLOUR. 3. Press Volume Up/Down key to check whether the COLOUR effect is OK or not.	
3	**BRIGHTNESS key**	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select BRIGHTNESS. 3. Press Volume Up/Down key to check whether the BRIGHTNESS effect is OK or not.	
4	**TINT key**	1. Receive the "NTSC Colour Bar" signal thru AV in. 2. Set P-Mode to select TINT. 3. Press Volume Up/Down key to check TINT, UP for GREEN direction and DOWN for PURPLE direction whether is OK or not.	
5	**SHARPNESS Key**	1. Receive "Monoscope Pattern" signal. 2. Set P-mode to select SHARPNESS. 3. Press Volume Up/Down key to check whether the SHARPNESS effect is OK or not.	
6	**CH DISPLAY COLOUR**	1. All Ch (1~99) will have an OSD display of the channel number in green colour under AFT ON condition.	
7	**NORMAL Key**	1. Once in PICTURE Mode, and theNORMAL key is pressed, all the settings will be present to normal setting. (Normal setting value for every mode). CONTRAST : MAX COLOUR : CENTER BRIGHTNESS : CENTER TINT : CENTER SHARPNESS : CENTER	**Notes:If nothing is display mean contrast, colour, bright, tint, sharpness are all in normal setting.**
8	**WHITE TEMP**	1. Receive "Monoscope Pattern" signal. 2. Set FUNCTION to select WHITE TEMP. 3. Press Volume Up/Down key to check WHITE TEMP Option, STANDARD: NORMAL SETTING, WARM for more REDDISH direction changing, COOL for more BLUISH direction changing.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)
(Continued)

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
9	**COLOUR SYSTEM**	1. Receive the "PAL COLOUR BAR" signal, press the COLOUR SYSTEM key to select modes except PAL, check the COLOUR is not working properly. Then, select the "PAL" mode. Check again its colour so that it is working properly. 2. Receive "SECAM COLOUR BAR" signal, press COLOUR SYSTEM key to select modes except SECAM, check the COLOUR is not working properly. Then, select the "SECAM" mode. Check again its colour so that it is working properly.	
10	**SOUND SYSTEM**	1. Receive "PAL-D/K" signal, press the "SOUND SYSTEM" to select B/G, I. Check the sound output is not working properly. Select D/K and check the sound output to make sure it is working properly. 2. Receive "PAL-I" signal, press the "SOUND SYSTEM" to select B/G, D/K. Check the sound output is not working properly. Select I and check the sound output to make sure it is working properly. 3. Receive "PAL-B/G" signal, press the "SOUND SYSTEM"to select I, D/K. Check the sound output is not working properly. Select B/G and check the sound output to make sure it is working properly.	
11	**NOISE MUTE CHECKING**	1. Receive "PAL COLOUR BAR" signal. 2. Turn up the volume control to maximum, make sure the sound is heard from the speakers. Then put the unit in no signal state. 3. Check the sound mute is effective. 4. Finally turn sound level of CTV to minimum.	
12	**OSD LANGUAGE QUANTITY CHECK**	Check OSD LANGUAGE quantity and type for respect model.(5 LANGUAGE) MODEL / QUANTITY / ENGLISH / RUSSIAN / CHINESE / FRENCH / ARABIC / MARAY ALL / 5 / O / X / O / O / O / O	

HEADPHONE JACK CHECKING

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**HEADPHONE OUTPUT CHECKING**	1. Receive PAL COLOUR BAR with SOUND 400Hz, 100% MODULATION (±50kHz Dev). 2. Maximum volume, and check the headphone output with 400Hz sound and no sound out from speaker.	

HOTEL MODE CHECKING

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**HOTEL MODE FUNCTION CHECKING**	1. Press the R/C (FUNCTION) key until language appear, within five second press the (one/two digit) key and keep pressing it for five second, then the Hotel Mode with four digits password appears. 2. Key in the four digits password starting with number "1", "3", "7", "9" then the Hotel Mode will be enable, to switch ON/OFF the Hotel Mode please press volume up/down at R/C. HOTEL ON / PASSWORD **** — Set volume up/down by R/C key; Input 1, 3, 7, 9 by R/C key 3. After "ON" the Hotel Mode, user can't control Preset mode, Fine Tuning, Skip mode and System selection. Others function is allowed to be use. **Note: Please OFF Hotel Mode after finish checking the hotel mode.** 4. To "OFF" Hotel Mode, please follow step 1. and 2.	

SHOCK TEST CHECKING

No.	Adjustment point	Adjustment conditions/procedure	Waveform or others
1	**SHOCK TEST**	1. Hit at the top of TV set for two time. 2. Check TV set not damage and TV oreration operate correctly.	

MEMORY MAP

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
00	PASS WORD								55	00-FF							
01	PASS WORD								4F	00-FF							
02	PASS WORD								43	00-FF							
03	PASS WORD								A1	00-FF							
04																	
05																	
06	AGC TAKE-OVER								0E	00-3F							
07	V-SLOPE								20	00-3F							
08	V-AMPLITUDE								20	00-3F							
09	V-CENTER								20	00-3F							
0A	H-CENTER								20	00-3F							
0B	H-SIZE								20	00-3F							
0C	EW-PARALLELOGRAM								20	00-3F							
0D	EW-PARABOLA/WIDTH								20	00-3F							
0E	EW-UPPER CORNER								20	00-3F							
0F	EW-LOWER CORNER								20	00-3F							
10	EW-TRAPEZIUM								20	00-3F							
11	HORIZONTAL-BOW								20	00-3F							
12	S-CORRECTION								00	00-3F							
13																	
14																	
15																	
16	DRIVE-R (STANDARD)								20	00-3F							
17	DRIVE-G (STANDARD)								20	00-3F							
18	DRIVE-B (STANDARD)								20	00-3F							
19	DRIVE-R (WARM)								20	00-3F							
1A	DRIVE-G (WARM)								20	00-3F							
1B	DRIVE-B (WARM)								20	00-3F							
1C	DRIVE-R (COOL)								19	00-3F							
1D	DRIVE-G (COOL)								20	00-3F							
1E	DRIVE-B (COOL)								20	00-3F							
1F																	
20																	
21																	
22	SUB-VOLUME								3F	00-3F							
23	SUB-CONTRAST								3F	00-3F							
24	SUB-COLOUR								20	00-3F							
25	SUB-BRIGHTNESS								20	00-3F							
26	SUB-TINT								20	00-3F							
27	SUB-SHARPNESS								20	00-3F							
28	HTL-VOLUME								20	00-3F							
29	HTL-POSITION								FF	00-FF							
2A																	
2B																	
2C																	
2D	OSD-REFERENCE								0F	00-0F							
2E	CUTOFF LEVEL -OFFSET R								20	00-3F							(1) 20th August 2001: Change of range & default.
2F	CUTOFF LEVEL -OFFSET G								20	00-3F							
30	CATHODE DRIVE LEVEL								00	00-0F							
31	Y-DELAY (TV PAL)								0C	00-0F							
32	Y-DELAY (TV SECAM)								0F	00-0F							
33	Y-DELAY (TV N358)								0C	00-0F							
34	Y-DELAY (TV N443)								0C	00-0F							
35	Y-DELAY (TV BW)								0C	00-0F							
36	Y-DELAY (AV PAL)								0C	00-0F							
37	Y-DELAY (AV SECAM)								0F	00-0F							
38	Y-DELAY (AV N358)								0C	00-0F							
39	Y-DELAY (AV N443)								0C	00-0F							
3A	Y-DELAY (AV BW)								0C	00-0F							
3B	COLOUR-OFFSET (PAL)								08	00-0F							
3C	COLOUR-OFFSET (SECAM)								08	00-0F							
3D	COLOUR-OFFSET (N358)								04	00-0F							
3E	COLOUR-OFFSET (N443)								04	00-0F							
3F	SHARPNESS-OFFSET (PAL)								08	00-0F							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
40	SHARPNESS-OFFSET (SECAM)								04	00-0F							
41	SHARPNESS-OFFSET (N358)								0C	00-0F							
42	SHARPNESS-OFFSET (N443)								08	00-0F							
43																	
44	FCO	ACL	OSO	EHT	EVG	FFI	AVL	BKS	1B	00-FF							
45	SECAM	N443	N358	PB-SECAM	BG	I	DK	M	DE	00-FF							
46	SM1	SM0	FMWS	AV	BTSC	HTL	VMC	VMI	53	00-FF							
47	HP2	FSL	RUS	FRA	CHN	MLY	ARB	THA	3E	00-FF							
48	FOB-AV	FOA-AV	FOB-FE	FOA-FE	AGC1	AGC0	BIL	CPT	C4	00-FF							
49						NDF	MSA	LED-F	00	00-03							(1) 20th August 2001: Added 3 new items.
4A																	
4B																	
4C	VOLUME								01	00-3C							
4D	CONTRAST								3C	00-3C							
4E	COLOUR								1E	00-3C							
4F	BRIGHTNESS								1E	00-3C							
50	TINT								1E	00-3C							
51	SHARPNESS								1E	00-3C							
52																	
53																	
54																	
55	POSITION/AV1/AV2								01	00-FF							0-63hex:Ch0-Ch99, 64hex:AV1, 65hex:AV2
56	FAV-POS A								0A	00-FF							
57	FAV-POS B								14	00-FF							
58	FAV-POS C								1E	00-FF							
59	FAV-POS D								28	00-FF							
5A																	
5B																	
5C	Last POWER mode								00	00-01							
5D	WHITE-TEMP								00	00-02							
5E	BLUE BACK								00	00-01							
5F	LANGUAGE								00	00-07							
60	Last DIGIT mode (1 or 2)								00	00-01							
61																	
62	SKIP 0	SKIP 1	SKIP 2	SKIP 3	SKIP 4	SKIP 5	SKIP 6	SKIP 7	80	00-FF							
63	SKIP 8	SKIP 9	SKIP 10	SKIP 11	SKIP 12	SKIP 13	SKIP 14	SKIP 15	00	00-FF							
64	SKIP 16	SKIP 17	SKIP 18	SKIP 19	SKIP 20	SKIP 21	SKIP 22	SKIP 23	00	00-FF							
65	SKIP 24	SKIP 25	SKIP 26	SKIP 27	SKIP 28	SKIP 29	SKIP 30	SKIP 31	00	00-FF							
66	SKIP 32	SKIP 33	SKIP 34	SKIP 35	SKIP 36	SKIP 37	SKIP 38	SKIP 39	00	00-FF							
67	SKIP 40	SKIP 41	SKIP 42	SKIP 43	SKIP 44	SKIP 45	SKIP 46	SKIP 47	00	00-FF							
68	SKIP 48	SKIP 49	SKIP 50	SKIP 51	SKIP 52	SKIP 53	SKIP 54	SKIP 55	00	00-FF							
69	SKIP 56	SKIP 57	SKIP 58	SKIP 59	SKIP 60	SKIP 61	SKIP 62	SKIP 63	00	00-FF							
6A	SKIP 64	SKIP 65	SKIP 66	SKIP 67	SKIP 68	SKIP 69	SKIP 70	SKIP 71	00	00-FF							
6B	SKIP 72	SKIP 73	SKIP 74	SKIP 75	SKIP 76	SKIP 77	SKIP 78	SKIP 79	00	00-FF							
6C	SKIP 80	SKIP 81	SKIP 82	SKIP 83	SKIP 84	SKIP 85	SKIP 86	SKIP 87	00	00-FF							
6D	SKIP 88	SKIP 89	SKIP 90	SKIP 91	SKIP 92	SKIP 93	SKIP 94	SKIP 95	00	00-FF							
6E	SKIP 96	SKIP 97	SKIP 98	SKIP 99					00	00-FF							
6F																	
70																	
71																	
72																	
73																	
74	TUNING FREQUANCY (HIGHER PART)										S-SYS						POS 0
75	TUNING FREQUANCY (LOWER PART)										000:BG						
76	S-SYS			AFT		(auto)		C-SYS			001:I						
77	TUNING FREQUANCY (HIGHER PART)										O1O:DK						POS 1
78	TUNING FREQUANCY (LOWER PART)										011:M						
79	S-SYS			AFT		(auto)		C-SYS									
7A	TUNING FREQUANCY (HIGHER PART)										AFT						POS 2
7B	TUNING FREQUANCY (LOWER PART)										0:OFF						
7C	S-SYS			AFT		(auto)		C-SYS			1:ON						
7D	TUNING FREQUANCY (HIGHER PART)																POS 3
7E	TUNING FREQUANCY (LOWER PART)																
7F	S-SYS			AFT		(auto)		C-SYS									
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
80	TUNING FREQUANCY (HIGHER PART)																POS 4
81	TUNING FREQUANCY (LOWER PART)																
82	S-SYS		AFT		(auto)		C-SYS				(auto)						
83	TUNING FREQUANCY (HIGHER PART)										0: Auto						POS 5
84	TUNING FREQUANCY (LOWER PART)										1: Forced						
85	S-SYS		AFT		(auto)		C-SYS										
86	TUNING FREQUANCY (HIGHER PART)										C-SYS						POS 6
87	TUNING FREQUANCY (LOWER PART)										100: N358						
88	S-SYS		AFT		(auto)		C-SYS				011: N443						
89	TUNING FREQUANCY (HIGHER PART)										010: SECAM						POS 7
8A	TUNING FREQUANCY (LOWER PART)										001: PAL						
8B	S-SYS		AFT		(auto)		C-SYS				000: No Color						
8C	TUNING FREQUANCY (HIGHER PART)																POS 8
8D	TUNING FREQUANCY (LOWER PART)																
8E	S-SYS		AFT		(auto)		C-SYS										
8F	TUNING FREQUANCY (HIGHER PART)																POS 9
90	TUNING FREQUANCY (LOWER PART)																
91	S-SYS		AFT		(auto)		C-SYS										
92	TUNING FREQUANCY (HIGHER PART)																POS 10
93	TUNING FREQUANCY (LOWER PART)																
94	S-SYS		AFT		(auto)		C-SYS										
95	TUNING FREQUANCY (HIGHER PART)																POS 11
96	TUNING FREQUANCY (LOWER PART)																
97	S-SYS		AFT		(auto)		C-SYS										
98	TUNING FREQUANCY (HIGHER PART)																POS 12
99	TUNING FREQUANCY (LOWER PART)																
9A	S-SYS		AFT		(auto)		C-SYS										
9B	TUNING FREQUANCY (HIGHER PART)																POS 13
9C	TUNING FREQUANCY (LOWER PART)																
9D	S-SYS		AFT		(auto)		C-SYS										
9E	TUNING FREQUANCY (HIGHER PART)																POS 14
9F	TUNING FREQUANCY (LOWER PART)																
A0	S-SYS		AFT		(auto)		C-SYS										
A1	TUNING FREQUANCY (HIGHER PART)																POS 15
A2	TUNING FREQUANCY (LOWER PART)																
A3	S-SYS		AFT		(auto)		C-SYS										
A4	TUNING FREQUANCY (HIGHER PART)																POS 16
A5	TUNING FREQUANCY (LOWER PART)																
A6	S-SYS		AFT		(auto)		C-SYS										
A7	TUNING FREQUANCY (HIGHER PART)																POS 17
A8	TUNING FREQUANCY (LOWER PART)																
A9	S-SYS		AFT		(auto)		C-SYS										
AA	TUNING FREQUANCY (HIGHER PART)																POS 18
AB	TUNING FREQUANCY (LOWER PART)																
AC	S-SYS		AFT		(auto)		C-SYS										
AD	TUNING FREQUANCY (HIGHER PART)																POS 19
AE	TUNING FREQUANCY (LOWER PART)																
AF	S-SYS		AFT		(auto)		C-SYS										
B0	TUNING FREQUANCY (HIGHER PART)																POS 20
B1	TUNING FREQUANCY (LOWER PART)																
B2	S-SYS		AFT		(auto)		C-SYS										
B3	TUNING FREQUANCY (HIGHER PART)																POS 21
B4	TUNING FREQUANCY (LOWER PART)																
B5	S-SYS		AFT		(auto)		C-SYS										
B6	TUNING FREQUANCY (HIGHER PART)																POS 22
B7	TUNING FREQUANCY (LOWER PART)																
B8	S-SYS		AFT		(auto)		C-SYS										
B9	TUNING FREQUANCY (HIGHER PART)																POS 23
BA	TUNING FREQUANCY (LOWER PART)																
BB	S-SYS		AFT		(auto)		C-SYS										
BC	TUNING FREQUANCY (HIGHER PART)																POS 24
BD	TUNING FREQUANCY (LOWER PART)																
BE	S-SYS		AFT		(auto)		C-SYS										
BF	TUNING FREQUANCY (HIGHER PART)																POS 25
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
C0	TUNING FREQUANCY (LOWER PART)																POS 25
C1	S-SYS		AFT		(auto)		C-SYS										
C2	TUNING FREQUANCY (HIGHER PART)																POS 26
C3	TUNING FREQUANCY (LOWER PART)																
C4	S-SYS		AFT		(auto)		C-SYS										
C5	TUNING FREQUANCY (HIGHER PART)																POS 27
C6	TUNING FREQUANCY (LOWER PART)																
C7	S-SYS		AFT		(auto)		C-SYS										
C8	TUNING FREQUANCY (HIGHER PART)																POS 28
C9	TUNING FREQUANCY (LOWER PART)																
CA	S-SYS		AFT		(auto)		C-SYS										
CB	TUNING FREQUANCY (HIGHER PART)																POS 29
CC	TUNING FREQUANCY (LOWER PART)																
CD	S-SYS		AFT		(auto)		C-SYS										
CE	TUNING FREQUANCY (HIGHER PART)																POS 30
CF	TUNING FREQUANCY (LOWER PART)																
D0	S-SYS		AFT		(auto)		C-SYS										
D1	TUNING FREQUANCY (HIGHER PART)																POS 31
D2	TUNING FREQUANCY (LOWER PART)																
D3	S-SYS		AFT		(auto)		C-SYS										
D4	TUNING FREQUANCY (HIGHER PART)																POS 32
D5	TUNING FREQUANCY (LOWER PART)																
D6	S-SYS		AFT		(auto)		C-SYS										
D7	TUNING FREQUANCY (HIGHER PART)																POS 33
D8	TUNING FREQUANCY (LOWER PART)																
D9	S-SYS		AFT		(auto)		C-SYS										
DA	TUNING FREQUANCY (HIGHER PART)																POS 34
DB	TUNING FREQUANCY (LOWER PART)																
DC	S-SYS		AFT		(auto)		C-SYS										
DD	TUNING FREQUANCY (HIGHER PART)																POS 35
DE	TUNING FREQUANCY (LOWER PART)																
DF	S-SYS		AFT		(auto)		C-SYS										
E0	TUNING FREQUANCY (HIGHER PART)																POS 36
E1	TUNING FREQUANCY (LOWER PART)																
E2	S-SYS		AFT		(auto)		C-SYS										
E3	TUNING FREQUANCY (HIGHER PART)																POS 37
E4	TUNING FREQUANCY (LOWER PART)																
E5	S-SYS		AFT		(auto)		C-SYS										
E6	TUNING FREQUANCY (HIGHER PART)																POS 38
E7	TUNING FREQUANCY (LOWER PART)																
E8	S-SYS		AFT		(auto)		C-SYS										
E9	TUNING FREQUANCY (HIGHER PART)																POS 39
EA	TUNING FREQUANCY (LOWER PART)																
EB	S-SYS		AFT		(auto)		C-SYS										
EC	TUNING FREQUANCY (HIGHER PART)																POS 40
ED	TUNING FREQUANCY (LOWER PART)																
EE	S-SYS		AFT		(auto)		C-SYS										
EF	TUNING FREQUANCY (HIGHER PART)																POS 41
F0	TUNING FREQUANCY (LOWER PART)																
F1	S-SYS		AFT		(auto)		C-SYS										
F2	TUNING FREQUANCY (HIGHER PART)																POS 42
F3	TUNING FREQUANCY (LOWER PART)																
F4	S-SYS		AFT		(auto)		C-SYS										
F5	TUNING FREQUANCY (HIGHER PART)																POS 43
F6	TUNING FREQUANCY (LOWER PART)																
F7	S-SYS		AFT		(auto)		C-SYS										
F8	TUNING FREQUANCY (HIGHER PART)																POS 44
F9	TUNING FREQUANCY (LOWER PART)																
FA	S-SYS		AFT		(auto)		C-SYS										
FB	TUNING FREQUANCY (HIGHER PART)																POS 45
FC	TUNING FREQUANCY (LOWER PART)																
FD	S-SYS		AFT		(auto)		C-SYS										
FE	TUNING FREQUANCY (HIGHER PART)																POS 46
FF	TUNING FREQUANCY (LOWER PART)																
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
100		S-SYS		AFT		(auto)	C-SYS										POS 46
101				TUNING FREQUANCY (HIGHER PART)													POS 47
102				TUNING FREQUANCY (LOWER PART)													
103		S-SYS		AFT		(auto)	C-SYS										
104				TUNING FREQUANCY (HIGHER PART)													POS 48
105				TUNING FREQUANCY (LOWER PART)													
106		S-SYS		AFT		(auto)	C-SYS										
107				TUNING FREQUANCY (HIGHER PART)													POS 49
108				TUNING FREQUANCY (LOWER PART)													
109		S-SYS		AFT		(auto)	C-SYS										
10A				TUNING FREQUANCY (HIGHER PART)													POS 50
10B				TUNING FREQUANCY (LOWER PART)													
10C		S-SYS		AFT		(auto)	C-SYS										
10D				TUNING FREQUANCY (HIGHER PART)													POS 51
10E				TUNING FREQUANCY (LOWER PART)													
10F		S-SYS		AFT		(auto)	C-SYS										
110				TUNING FREQUANCY (HIGHER PART)													POS 52
111				TUNING FREQUANCY (LOWER PART)													
112		S-SYS		AFT		(auto)	C-SYS										
113				TUNING FREQUANCY (HIGHER PART)													POS 53
114				TUNING FREQUANCY (LOWER PART)													
115		S-SYS		AFT		(auto)	C-SYS										
116				TUNING FREQUANCY (HIGHER PART)													POS 54
117				TUNING FREQUANCY (LOWER PART)													
118		S-SYS		AFT		(auto)	C-SYS										
119				TUNING FREQUANCY (HIGHER PART)													POS 55
11A				TUNING FREQUANCY (LOWER PART)													
11B		S-SYS		AFT		(auto)	C-SYS										
11C				TUNING FREQUANCY (HIGHER PART)													POS 56
11D				TUNING FREQUANCY (LOWER PART)													
11E		S-SYS		AFT		(auto)	C-SYS										
11F				TUNING FREQUANCY (HIGHER PART)													POS 57
120				TUNING FREQUANCY (LOWER PART)													
121		S-SYS		AFT		(auto)	C-SYS										
122				TUNING FREQUANCY (HIGHER PART)													POS 58
123				TUNING FREQUANCY (LOWER PART)													
124		S-SYS		AFT		(auto)	C-SYS										
125				TUNING FREQUANCY (HIGHER PART)													POS 59
126				TUNING FREQUANCY (LOWER PART)													
127		S-SYS		AFT		(auto)	C-SYS										
128				TUNING FREQUANCY (HIGHER PART)													POS 60
129				TUNING FREQUANCY (LOWER PART)													
12A		S-SYS		AFT		(auto)	C-SYS										
12B				TUNING FREQUANCY (HIGHER PART)													POS 61
12C				TUNING FREQUANCY (LOWER PART)													
12D		S-SYS		AFT		(auto)	C-SYS										
12E				TUNING FREQUANCY (HIGHER PART)													POS 62
12F				TUNING FREQUANCY (LOWER PART)													
130		S-SYS		AFT		(auto)	C-SYS										
131				TUNING FREQUANCY (HIGHER PART)													POS 63
132				TUNING FREQUANCY (LOWER PART)													
133		S-SYS		AFT		(auto)	C-SYS										
134				TUNING FREQUANCY (HIGHER PART)													POS 64
135				TUNING FREQUANCY (LOWER PART)													
136		S-SYS		AFT		(auto)	C-SYS										
137				TUNING FREQUANCY (HIGHER PART)													POS 65
138				TUNING FREQUANCY (LOWER PART)													
139		S-SYS		AFT		(auto)	C-SYS										
13A				TUNING FREQUANCY (HIGHER PART)													POS 66
13B				TUNING FREQUANCY (LOWER PART)													
13C		S-SYS		AFT		(auto)	C-SYS										
13D				TUNING FREQUANCY (HIGHER PART)													POS 67
13E				TUNING FREQUANCY (LOWER PART)													
13F		S-SYS		AFT		(auto)	C-SYS										
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
140				TUNING FREQUANCY (HIGHER PART)													POS 68
141				TUNING FREQUANCY (LOWER PART)													
142		S-SYS		AFT		(auto)	C-SYS										
143				TUNING FREQUANCY (HIGHER PART)													POS 69
144				TUNING FREQUANCY (LOWER PART)													
145		S-SYS		AFT		(auto)	C-SYS										
146				TUNING FREQUANCY (HIGHER PART)													POS 70
147				TUNING FREQUANCY (LOWER PART)													
148		S-SYS		AFT		(auto)	C-SYS										
149				TUNING FREQUANCY (HIGHER PART)													POS 71
14A				TUNING FREQUANCY (LOWER PART)													
14B		S-SYS		AFT		(auto)	C-SYS										
14C				TUNING FREQUANCY (HIGHER PART)													POS 72
14D				TUNING FREQUANCY (LOWER PART)													
14E		S-SYS		AFT		(auto)	C-SYS										
14F				TUNING FREQUANCY (HIGHER PART)													POS 73
150				TUNING FREQUANCY (LOWER PART)													
151		S-SYS		AFT		(auto)	C-SYS										
152				TUNING FREQUANCY (HIGHER PART)													POS 74
153				TUNING FREQUANCY (LOWER PART)													
154		S-SYS		AFT		(auto)	C-SYS										
155				TUNING FREQUANCY (HIGHER PART)													POS 75
156				TUNING FREQUANCY (LOWER PART)													
157		S-SYS		AFT		(auto)	C-SYS										
158				TUNING FREQUANCY (HIGHER PART)													POS 76
159				TUNING FREQUANCY (LOWER PART)													
15A		S-SYS		AFT		(auto)	C-SYS										
15B				TUNING FREQUANCY (HIGHER PART)													POS 77
15C				TUNING FREQUANCY (LOWER PART)													
15D		S-SYS		AFT		(auto)	C-SYS										
15E				TUNING FREQUANCY (HIGHER PART)													POS 78
15F				TUNING FREQUANCY (LOWER PART)													
160		S-SYS		AFT		(auto)	C-SYS										
161				TUNING FREQUANCY (HIGHER PART)													POS 79
162				TUNING FREQUANCY (LOWER PART)													
163		S-SYS		AFT		(auto)	C-SYS										
164				TUNING FREQUANCY (HIGHER PART)													POS 80
165				TUNING FREQUANCY (LOWER PART)													
166		S-SYS		AFT		(auto)	C-SYS										
167				TUNING FREQUANCY (HIGHER PART)													POS 81
168				TUNING FREQUANCY (LOWER PART)													
169		S-SYS		AFT		(auto)	C-SYS										
16A				TUNING FREQUANCY (HIGHER PART)													POS 82
16B				TUNING FREQUANCY (LOWER PART)													
16C		S-SYS		AFT		(auto)	C-SYS										
16D				TUNING FREQUANCY (HIGHER PART)													POS 83
16E				TUNING FREQUANCY (LOWER PART)													
16F		S-SYS		AFT		(auto)	C-SYS										
170				TUNING FREQUANCY (HIGHER PART)													POS 84
171				TUNING FREQUANCY (LOWER PART)													
172		S-SYS		AFT		(auto)	C-SYS										
173				TUNING FREQUANCY (HIGHER PART)													POS 85
174				TUNING FREQUANCY (LOWER PART)													
175		S-SYS		AFT		(auto)	C-SYS										
176				TUNING FREQUANCY (HIGHER PART)													POS 86
177				TUNING FREQUANCY (LOWER PART)													
178		S-SYS		AFT		(auto)	C-SYS										
179				TUNING FREQUANCY (HIGHER PART)													POS 87
17A				TUNING FREQUANCY (LOWER PART)													
17B		S-SYS		AFT		(auto)	C-SYS										
17C				TUNING FREQUANCY (HIGHER PART)													POS 88
17D				TUNING FREQUANCY (LOWER PART)													
17E		S-SYS		AFT		(auto)	C-SYS										
17F				TUNING FREQUANCY (HIGHER PART)													POS 89
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
180	TUNING FREQUANCY (LOWER PART)																POS 89
181	S-SYS			AFT		(auto)		C-SYS									
182	TUNING FREQUANCY (HIGHER PART)																POS 90
183	TUNING FREQUANCY (LOWER PART)																
184	S-SYS			AFT		(auto)		C-SYS									
185	TUNING FREQUANCY (HIGHER PART)																POS 91
186	TUNING FREQUANCY (LOWER PART)																
187	S-SYS			AFT		(auto)		C-SYS									
188	TUNING FREQUANCY (HIGHER PART)																POS 92
189	TUNING FREQUANCY (LOWER PART)																
18A	S-SYS			AFT		(auto)		C-SYS									
18B	TUNING FREQUANCY (HIGHER PART)																POS 93
18C	TUNING FREQUANCY (LOWER PART)																
18D	S-SYS			AFT		(auto)		C-SYS									
18E	TUNING FREQUANCY (HIGHER PART)																POS 94
18F	TUNING FREQUANCY (LOWER PART)																
190	S-SYS			AFT		(auto)		C-SYS									
191	TUNING FREQUANCY (HIGHER PART)																POS 95
192	TUNING FREQUANCY (LOWER PART)																
193	S-SYS			AFT		(auto)		C-SYS									
194	TUNING FREQUANCY (HIGHER PART)																POS 96
195	TUNING FREQUANCY (LOWER PART)																
196	S-SYS			AFT		(auto)		C-SYS									
197	TUNING FREQUANCY (HIGHER PART)																POS 97
198	TUNING FREQUANCY (LOWER PART)																
199	S-SYS			AFT		(auto)		C-SYS									
19A	TUNING FREQUANCY (HIGHER PART)																POS 98
19B	TUNING FREQUANCY (LOWER PART)																
19C	S-SYS			AFT		(auto)		C-SYS									
19D	TUNING FREQUANCY (HIGHER PART)																POS 99
19E	TUNING FREQUANCY (LOWER PART)																
19F	S-SYS			AFT		(auto)		C-SYS									
1A0																	AV1
1A1																	
1A2						(auto)		C-SYS									
1A3																	AV2
1A4																	
1A5						(auto)		C-SYS									
1A6																	
1A7																	
1A8																	
1A9																	
1AA																	
1AB																	
1AC																	
1AD																	
1AE																	
1AF																	
1B0																	
1B1																	
1B2																	
1B3																	
1B4																	
1B5																	
1B6																	
1B7																	
1B8																	
1B9																	
1BA																	
1BB																	
1BC																	
1BD																	
1BE																	
1BF																	
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
1C0																	
1C1																	
1C2																	
1C3																	
1C4																	
1C5																	
1C6																	
1C7																	
1C8																	
1C9																	
1CA																	
1CB																	
1CC																	
1CD																	
1CE																	
1CF																	
1D0																	
1D1																	
1D2																	
1D3																	
1D4																	
1D5																	
1D6																	
1D7																	
1D8																	
1D9																	
1DA																	
1DB																	
1DC																	
1DD																	
1DE																	
1DF																	
1E0																	
1E1																	
1E2																	
1E3																	
1E4																	
1E5																	
1E6																	
1E7																	
1E8																	
1E9																	
1EA																	
1EB																	
1EC																	
1ED																	
1EE																	
1EF																	
1F0																	
1F1																	
1F2																	
1F3																	
1F4																	
1F5																	
1F6																	
1F7																	
1F8																	
1F9																	
1FA																	
1FB																	
1FC																	
1FD																	
1FE																	
1FF																	
MODEL									MODEL								
LETTER NO.									LETTER NO.								

GA1 HOTEL MODE APPLICATION

How to enable/disable the "Hotel Mode" ?

Ans: a) Press the R/C (FUNCTION) {1} key until language selection appear, within five second press the (one/two digit) {2} key and keep pressing it for five second, then you can see the hotel mode with four digits password.

b) Key in the four digits password starting with number "1", "3", "7", "9", then the hotel mode will be enable, you can switch on/off the hotel mode by using R/C (volume up/down) {3} key.



#1 Ch 1 is your selected channel for hotel mode.

* We recommend
  Before set the hotel mode, it is better to choose ch 1 & set s-vol level Up to 75% full scale.
  After set hotel mode, starting channel will be always ch 1 & maximum sound level out will be set the half of full scale.
* If you set hotel mode in AV, starting channel will be the last ch which you received before power off (same as normal operation)

CONDITION:

When using hotel mode, user can control "contrast", "brightness", "sharpness" and "tint" function.
But after power off, it will return to the initial setting.
You can't use:--
Preset mode
Fine tuning
Skip mode
System selection
The others function is allowed to be used.

TROUBLE SHOOTING FLOWCHART

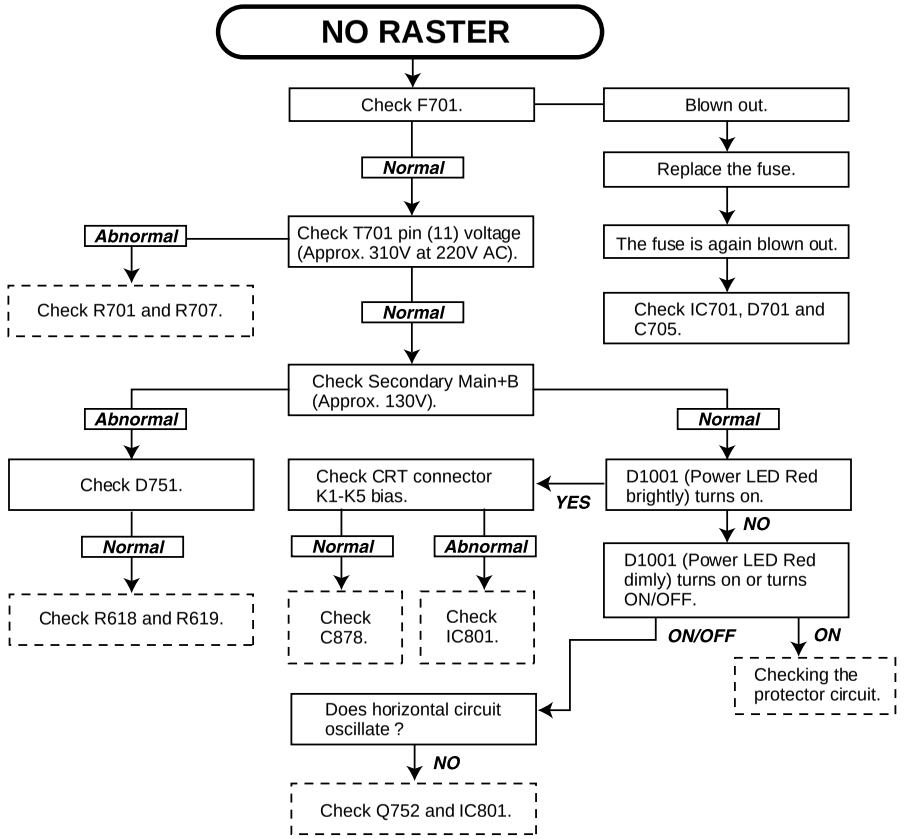

TROUBLE SHOOTING FLOWCHART (Continued)

CIRCUITS TO BE CHECKED:
- Tuner.
- PIF.
- Automatic Gain Control.
- (5V), (32V) Power Source.

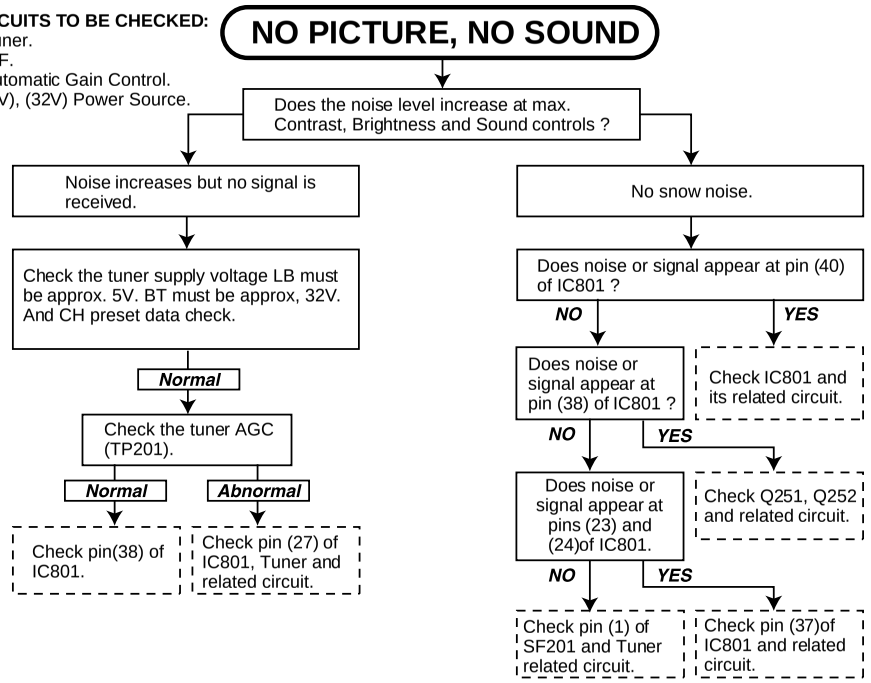
NO PICTURE, NO SOUND
Does the noise level increase at max. Contrast, Brightness and Sound controls ?
Noise increases but no signal is received.
No snow noise.
Check the tuner supply voltage LB must be approx. 5V. BT must be approx, 32V. And CH preset data check.
Does noise or signal appear at pin (40) of IC801 ?
NO
YES
Normal
Does noise or signal appear at pin (38) of IC801 ?
Check IC801 and its related circuit.
Check the tuner AGC (TP201).
NO
YES
Normal
Abnormal
Does noise or signal appear at pins (23) and (24)of IC801.
Check Q251, Q252 and related circuit.
Check pin(38) of IC801.
Check pin (27) of IC801, Tuner and related circuit.
NO
YES
Check pin (1) of SF201 and Tuner related circuit.
Check pin (37)of IC801 and related circuit.

CIRCUITS TO BE CHECKED:
- Sound system pins (28), (29) and (44) of IC801.
- Sound Detector Circuit.
- Sound Switch and Att. Control.
- Audio Output Circuit.

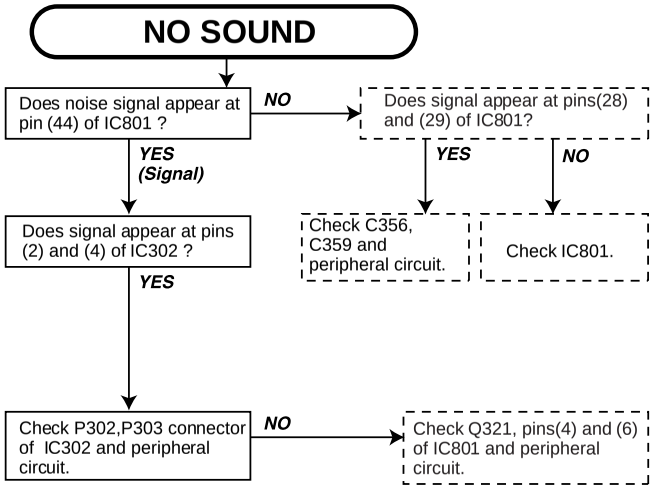
NO SOUND
Does noise signal appear at pin (44) of IC801 ?
NO
Does signal appear at pins(28) and (29) of IC801?
YES (Signal)
YES
NO
Does signal appear at pins (2) and (4) of IC302 ?
Check C356, C359 and peripheral circuit.
Check IC801.
YES
Check P302,P303 connector of IC302 and peripheral circuit.
NO
Check Q321, pins(4) and (6) of IC801 and peripheral circuit.

TROUBLE SHOOTING FLOWCHART (Continued)

CIRCUIT TO BE CHECKED:
- Sync. Separator Circuit.

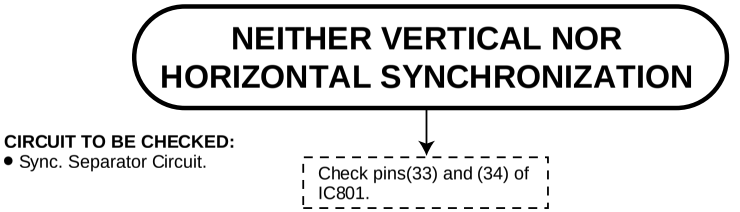

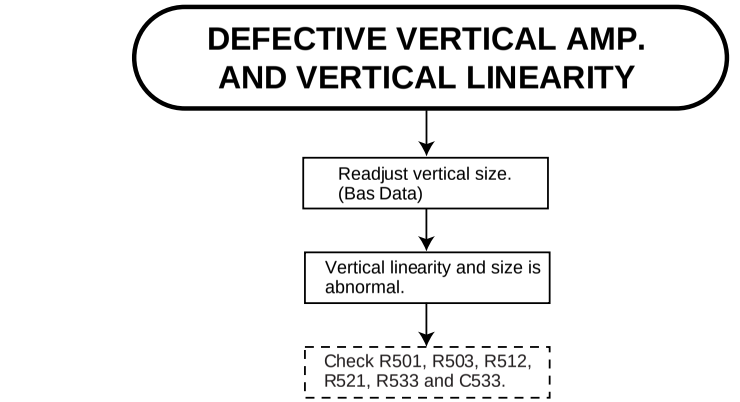
DEFECTIVE VERTICAL AMP. AND VERTICAL LINEARITY
Readjust vertical size. (Bas Data)
Vertical linearity and size is abnormal.
Check R501, R503, R512, R521, R533 and C533.

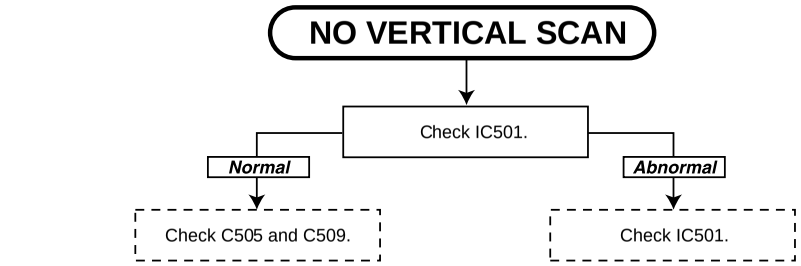

TROUBLE SHOOTING FLOWCHART (Continued)

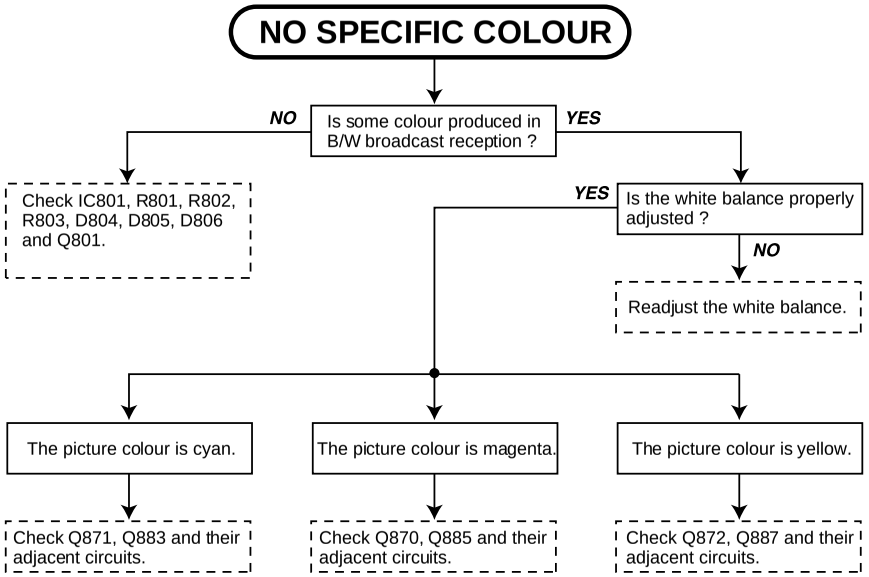
NO SPECIFIC COLOUR
Is some colour produced in B/W broadcast reception ?
NO
YES
Check IC801, R801, R802, R803, D804, D805, D806 and Q801.
YES
Is the white balance properly adjusted ?
NO
Readjust the white balance.
The picture colour is cyan.
The picture colour is magenta.
The picture colour is yellow.
Check Q871, Q883 and their adjacent circuits.
Check Q870, Q885 and their adjacent circuits.
Check Q872, Q887 and their adjacent circuits.

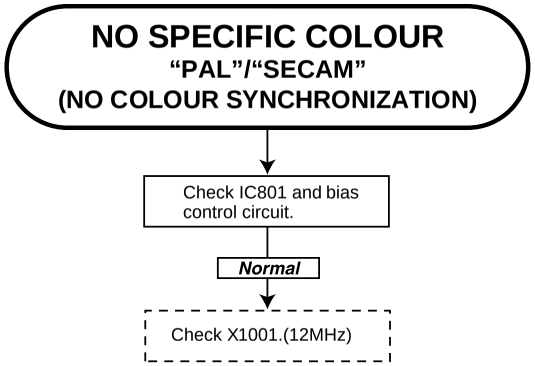

CHASSIS LAYOUT

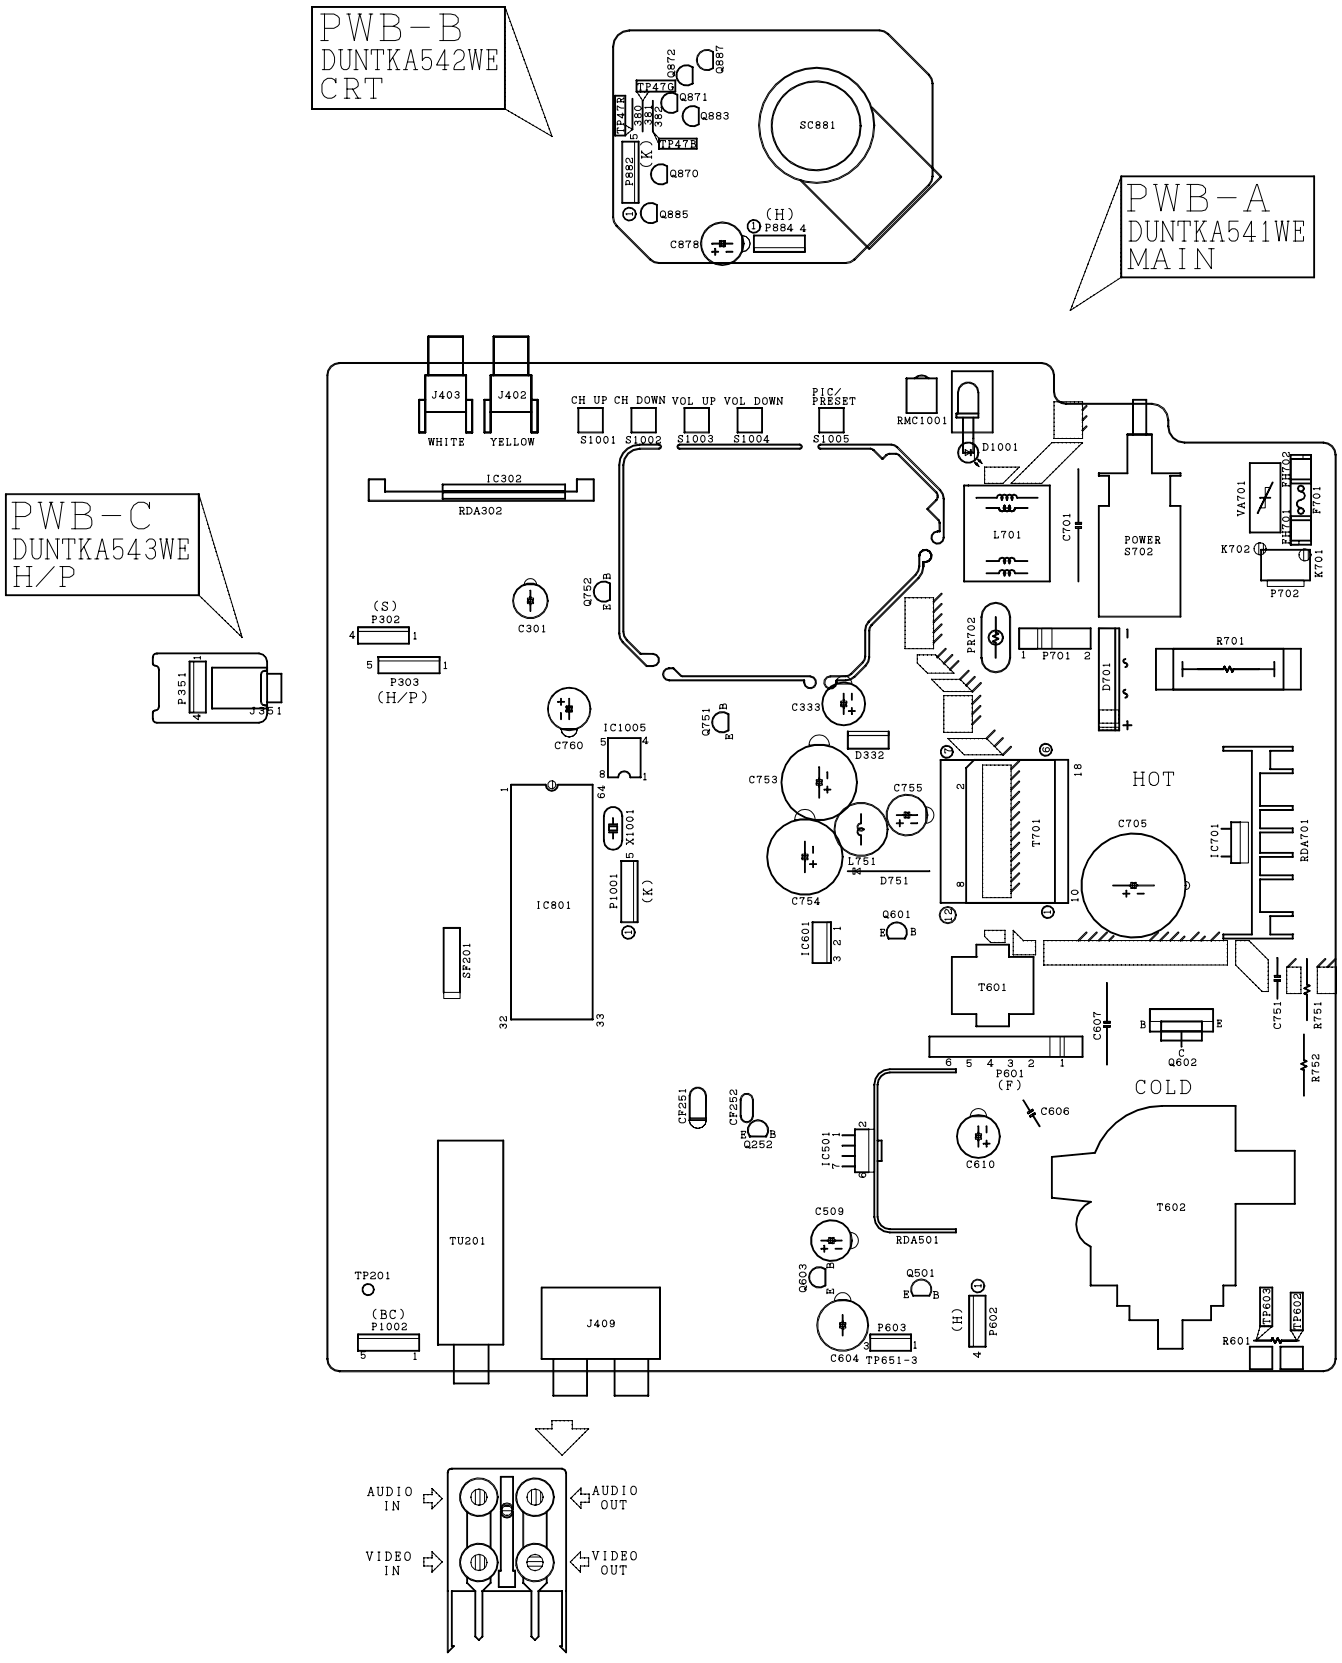

BLOCK DIAGRAM:MAIN UNIT

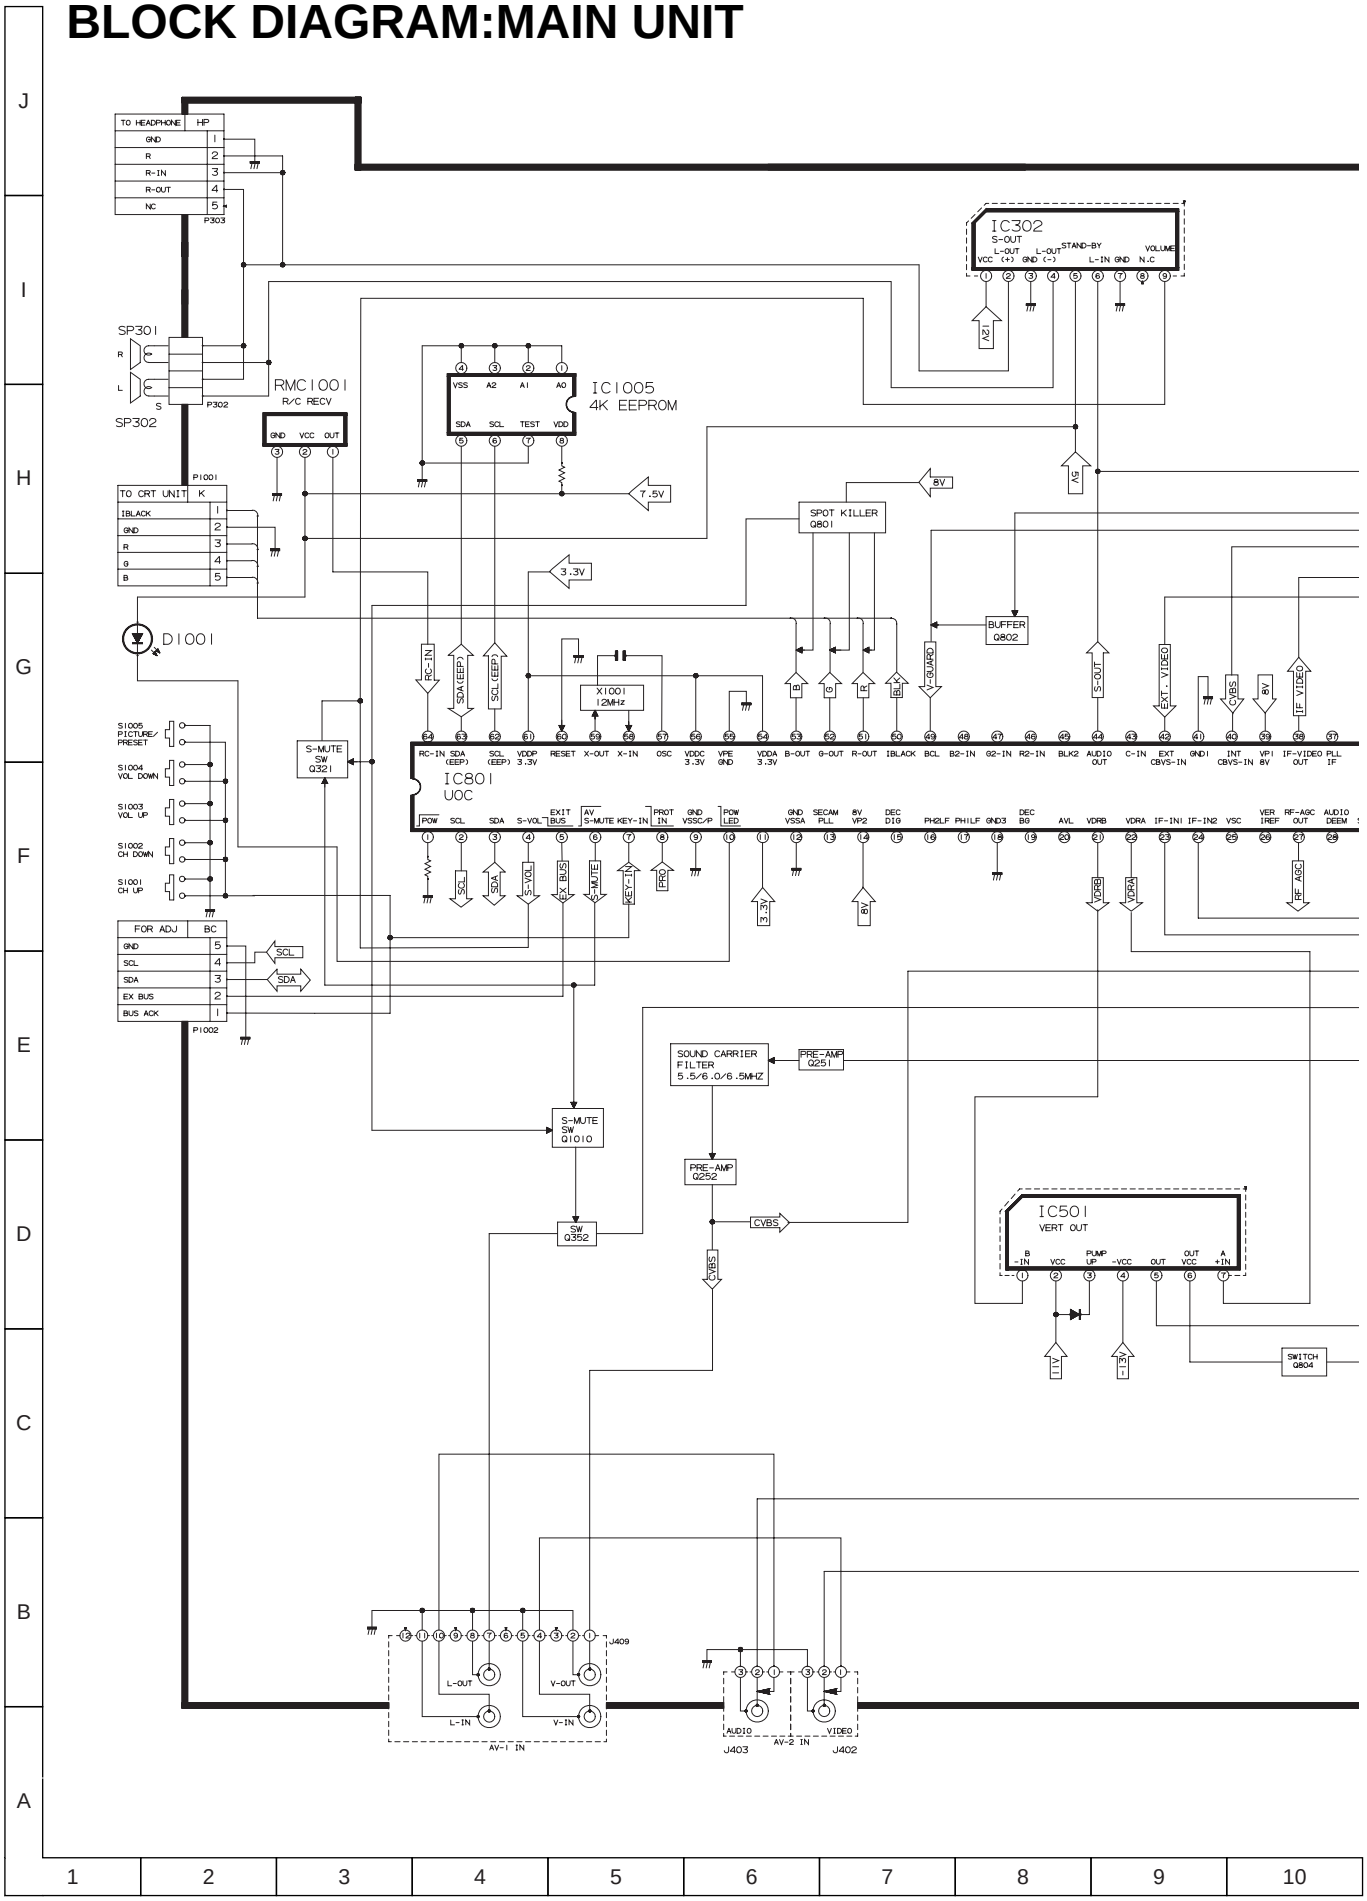

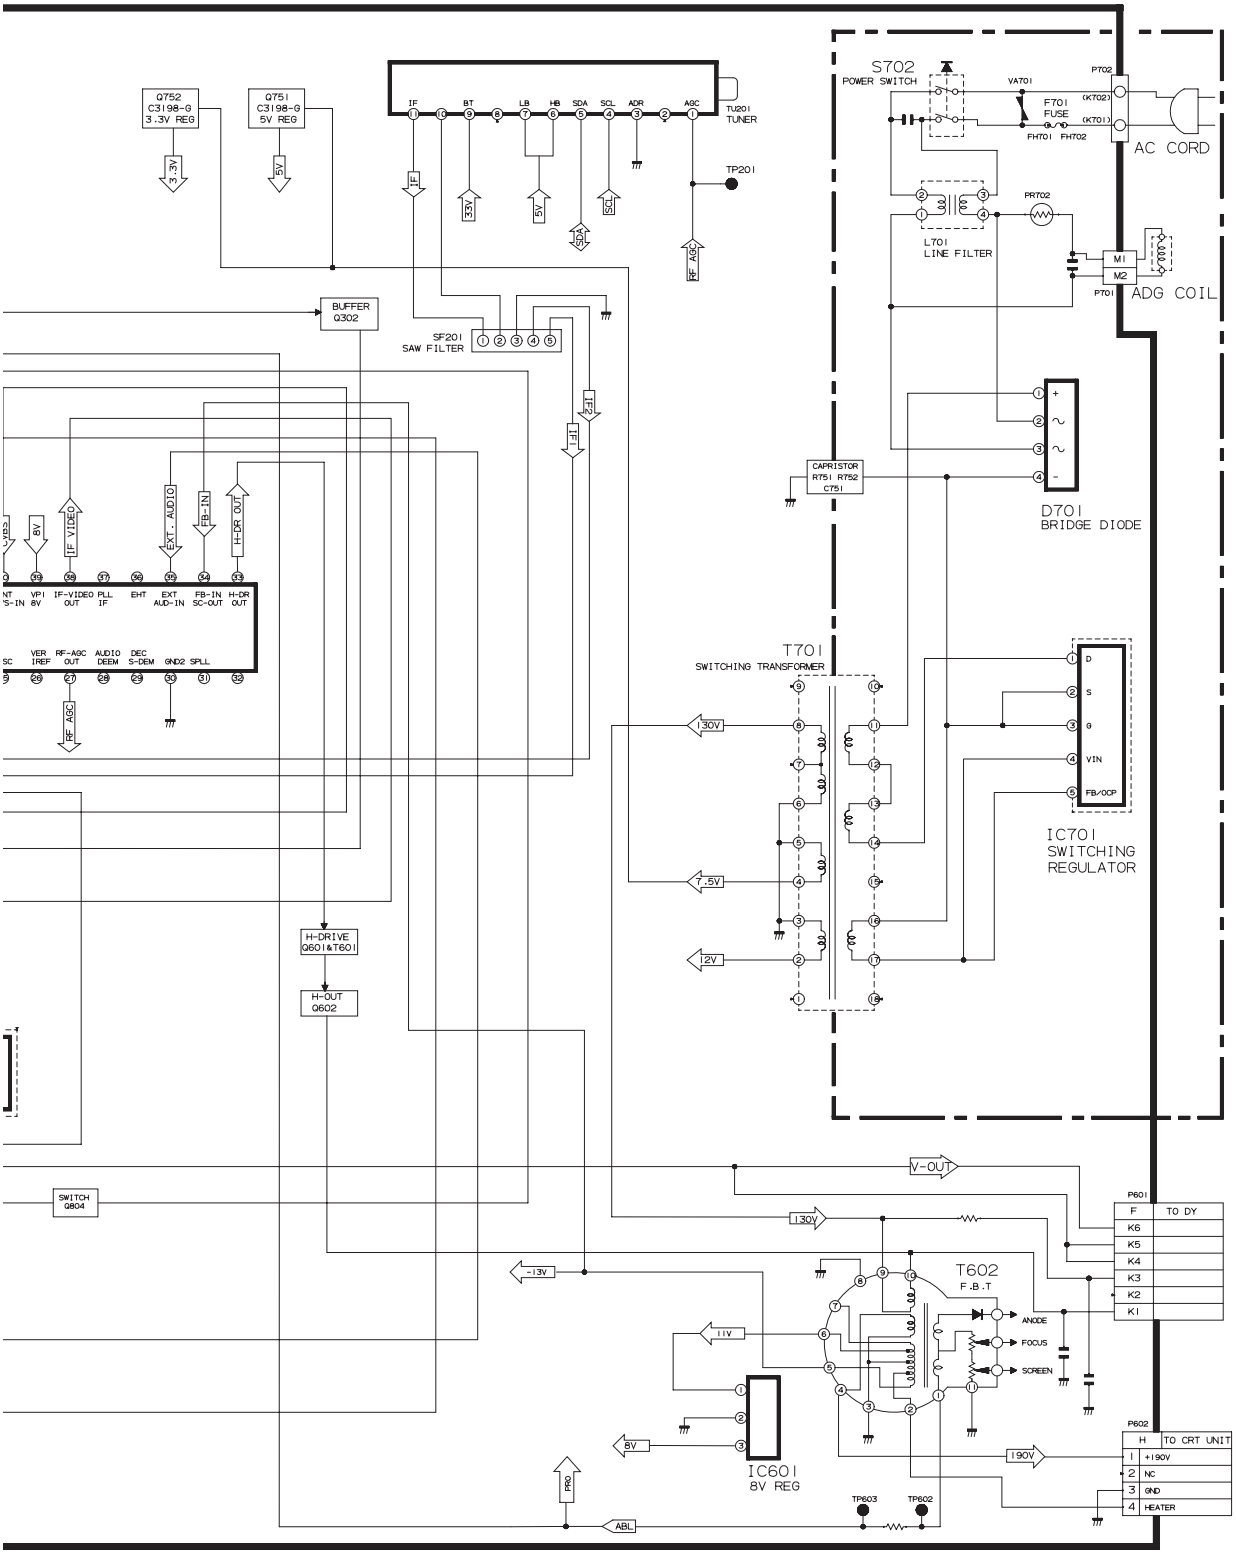

10	11	12	13	14	15	16	17	18	19

BLOCK DIAGRAM:CRT UNIT

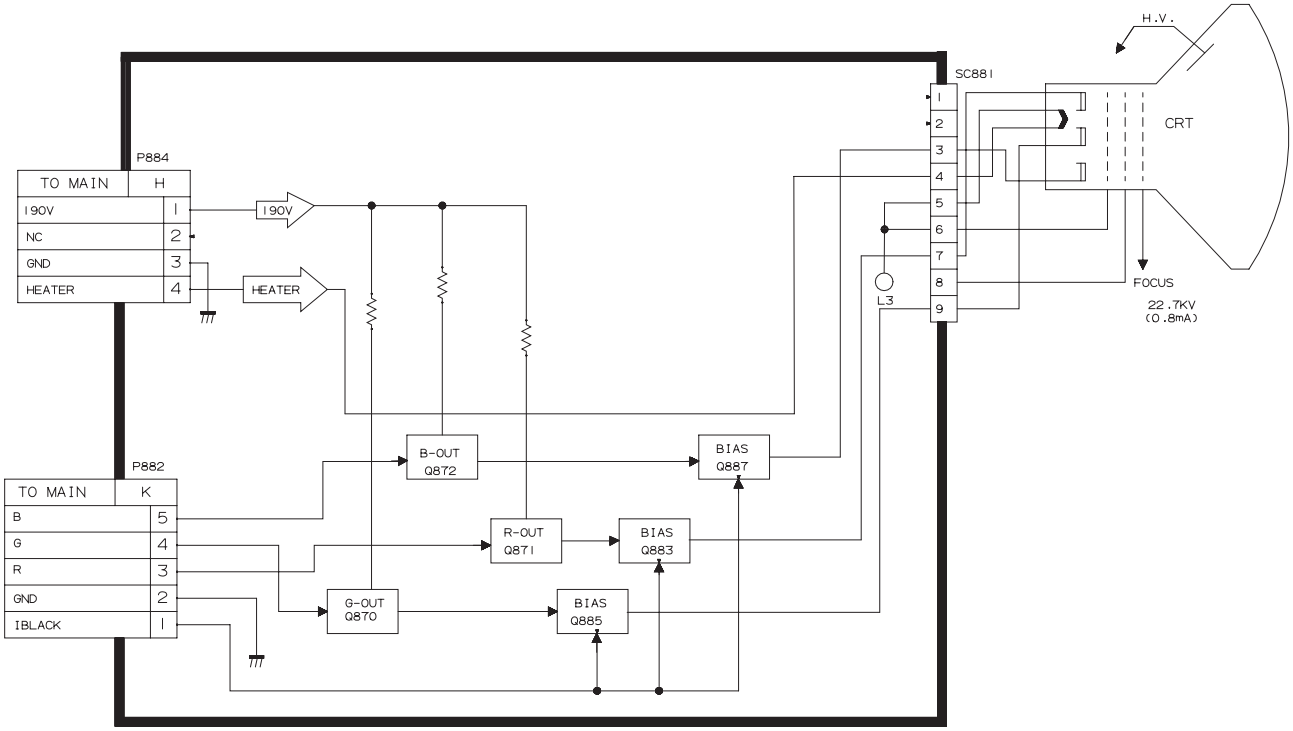

BLOCK DIAGRAM:HEADPHONE UNIT

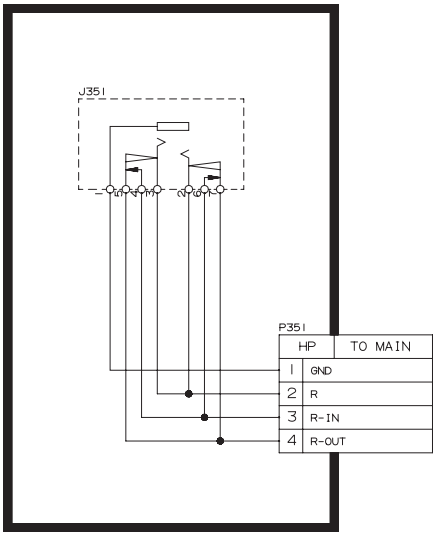

SOLID STATE DEVICE BASE DIAGRAM

TOP VIEW



CAT24W04
(BR24C04)
(M24C04W)



A1530AR
C3928AR



C2735

IX3368CE

SIDE VIEW

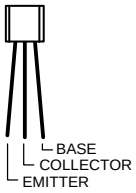

TX0110BM
TX0124BM

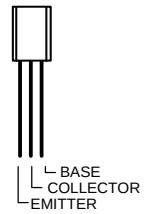

2SC3207
2PC1815

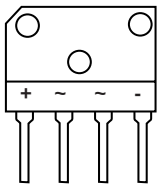

DX0111PE



2SD2586

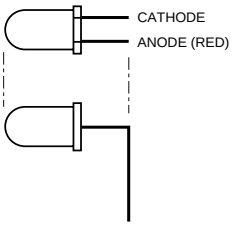

PX0013PE



KA7808A

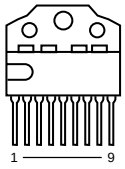

AN7523

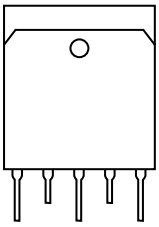

STRG5653

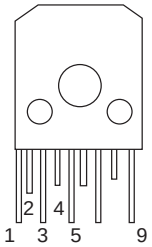

AN5522

DESCRIPTION OF SCHEMATIC DIAGRAM

SAFETY NOTES:

1. *DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.*
2. *SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.*

IMPORTANT SAFETY NOTICE:

PARTS MARKED WITH "⚠ "( ) ARE IMPOTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

SERVICE PRECAUTION:

THE AREA ENCLOSED BY THIS LINE (—– - —–) IS DIRECTLY CONNECTED WITH AC MAINS VOLTAGE.
WHEN SERVICING THE AREA, CONNECT AN ISOLATING TRANSFORMER BETWEEN TV RECEIVER AND AC LINE TO ELIMINATE HAZARD OF ELECTRIC SHOCK.

NOTES:

1. *The unit of resistance "ohm" is omitted. (K = 1000 ohms, M = Mega ohm).*
2. *All resistors are 1/10 watt, unless otherwise noted.*
3. *All capacitors are µF, unless otherwise noted. (P = µµF).*

VOLTAGE MEASUREMENT CONDITIONS:

1. *Voltages in parenthesis measured with no signal.*
2. *Voltages without parenthesis measured with 3mV B & W or Colour signal.*
3. *All the voltages in each point are measured with VTVM.*

WAVEFORM MEASUREMENT CONDITIONS:

1. *The colour bar generator signal of 2.0V peak applied at of Base Video Buffer Amp. Q252.*
2. *Approximately 4V AGC bias .*

WAVEFORMS

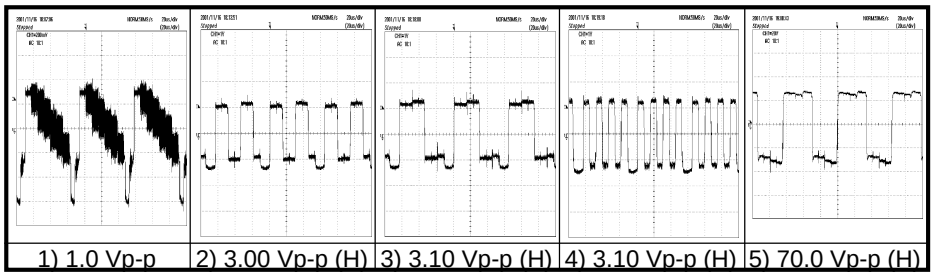

1) 1.0 Vp-p | 2) 3.00 Vp-p (H) | 3) 3.10 Vp-p (H) | 4) 3.10 Vp-p (H) | 5) 70.0 Vp-p (H)

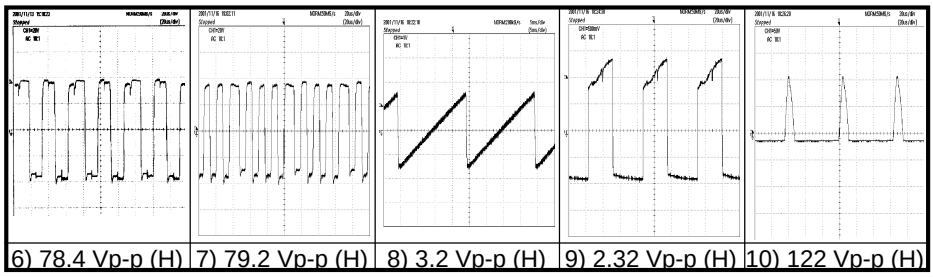

6) 78.4 Vp-p (H) | 7) 79.2 Vp-p (H) | 8) 3.2 Vp-p (H) | 9) 2.32 Vp-p (H) | 10) 122 Vp-p (H)

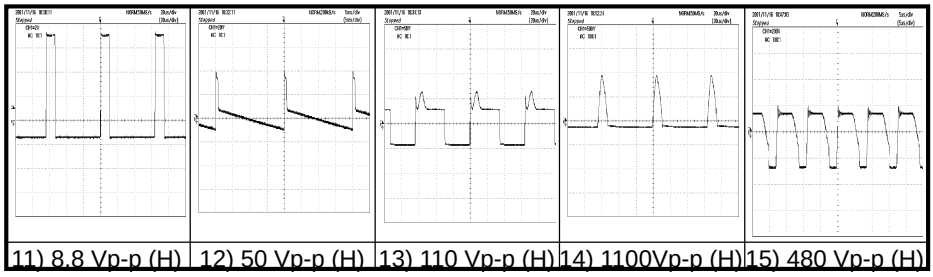

11) 8.8 Vp-p (H) | 12) 50 Vp-p (H) | 13) 110 Vp-p (H) | 14) 1100Vp-p (H) | 15) 480 Vp-p (H)

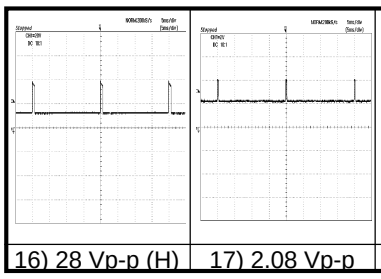

16) 28 Vp-p (H) | 17) 2.08 Vp-p

SCHEMATIC DIAGRAM:CRT UNIT

NOTE: 1.THE UNIT OF RESISTANCE "OHM" IS OMITTED (K=1000 OHMS, M=MEGAOHM).
2.ALL RESISTORS ARE 1/16 WATT.UNLESS OTHERWISE NOTED.
3.UNIT OF ALL CAPACITORS ARE F WITH PREFIX SYMBOL (u, P, ETC).

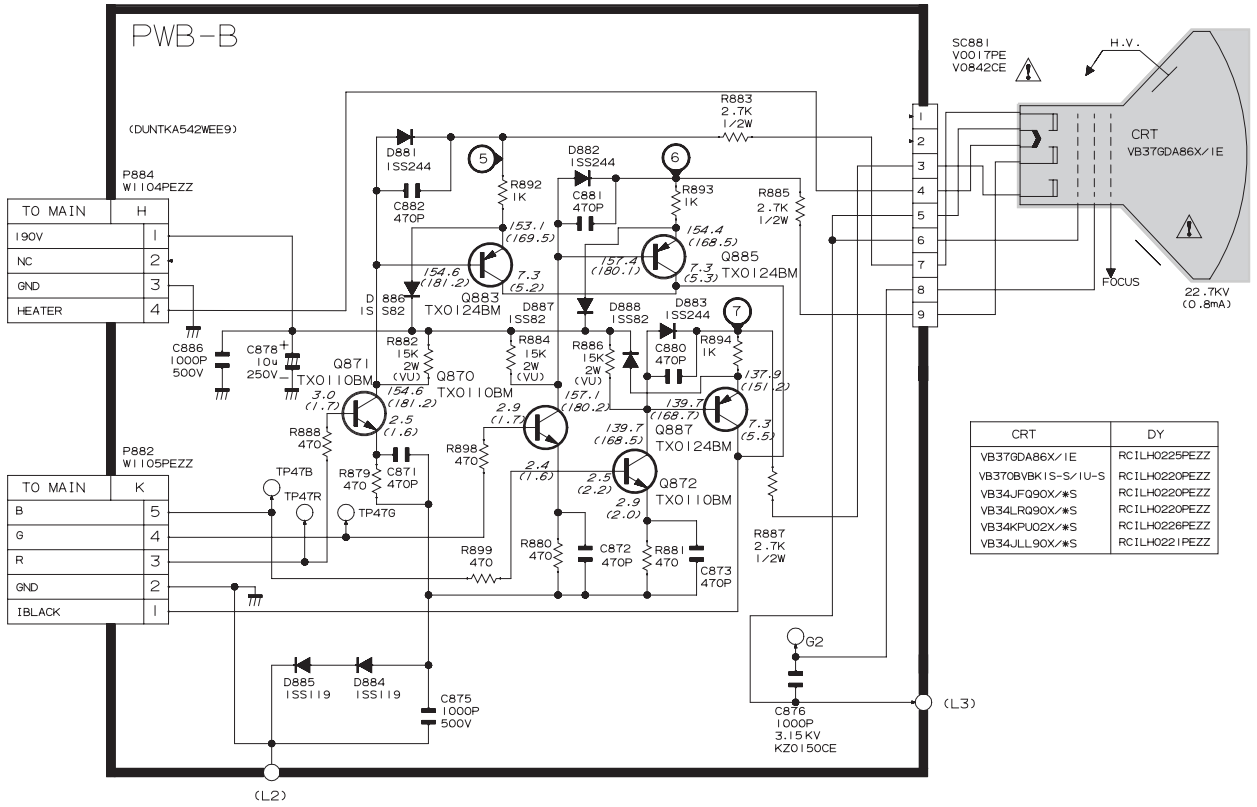

CRT	DY
VB37GDA86X/IE	RCILH0225PEZZ
VB370BVBK1S-S/1U-S	RCILH0220PEZZ
VB34JFQ90X/*S	RCILH0220PEZZ
VB34LRQ90X/*S	RCILH0220PEZZ
VB34KPU02X/*S	RCILH0226PEZZ
VB34JLL90X/*S	RCILH0221PEZZ

SCHEMATIC DIAGRAM:HEADPHONE UNIT

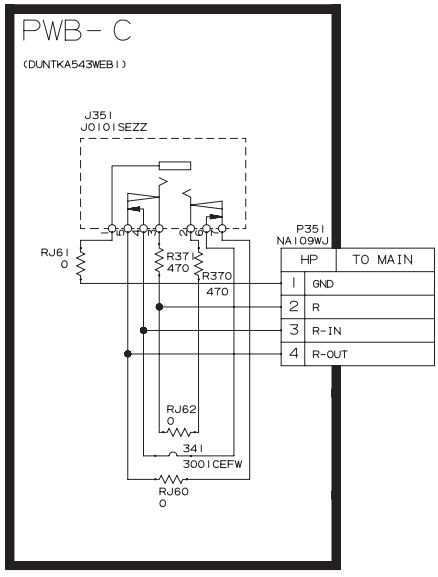

SCHEMATIC DIAGRAM:MAIN UNIT

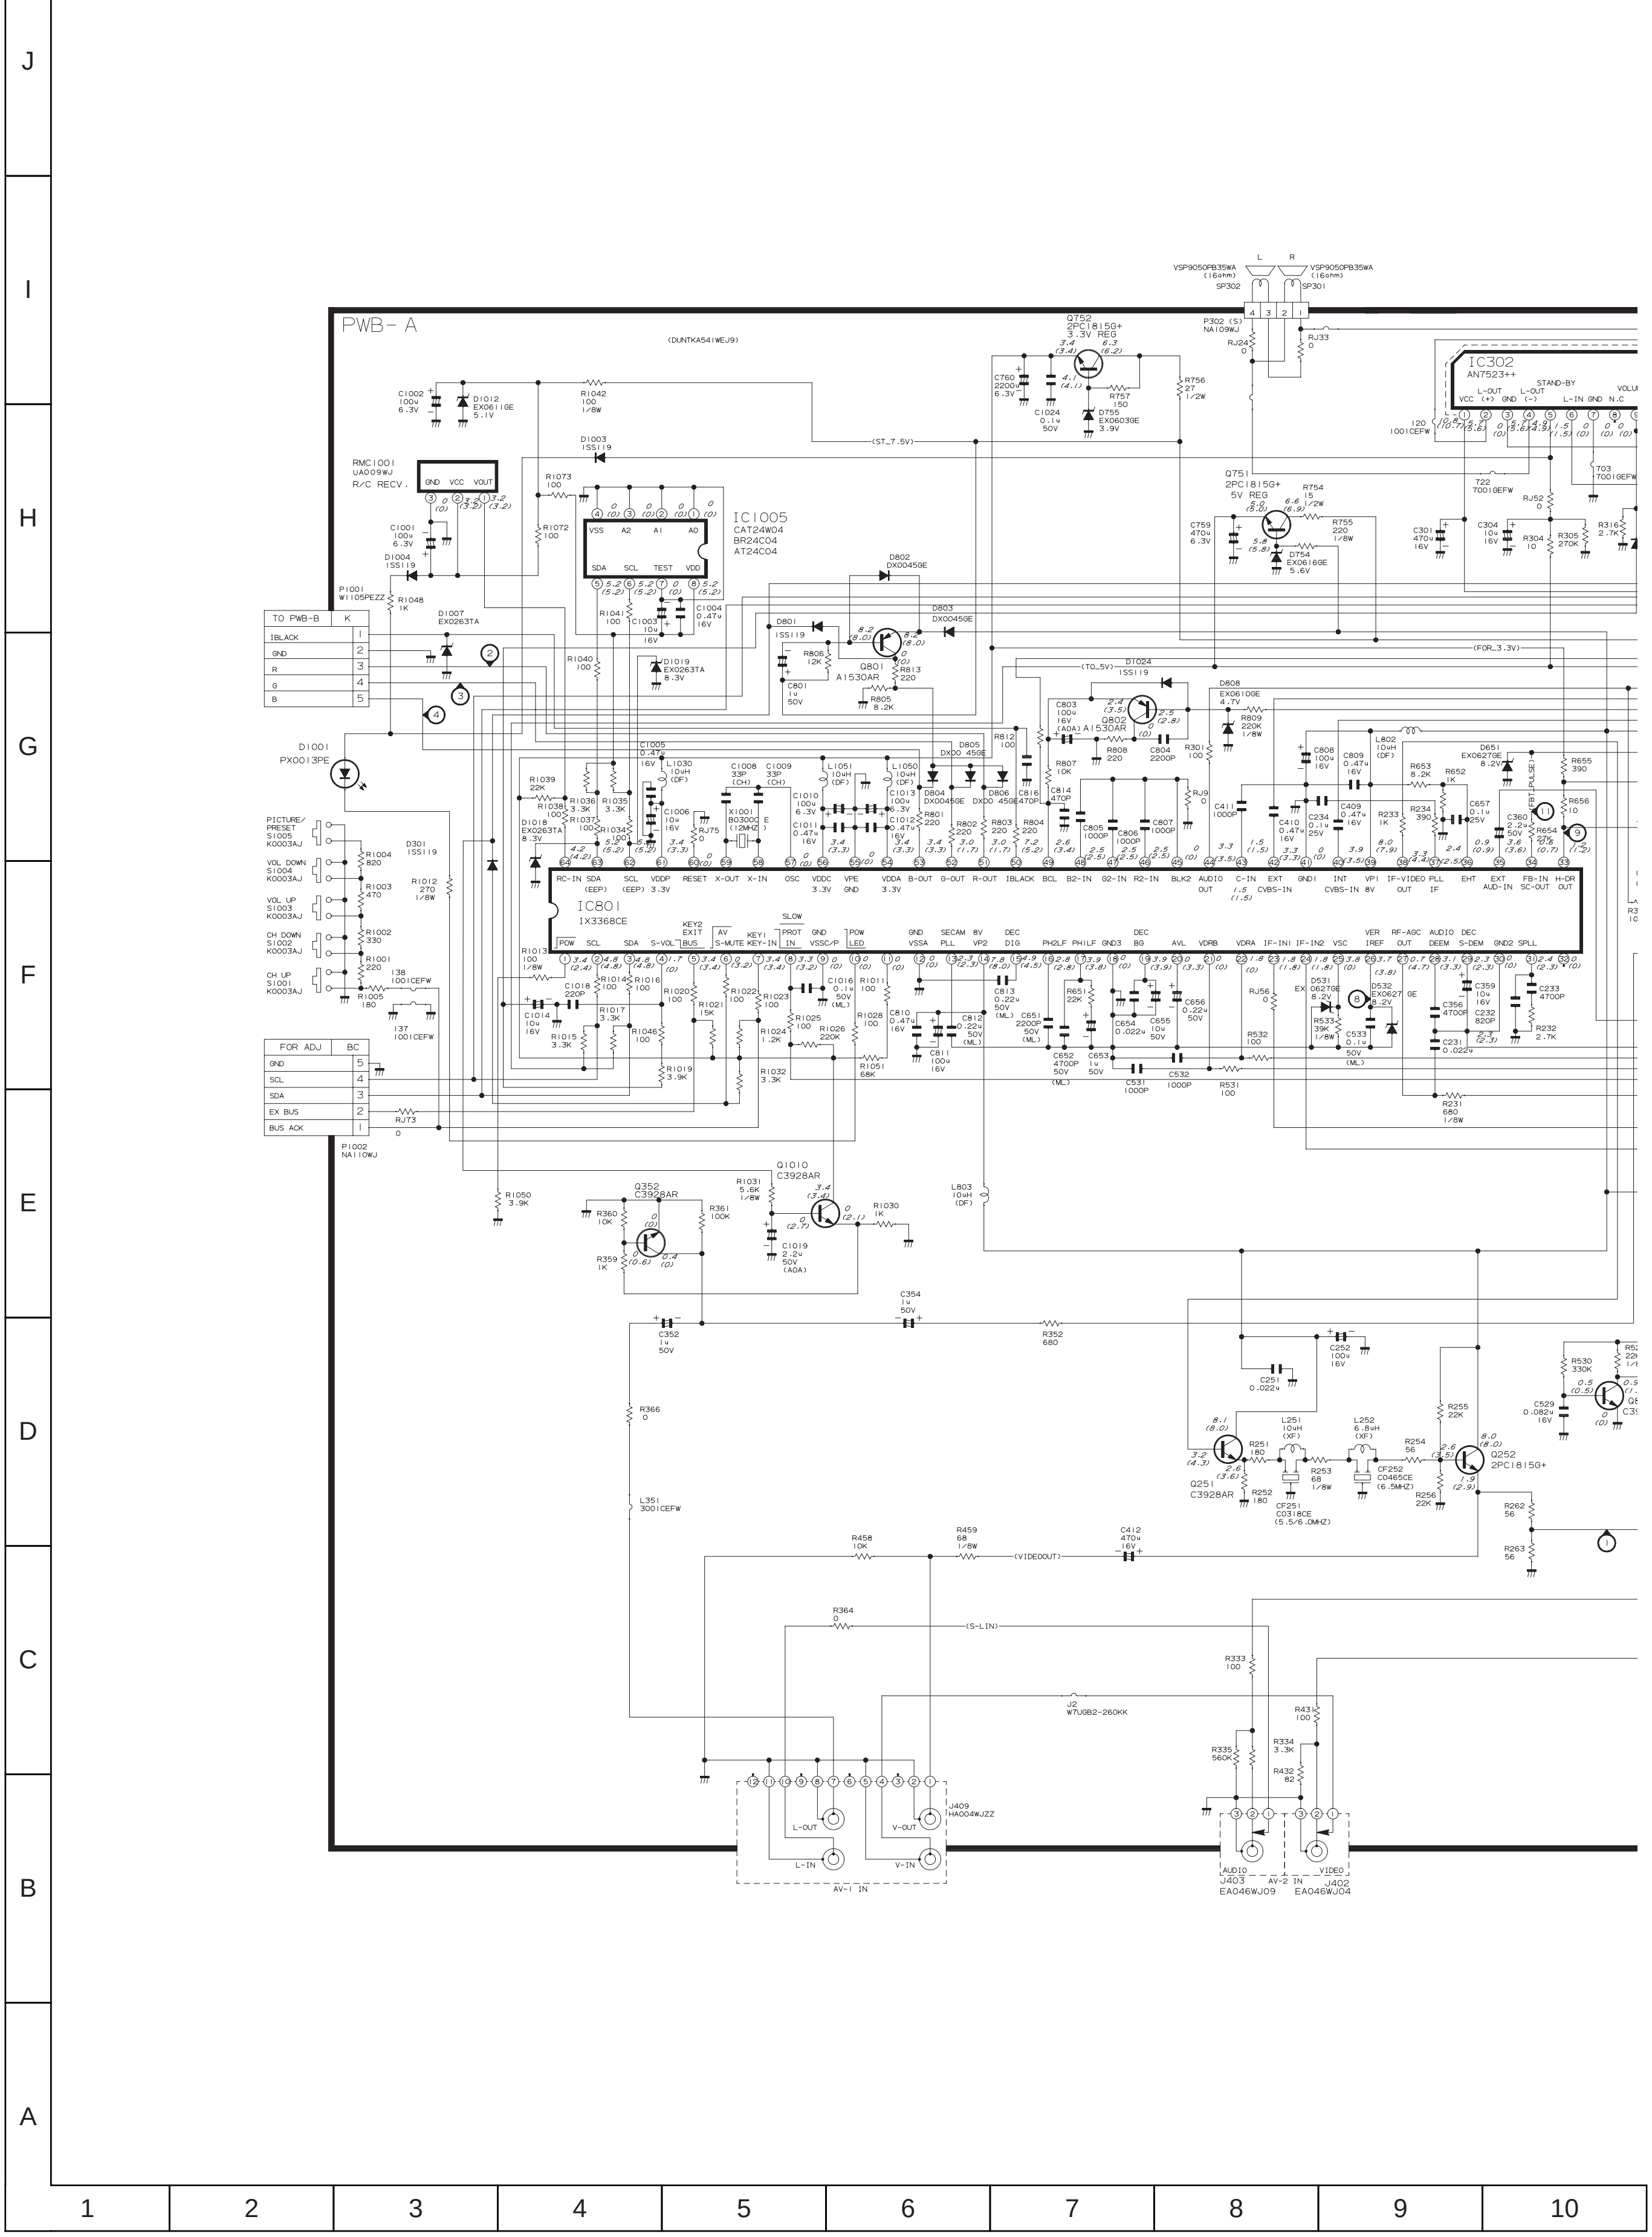
J
I
H
G
F
E
D
C
B
A
1
2
3
4
5
6
7
8
9
10
PWB- A
(DUNTKA541WEJ9)
VSP9050PB35WA (16ohm) SP302
VSP9050PB35WA (16ohm) SP301
P302 (S) NA109WJ
IC302 AN7523++
Q752 2PC1815G+ 3.3V REG
Q751 2PC1815G+ 5V REG
RMC1001 UA009WJ R/C RECV.
IC1005 CAT24W04 BR24C04 AT24C04
IC801 IX3368CE
Q801 A1530AR
Q802 A1530AR
TO PWB-B
IBLACK
GND
R
G
B
D1001 PX0013PE
PICTURE/ PRESET S1005 K0003AJ
VOL DOWN S1004 K0003AJ
VOL UP S1003 K0003AJ
CH DOWN S1002 K0003AJ
CH UP S1001 K0003AJ
FOR ADJ
SCL
SDA
EX BUS
BUS ACK
P1001 W1105PEZZ
P1002 NA110WJ
(ST_7.5V)
(FOR_3.3V)
(TO_5V)
(VIDEOOUT)
(S-LIN)
Q1010 C3928AR
Q352 C3928AR
Q251 C3928AR
Q252 2PC1815G+
X1001 B03000 E (12MHZ)
CF251 C0318CE (5.5/6.0MHZ)
CF252 C0465CE (6.5MHZ)
J2 W7UGB2-260KK
J409 HA004WJZZ
L-OUT
V-OUT
L-IN
V-IN
AV-1 IN
AUDIO
VIDEO
J403 EA046WJ09
AV-2 IN
J402 EA046WJ04

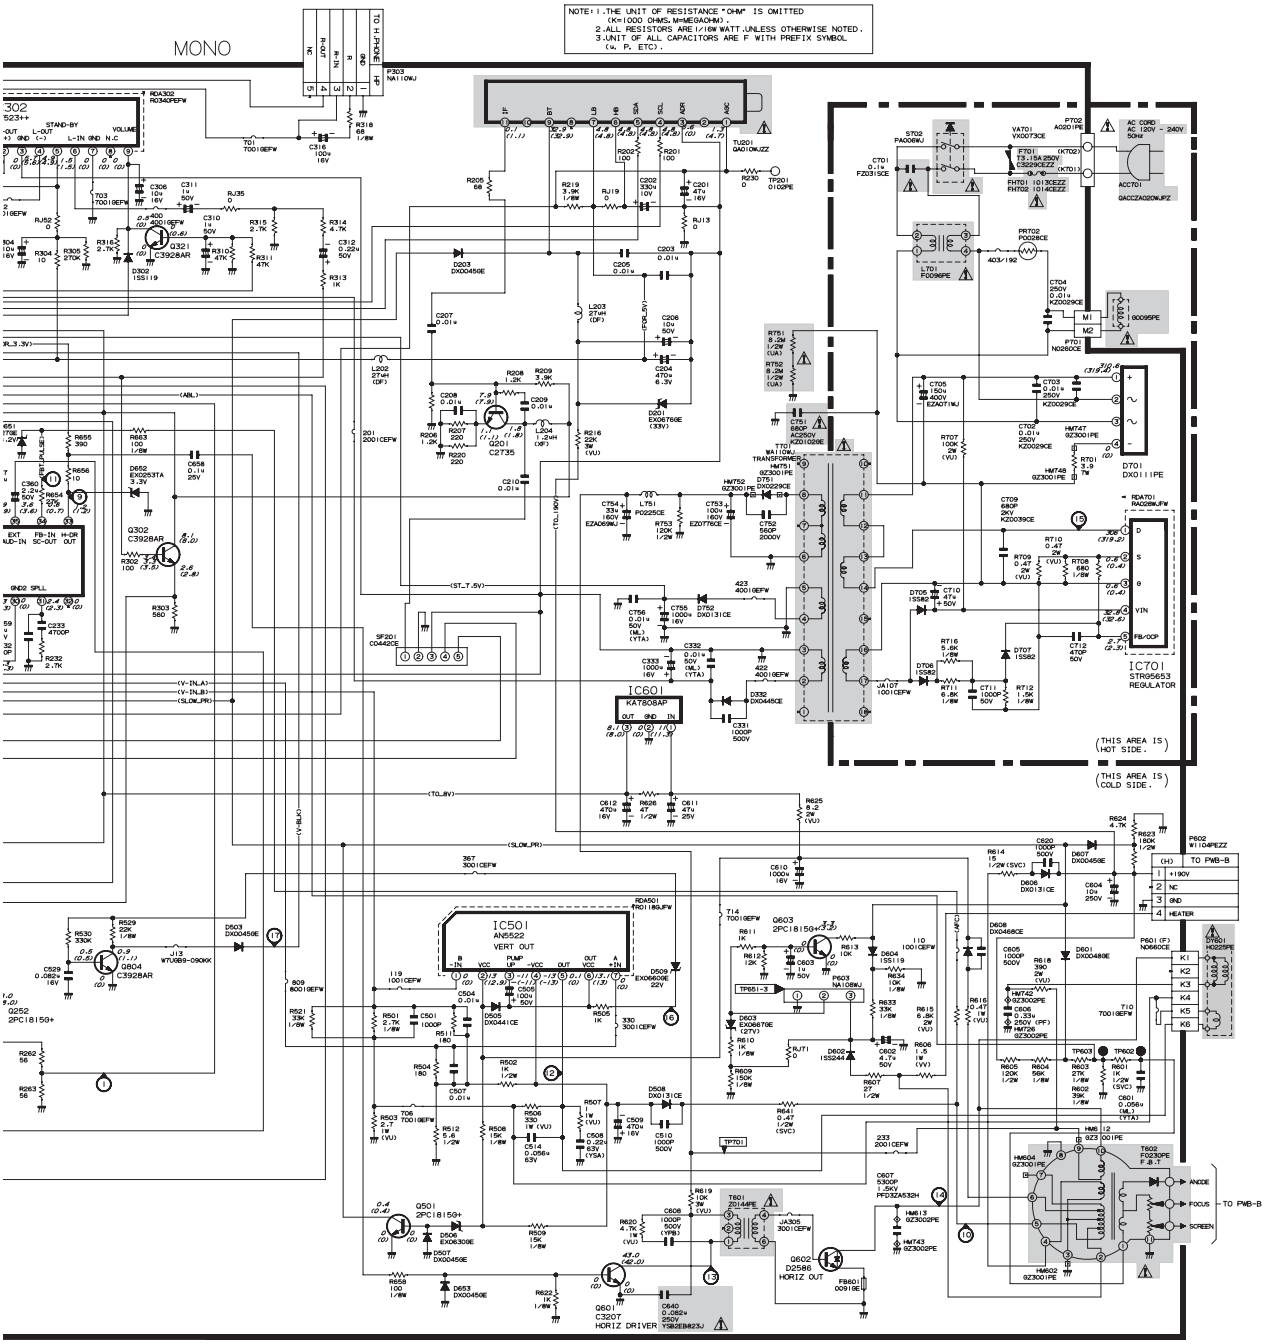

10	11	12	13	14	15	16	17	18	19

PRINTED WIRING BOARD ASSEMBLIES

PWB-A: MAIN UNIT (Wiring Side)

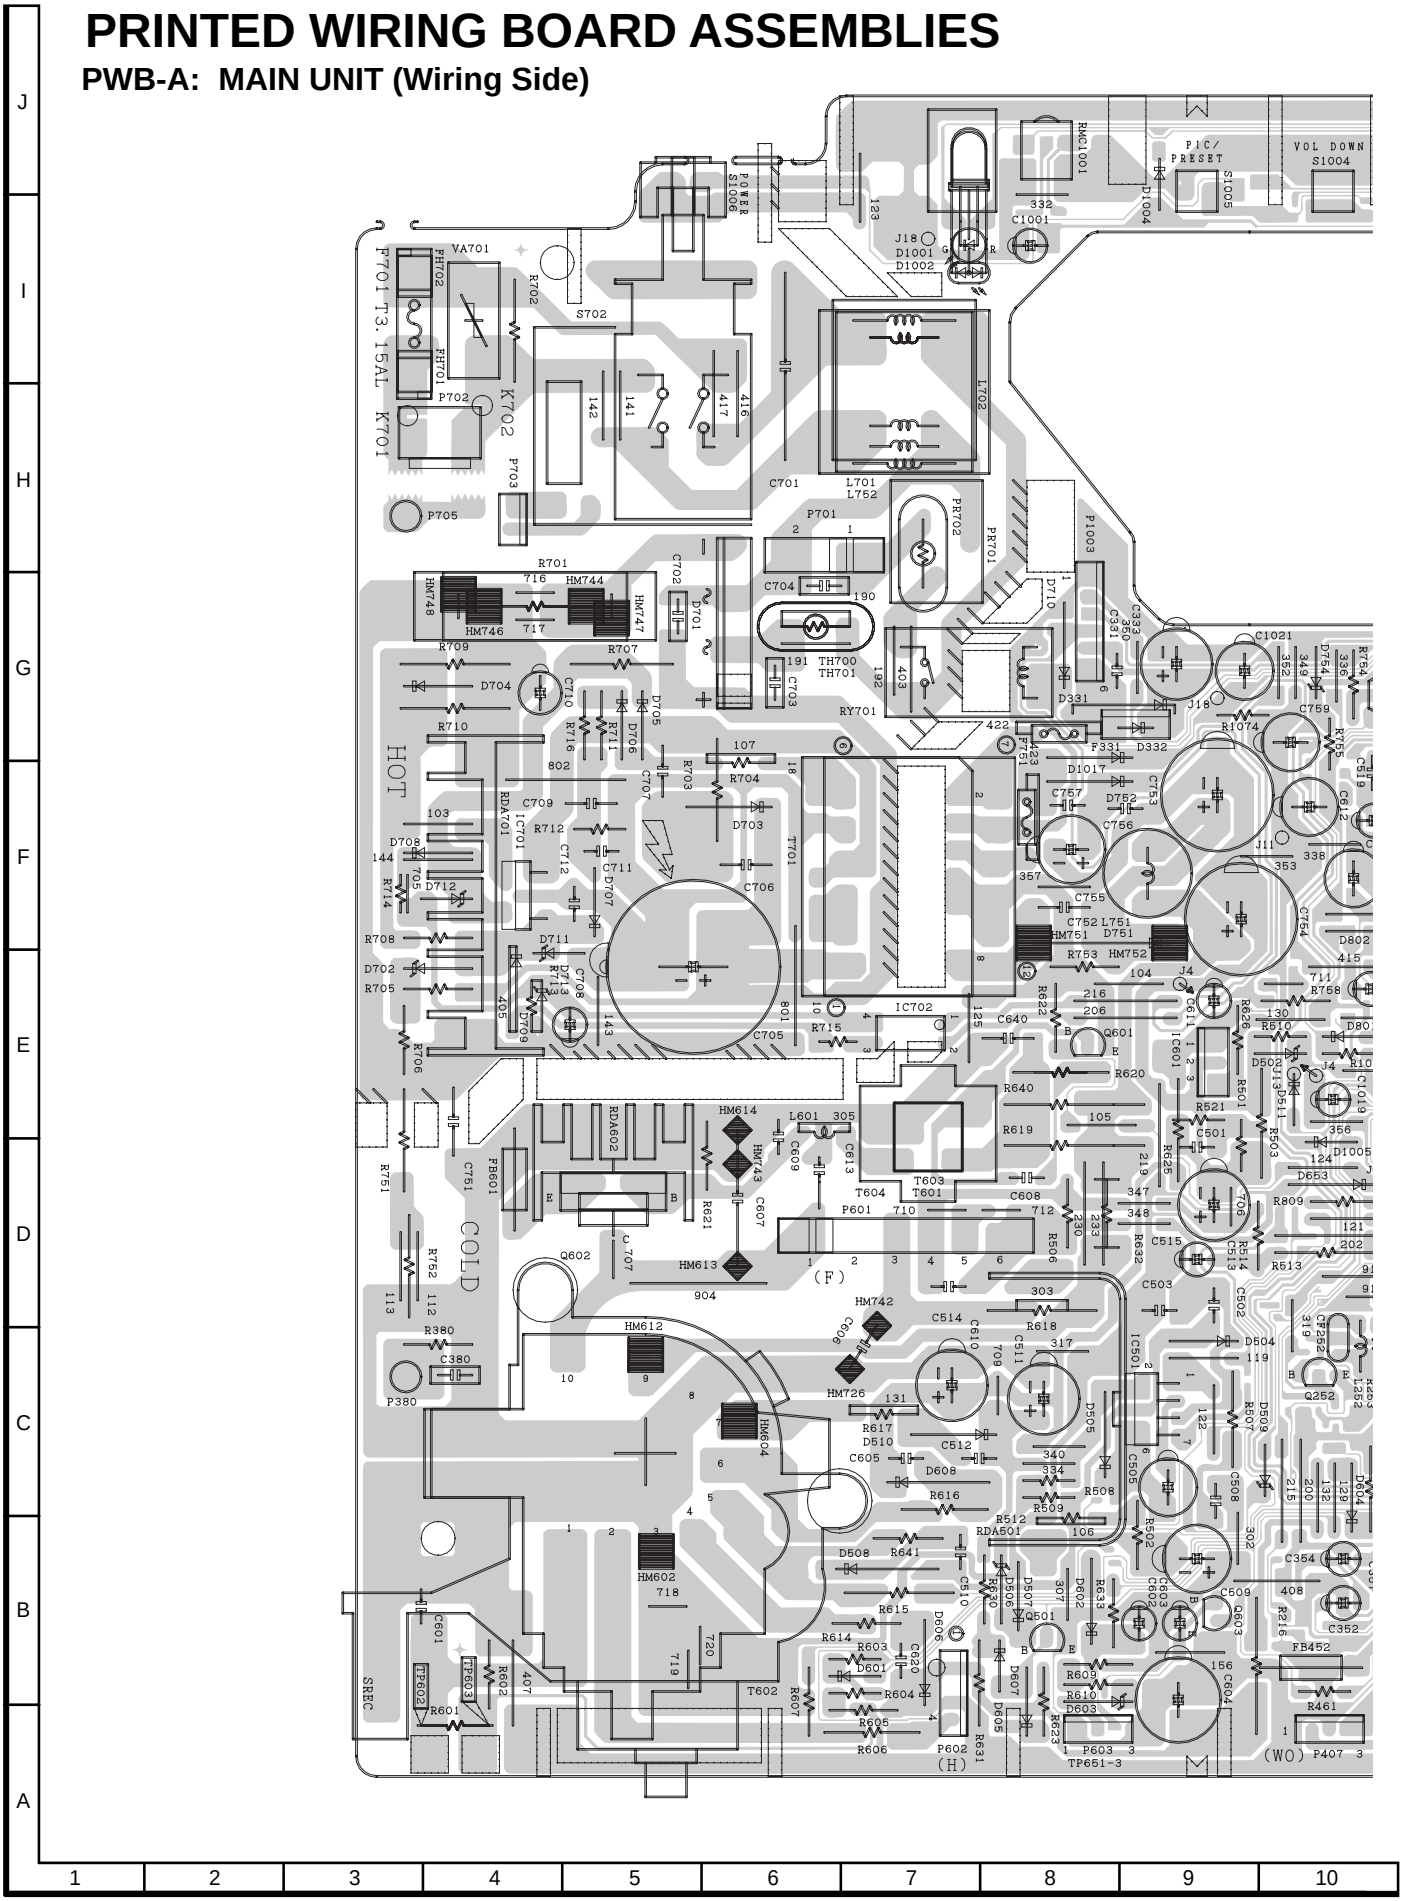

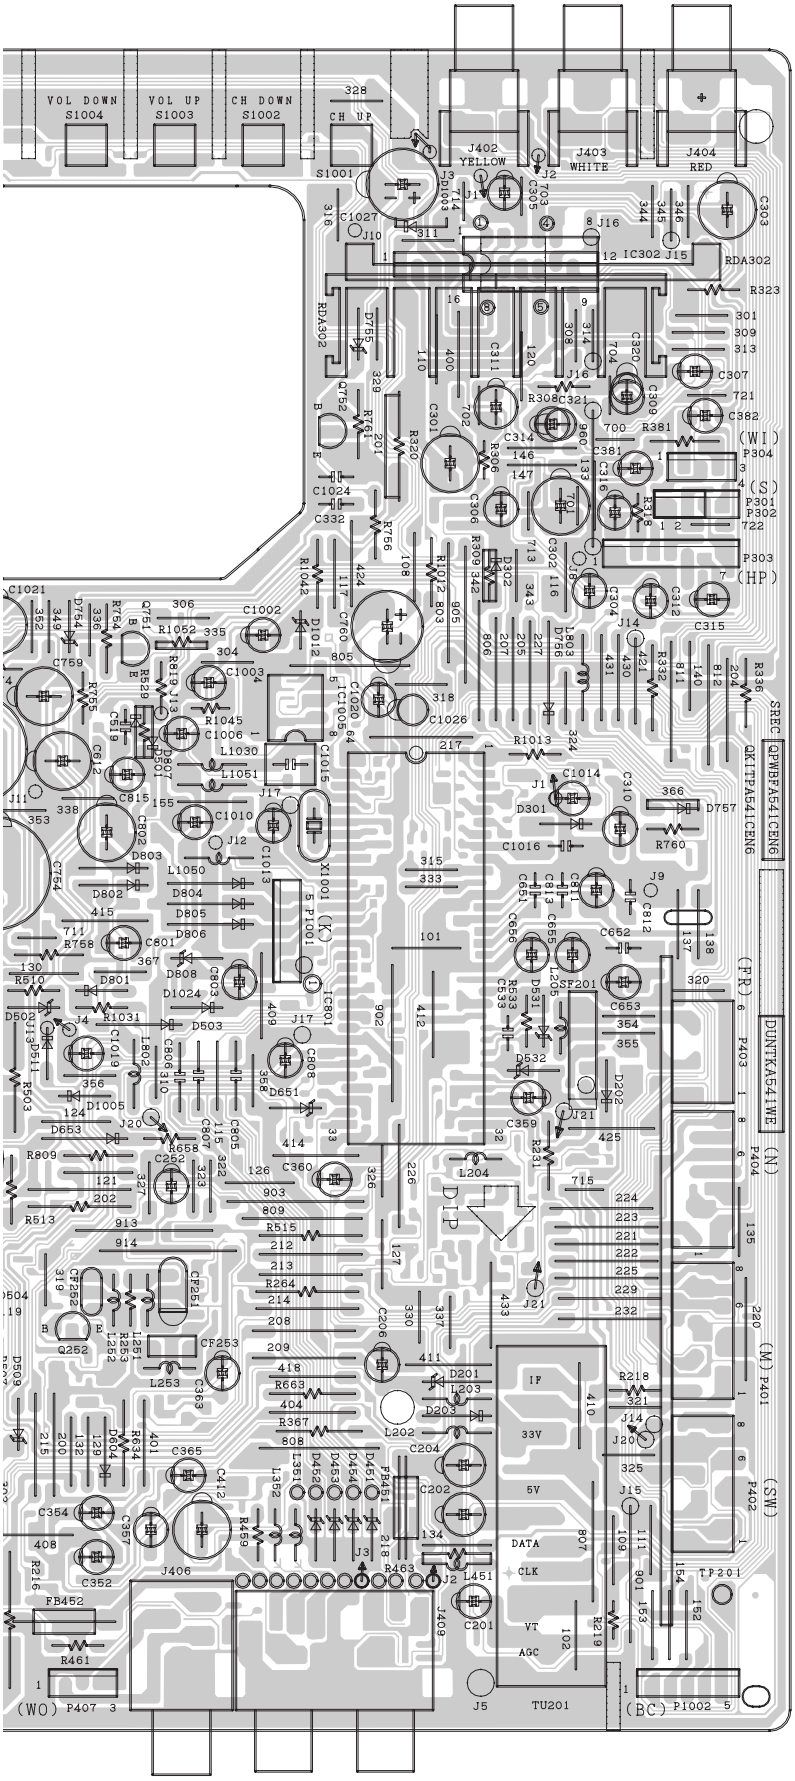
VOL DOWN
S1004
VOL UP
S1003
CH DOWN
S1002
CH UP
S1001
J402
YELLOW
J403
WHITE
J404
RED
IC302
RDA302
(WI)
P304
(S)
P301
P302
P303
(HP)
(PR)
P403
(N)
P404
(M)
P401
(SW)
P402
(BC)
P1002
(WO)
P407
J406
TU201
IF
33V
5V
DATA
CLK
VT
AGC
TP201
DIP
SREC
QPWBFA541CEN6
QKITPA541CEN6
DUNTKA541WE

PWB-A: MAIN UNIT (Chip Parts Side)

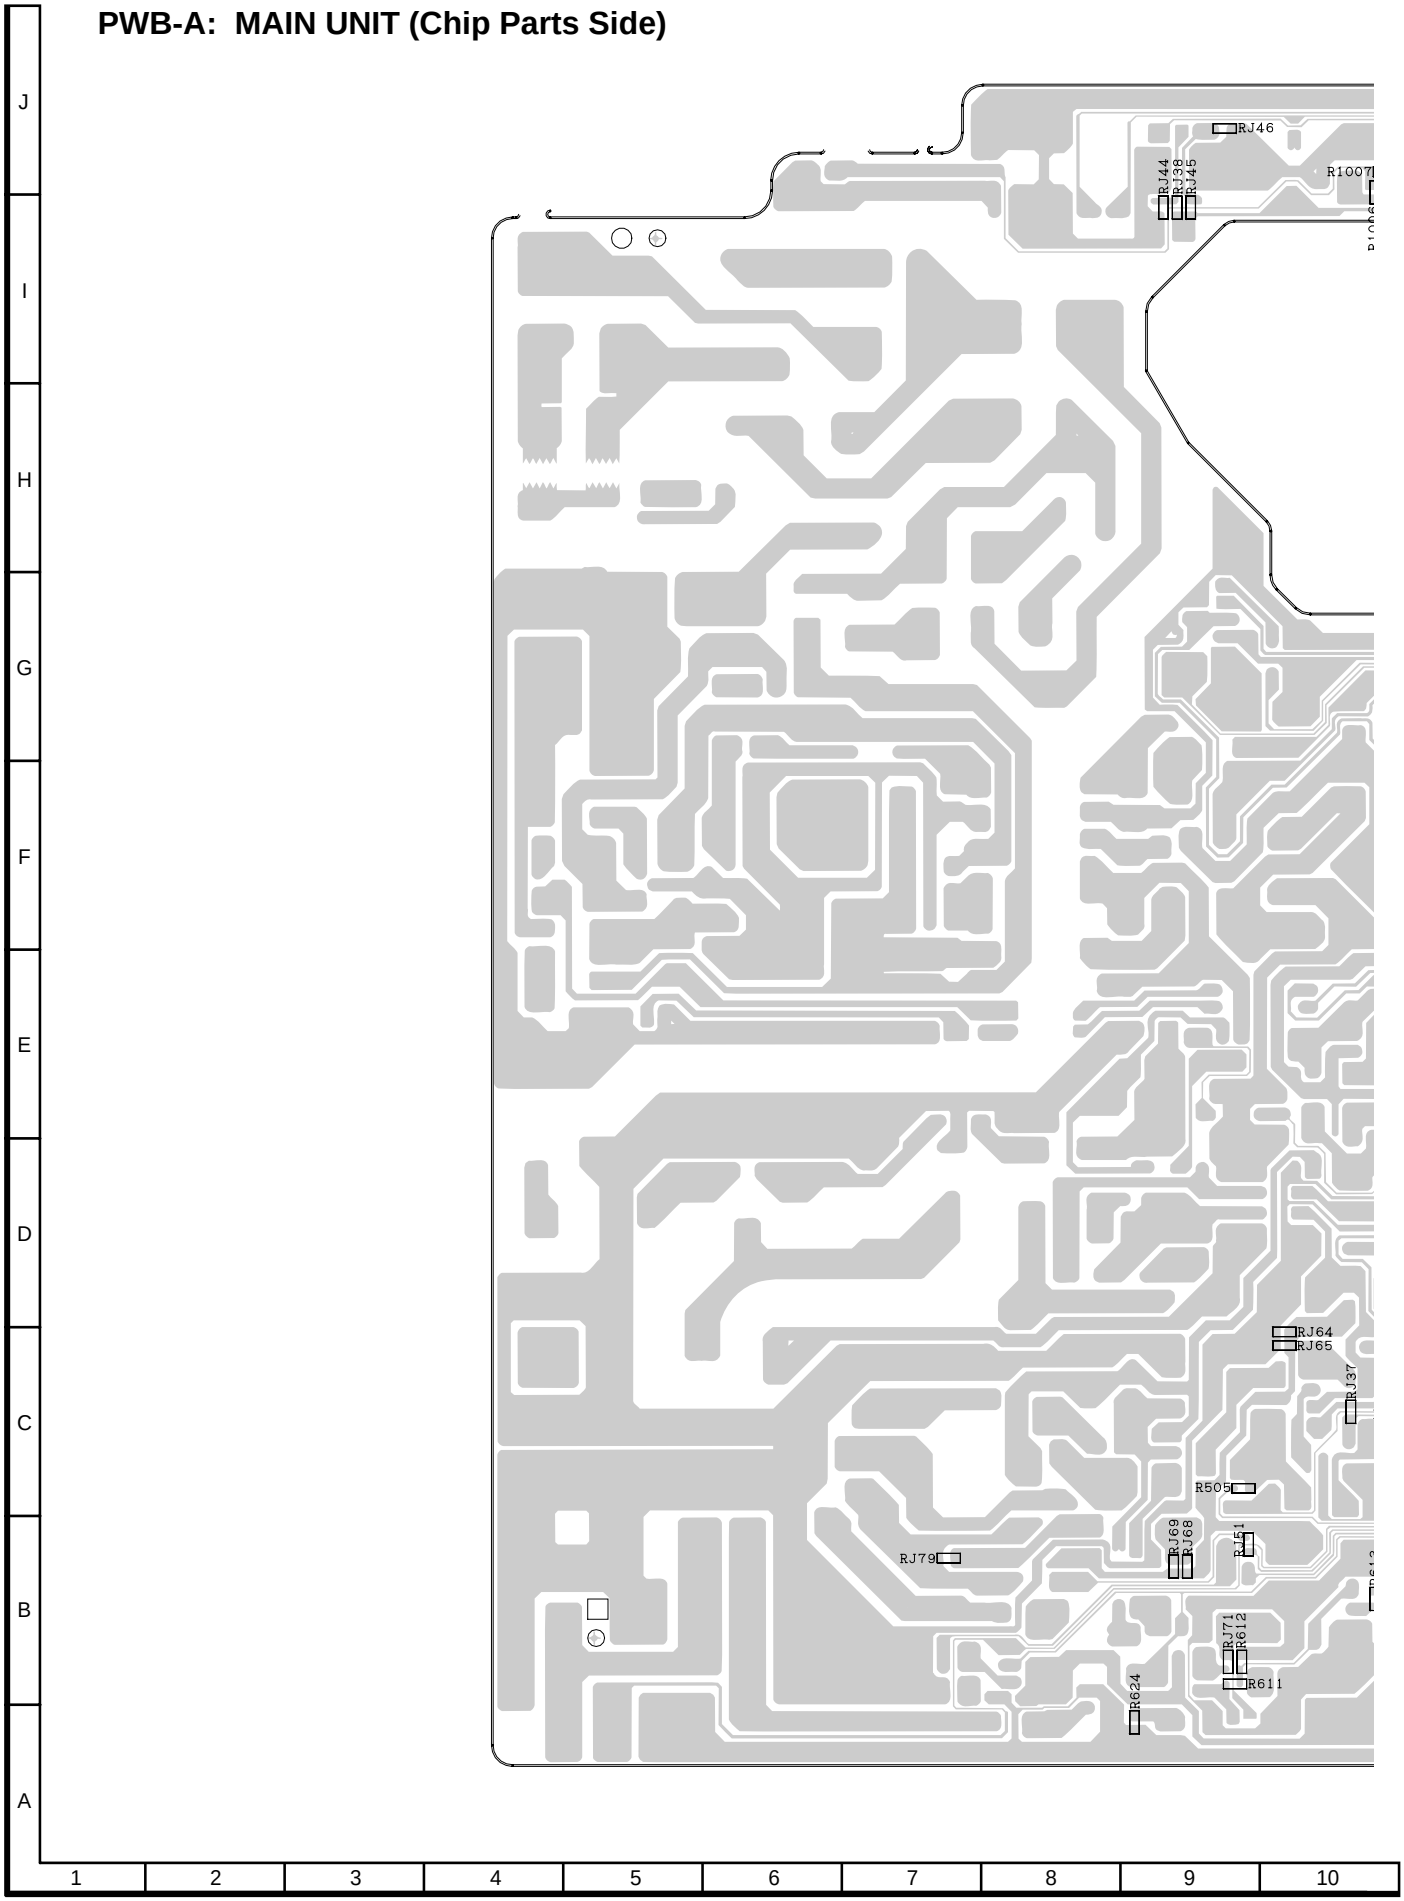

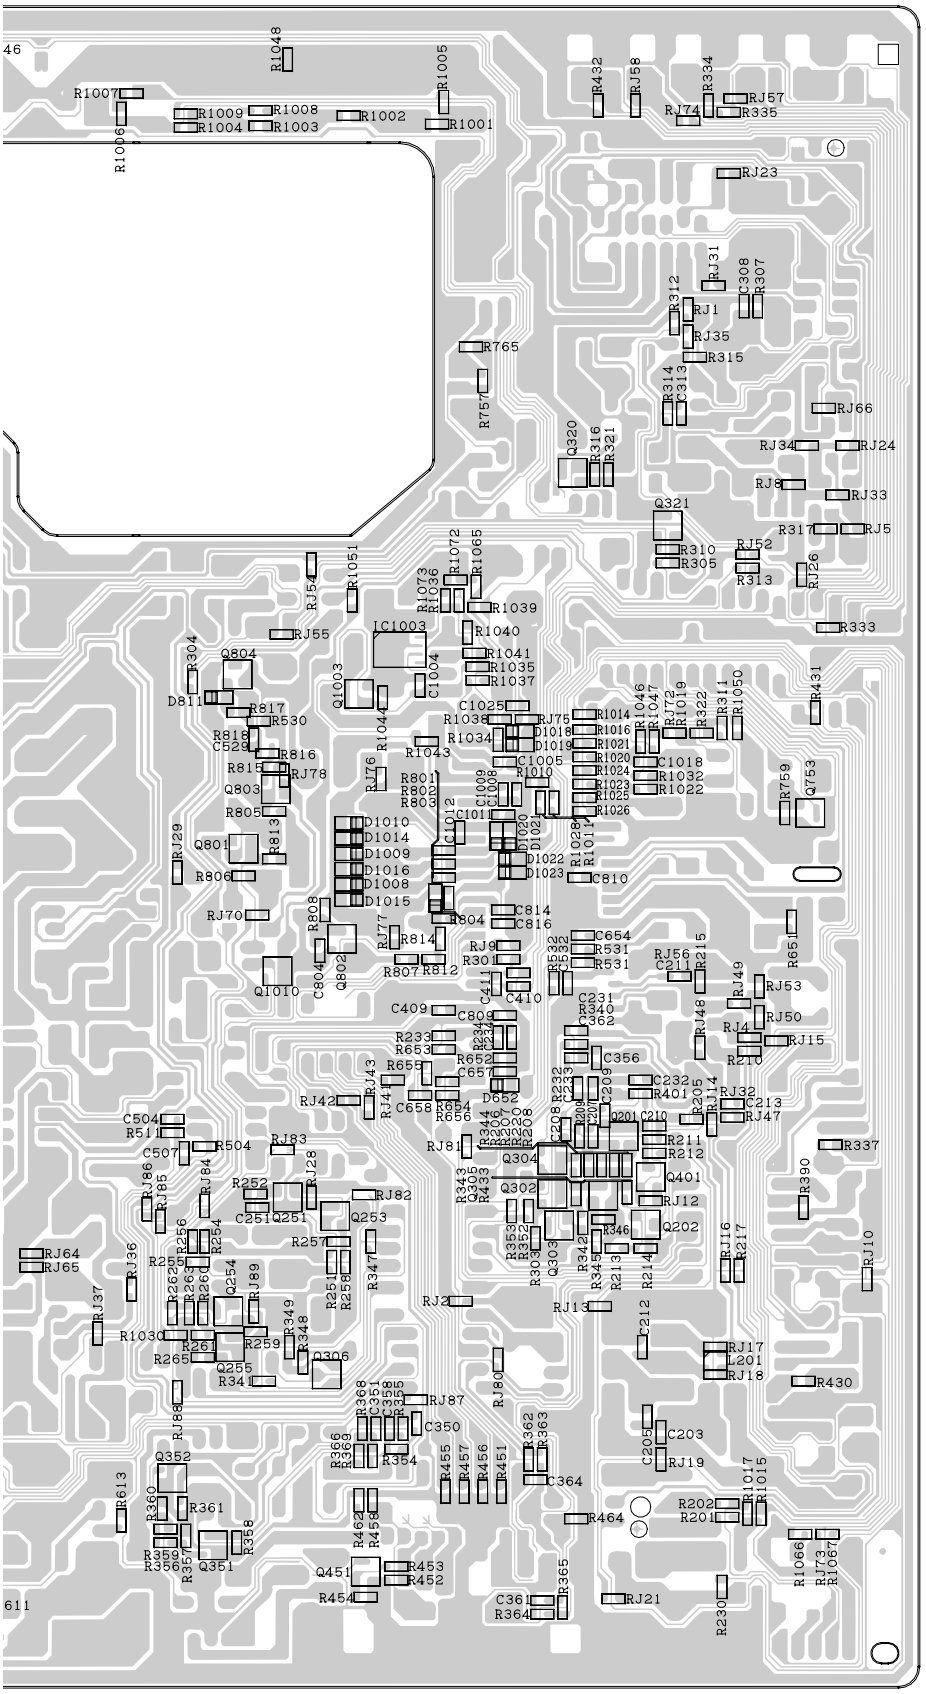

10	11	12	13	14	15	16	17	18	19

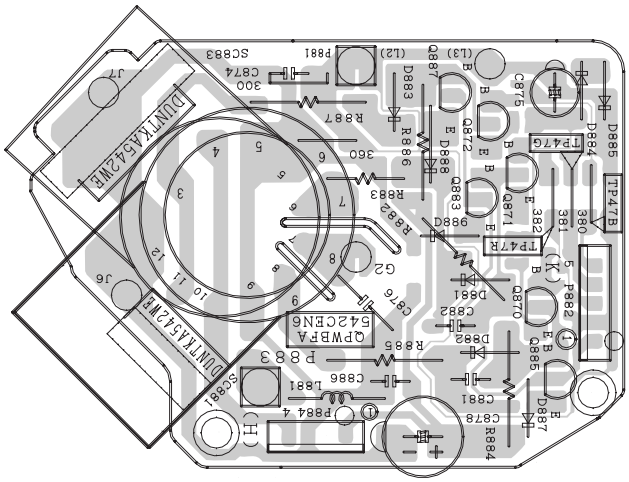

PWB-B: CRT UNIT (Wiring Side)

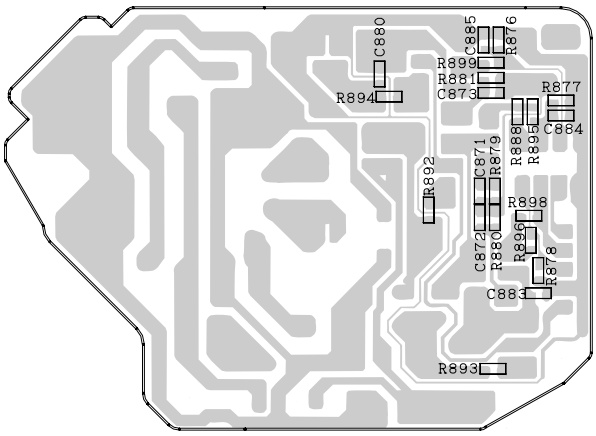

PWB-B: CRT UNIT (Chip Parts Side)

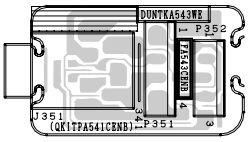

PWB-C: HEADPHONE UNIT (Wiring Side)

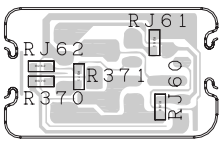

PWB-C: HEADPHONE UNIT (Chip Parts Side)

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual ; electrical components having such features are identified by ⚠ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does no have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. MODEL NUMBER **2. REF. NO.**

3. PART NO. **4. DESCRIPTION**

MARK ★ : SPARE PARTS-DELIVERY SECTION.

Ref. No.	Part No.	★	Description	Code
PICTURE TUBE				
⚠	VB37GDA86X/1E	R	Picture Tube	CB
⚠	RCiLG0068PEZZ	R	Degaussing Coil	AH
⚠ DY601	RCiLH0225PEZZ	R	Deflection Yoke	AX
	PMAGF3045CEZZ	R	Magnet	AG
	QEARC1422PEZZ	R	Ground-Part	AD
PRINTED WIRING BOARD ASSEMBLIES ***(NOT REPLACEMENT ITEM)***				
PWB-A	DUNTKA541WEJ9	–	Main Unit	—
PWB-B	DUNTKA542WEE9	–	CRT Unit	—
PWB-C	DUNTKA543WEB1	–	Headphone Unit	—

Ref. No.	Part No.	★	Description	Code
DUNTKA541WEJ9 PWB-A MAIN UNIT				
TUNER				
NOTE:THE PARTS HERES SHOWN ARE SUPPLIED AS AN ASSEMBLY NOT INDEPENDENTLY				
⚠ TU201	RTUNQA010WJZZ	R	Tuner	AW
INTEGRATED CIRCUITS				
IC302	VHiAN7523++-1	R	AN7523	AH
IC501	VHiAN5522++-1	R	AN5522	AH
IC601	VHiKA7808AP-1	R	KIA7808API	AE
IC701	VHiSTRG5653-1	R	STR-G5653	AQ
IC801	RH-iX3368CEN7	R	I.C.	BB
IC1005	VHiCAT24W04-1	R	CAT24WC04PI	AE
TRANSISTORS				
Q201	VS2SC2735//1EY	R	2SC2735	AC
Q251	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q252	VS2PC1815G+-1+	R	2PC1815G	AC
Q302	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q321	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q352	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q501	VS2PC1815G+-1+	R	2PC1815G	AC
Q601	VS2SC3207//-1+	R	2SC3207	AC
Q602	VS2SD2586//1E	R	2SD2586	AM
Q603	VS2PC1815G+-1+	R	2PC1815G	AC
Q751	VS2PC1815G+-1+	R	2PC1815G	AC
Q752	VS2PC1815G+-1+	R	2PC1815G	AC
Q801	VS2SA1530AR-1Y	R	2SA1530AR	AB
Q802	VS2SA1530AR-1Y	R	2SA1530AR	AB
Q804	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q1010	VS2SC3928AR-1Y	R	2SC3928AR	AB
DIODES AND LED'S				
D201	RH-EX0676GEZZY	R	Zener Diode, 33V	AA
D203	RH-DX0045GEZZY	R	DX0045GE	AA
D301	VHD1SS119//-1Y	R	1SS119	AA
D302	VHD1SS119//-1Y	R	1SS119	AA
D332	RH-DX0445CEZZ	R	DX0445CE	AL
D503	RH-DX0045GEZZY	R	DX0045GE	AA
D505	RH-DX0441CEZZY	R	DX0441CE	AC
D506	RH-EX0630GEZZY	R	Zener Diode, 9V	AA
D507	RH-DX0045GEZZY	R	DX0045GE	AA
D508	RH-DX0131CEZZY	R	DX0131CE	AC
D509	RH-EX0660GEZZY	R	Zener Diode, 22V	AB
D531	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D532	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D601	RH-DX0048GEZZY	R	DX0048GE	AA
D602	VHD1SS244//-1Y	R	1SS244	AB
D603	RH-EX0667GEZZY	R	Zener Diode, 27V	AA
D604	VHD1SS119//-1Y	R	1SS119	AA
D606	RH-DX0131CEZZY	R	DX0131CE	AC
D607	RH-DX0045GEZZY	R	DX0045GE	AA
D608	RH-DX0468CEZZ	R	DX0468CE	AE
D651	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D652	RH-EX0253TAZZY	R	Zener Diode,3.3V	AC
D653	RH-DX0045GEZZY	R	DX0045GE	AA
D701	RH-DX0111PEZZ	R	DX0111PE	AG
D705	VHD1SS82///1AY	R	1SS82	AC
D706	VHD1SS82///1AY	R	1SS82	AC
D707	VHD1SS82///1AY	R	1SS82	AC
D751	RH-DX0229CEZZ	R	DX0229CE	AF
D752	RH-DX0131CEZZY	R	DX0131CE	AC
D754	RH-EX0616GEZZY	R	Zener Diode, 5.6V	AA
D755	RH-EX0603GEZZY	R	Zener Diode, 3.9V	AA
D801	VHD1SS119//-1Y	R	1SS119	AA
D802	RH-DX0045GEZZY	R	DX0045GE	AA
D803	RH-DX0045GEZZY	R	DX0045GE	AA
D804	RH-DX0045GEZZY	R	DX0045GE	AA
D805	RH-DX0045GEZZY	R	DX0045GE	AA
D806	RH-DX0045GEZZY	R	DX0045GE	AA
D808	RH-EX0610GEZZY	R	Zener Diode, 4.7V	AA
D1001	RH-PX0013PEZZ	R	PhotoDiode	AC
D1003	VHD1SS119//-1Y	R	1SS119	AA

Ref. No.	Part No.	★	Description	Code
D1004	VHD1SS119//-1Y	R	1SS119	AA
D1007	RH-EX0263TAZZY	R	Zener Diode	AC
D1012	RH-EX0611GEZZY	R	Zener Diode, 5.1V	AA
D1018	RH-EX0263TAZZY	R	Zener Diode, 8.3V	AC
D1019	RH-EX0263TAZZY	R	Zener Diode, 8.3V	AC
D1024	VHD1SS119//-1Y	R	1SS119	AA
VA701	RH-VX0073CEZZ	R	Varistor	AD
			PACKAGED CIRCUITS	
PR702	RMPTP0028CEZZ	R	Packaged Circuit	AG
X1001	RCRSB0300CEZZ	R	Crystal (12MHz)	AF
			COILS	
L202	VP-DF270K0000Y	R	Peaking 27µH 10%	AB
L203	VP-DF270K0000Y	R	Peaking 27µH 10%	AB
L204	VP-XF1R2K0000Y	R	Peaking 1.2µH 10%	AB
L251	VP-XF100K0000Y	R	Peaking 10µH 10%	AB
L252	VP-XF6R8K0000Y	R	Peaking 6.8µH 10%	AB
⚠ L701	RCiLF0096PEZZ	R	Coil	AF
L751	RCiLP0225CEZZ	R	Coil	AF
L802	VP-DF100K0000Y	R	Peaking 10µH 10%	AB
L803	VP-DF100K0000Y	R	Peaking 10µH 10%	AB
L1030	VP-DF100K0000Y	R	Peaking 10µH 10%	AB
L1050	VP-DF100K0000Y	R	Peaking 10µH 10%	AB
L1051	VP-DF100K0000Y	R	Peaking 10µH 10%	AB
CF251	RFiLC0318CEZZ	R	Filter	AG
CF252	RFiLC0465CEZZ	R	Filter	AD
SF201	RFiLC0442CEZZ	R	Filter	AL
			TRANSFORMERS	
⚠ T601	RTRNZ0144PEZZ	R	Transformer	AE
⚠ T602	RTRNF0230PEZZ	R	H-Volt Transformer	AW
⚠ T701	RTRNWA110WJZZ	R	Transformer	AH
			CAPACITORS	
C201	VCEA0A1CW476M+	R	47 16V Electrolytic	AB
C202	VCEA0A1AW337M+	R	330 10V Electrolytic	AC
C203	VCKYCY1HF103Z	R	0.01 50V Ceramic	AA
C204	VCEA0A0JW477M+	R	470 6.3V Electrolytic	AC
C205	VCKYCY1HF103Z	R	0.01 50V Ceramic	AA
C206	VCEA0A1HW106M+	R	10 50V Electrolytic	AB
C207	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C208	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C209	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C210	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C231	VCKYCY1HF223Z	R	0.022 50V Ceramic	AB
C232	VCKYCY1HB821K	R	820p 50V Ceramic	AA
C233	VCKYCY1HB472K	R	4700p 50V Ceramic	AA
C234	VCKYCY1EF104Z	R	0.1 25V Ceramic	AA
C251	VCKYCY1HF223Z	R	0.022 50V Ceramic	AB
C252	VCEA0A1CW107M+	R	100 16V Electrolytic	AC
C301	VCEA0A1CW477M+	R	470 16V Electrolytic	AC
C304	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C306	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C310	VCEA0A1HW105M+	R	1 50V Electrolytic	AB
C311	VCEA0A1HW105M+	R	1 50V Electrolytic	AB
C312	VCEA0A1HW224M+	R	0.22 50V Electrolytic	AB
C316	VCEA0A1CW107M+	R	100 16V Electrolytic	AC
C331	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C332	RC-QZA103TAYJ+	R	0.01 50V M.Polyester Film	AB
C333	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
C352	VCEA0A1HW105M+	R	1 50V Electrolytic	AB
C354	VCEA0A1HW105M+	R	1 50V Electrolytic	AB
C356	VCKYCY1HB472K	R	4700p 50V Ceramic	AA
C359	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C360	VCE9GA1HW225M+	R	2.2 50V Electrolytic	AB
C409	VCKYCY1CF474Z	R	0.47 16V Ceramic	AB
C410	VCKYCY1CF474Z	R	0.47 16V Ceramic	AB
C411	VCKYCY1HB102K	R	1000p 50V Ceramic	AA
C412	VCEA0A1CW477M+	R	470 16V Electrolytic	AC
C501	VCKYPA1HB102K+	R	1000p 50V Ceramic	AA
C504	VCKYCY1HB103K	R	0.01 50V Ceramic	AA
C505	VCEA0A1HW107M+	R	100 50V Electrolytic	AB
C507	VCKYCY1HB103K	R	0.01 50V Ceramic	AA

Ref. No.	Part No.	★	Description	Code
C508	VCFYSA1JB224J+	R	0.22 63V Mylar	AD
C509	VCEA0A1CW477M+	R	470 16V Electrolytic	AC
C510	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C514	VCFYSA1JB563J+	R	0.056 63V Mylar	AD
C529	VCKYCY1CB823KY	R	0.082 16V Ceramic	AH
C531	VCKYCY1HB102K	R	1000p 50V Ceramic	AA
C532	VCKYCY1HB102K	R	1000p 50V Ceramic	AA
C533	RC-QZA104TAYJ+	R	0.1 50V M.Polyester Film	AB
C601	VCQYTA1HM563J+	R	0.056 50V Mylar	AB
C602	VCEA0A1HW475M+	R	4.7 50V Electrolytic	AB
C603	VCEA0A1HW105M+	R	1 50V Electrolytic	AB
C604	VCEA0A2EW106M	R	10 250V Electrolytic	AD
C605	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C606	VCFPFA2EB334J	R	0.33 250V MetalIzed Polypro Film	AD
C607	VCFPFD3ZA532H	R	5300p 1500V MetalIzed Polypro Film	AD
C608	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C610	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
C611	VCEA0A1EW476M+	R	47 25V Electrolytic	AB
C612	VCEA0A1CW477M+	R	470 16V Electrolytic	AC
C620	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
⚠ C640	VCFYSB2EB823J	R	0.082 250V M.Polyester Film	AD
C651	VCQYTA1HM222J+	R	2200p 50V Mylar	AA
C652	RC-QZA472TAYJ+	R	4700p 50V Mylar	AB
C653	VCEA0A1HW105M+	R	1 50V Electrolytic	AB
C654	VCKYCY1HF223Z	R	0.022 50V Ceramic	AB
C655	VCEA0A1HW106M+	R	10 50V Electrolytic	AB
C656	VCEA0A1HW224M+	R	0.22 50V Electrolytic	AB
C657	VCKYCY1EF104Z	R	0.1 25V Ceramic	AA
C658	VCKYCY1EF104Z	R	0.1 25V Ceramic	AA
⚠ C701	RC-FZ031SCEZZ	R	0.1 275V M.Polyester Film	AD
C702	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C703	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C704	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C705	RC-EZA071WJZZ	R	150 400V	AL
C709	RC-KZ0039CEZZ	R	680p 2kV Ceramic	AB
C710	VCEA0A1HW476M+	R	47 50V Electrolytic	AB
C711	VCKYPA1HB102K+	R	1000p 50V Ceramic	AA
C712	VCKYPA1HB471K+	R	470p 50V Ceramic	AA
⚠ C751	RC-KZ0102GEZZ	R	680 AC250V Ceramic	AE
C752	VCKYPH3DB561K	R	560p 2000V Ceramic	AC
C753	RC-EZ0776CEZZ	R	100 160V Electrolytic	AF
C754	RC-EZA069WJZZ	R	33 160V Electrolytic	AE
C755	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
C756	RC-QZA103TAYJ+	R	0.01 50V M.Polyester Film	AB
C759	VCEA0A0JW477M+	R	470 6.3V Electrolytic	AC
C760	VCEA0A0JW228M	R	2200 6.3V Electrolytic	AD
C801	VCEA0A1HW105M+	R	1 50V Electrolytic	AB
C803	VCEA0A1CW107M+	R	100 16V Electrolytic	AC
C804	VCKYCY1HB222K	R	2200p 50V Ceramic	AA
C805	VCKYD41HB102KY	R	1000p 50V Ceramic	AA
C806	VCKYD41HB102KY	R	1000p 50V Ceramic	AA
C807	VCKYD41HB102KY	R	1000p 50V Ceramic	AA
C808	VCEA0A1CW107M+	R	100 16V Electrolytic	AC
C809	VCKYCY1CF474Z	R	0.47 16V Ceramic	AB
C810	VCKYCY1CF474Z	R	0.47 16V Ceramic	AB
C811	VCEA0A1CW107M+	R	100 16V Electrolytic	AC
C812	VCFYFA1HA224J+	R	0.22 50V M.Polyester Film	AB
C813	VCFYFA1HA224J+	R	0.22 50V M.Polyester Film	AB
C814	VCKYCY1HB471K	R	470p 50V Ceramic	AA
C816	VCKYCY1HB471K	R	470p 50V Ceramic	AA
C1001	VCEA0A0JW107M+	R	100 6.3V Electrolytic	AB
C1002	VCEA0A0JW107M+	R	100 6.3V Electrolytic	AB
C1003	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C1004	VCKYCY1CF474Z	R	0.47 16V Ceramic	AB
C1005	VCKYCY1CF474Z	R	0.47 16V Ceramic	AB
C1006	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C1008	VCCCCY1HH330J	R	33p 50V Ceramic	AA
C1009	VCCCCY1HH330J	R	33p 50V Ceramic	AA
C1010	VCEA0A0JW107M+	R	100 6.3V Electrolytic	AB

Ref. No.	Part No.	★			Description		Code
C1011	VCKYCY1CF474Z	R	0.47	16V	Ceramic		AB
C1012	VCKYCY1CF474Z	R	0.47	16V	Ceramic		AB
C1013	VCEA0A0JW107M+	R	100	6.3V	Electrolytic		AB
C1014	VCEA0A1CW106M+	R	10	16V	Electrolytic		AB
C1016	RC-QZA104TAYJ+	R	0.1	50V	Mylar		AB
C1018	VCKYCY1HB221K	R	220p	50V	Ceramic		AA
C1019	VCEA0A1HW225M+	R	2.2	50V	Electrolytic		AB
C1024	RC-QZA104TAYJ+	R	0.1	50V			AB

RESISTORS

RJ2	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ4	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ9	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ10	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ13	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ14	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ15	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ16	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ17	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ19	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ21	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ24	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ26	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ28	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ32	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ33	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ35	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ37	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ41	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ42	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ43	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ44	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ45	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ48	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ49	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ51	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ52	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ53	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ56	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ71	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ73	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ75	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ76	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ77	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ78	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ83	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
RJ88	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
R201	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R202	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R205	VRS-CY1JF680JY	R	68	1/16W	Metal Oxide	AA
R206	VRS-CY1JF122JY	R	1.2k	1/16W	Metal Oxide	AA
R207	VRS-CY1JF221JY	R	220	1/16W	Metal Oxide	AA
R208	VRS-CY1JF122JY	R	1.2k	1/16W	Metal Oxide	AA
R209	VRS-CY1JF392JY	R	3.9k	1/16W	Metal Oxide	AA
R216	VRS-VV3LB223J	R	22k	3W	Metal Oxide	AB
R219	VRD-RA2BE392JY	R	3.9k	1/8W	Carbon	AA
R220	VRS-CY1JF221JY	R	220	1/16W	Metal Oxide	AA
R230	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
R231	VRD-RA2BE681JY	R	680	1/8W	Carbon	AA
R232	VRN-MD2AL272J	R	2.7k	0.1W	Metal Film	AA
R233	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R234	VRN-MD2AL391J	R	390	0.1W	Metal Film	AA
R251	VRN-MD2AL181J	R	180	0.1W	Metal Film	AA
R252	VRN-MD2AL181J	R	180	0.1W	Metal Film	AA
R253	VRD-RA2BE680JY	R	68	1/8W	Carbon	AA
R254	VRN-MD2AL560J	R	56	0.1W	Metal Film	AB
R255	VRN-MD2AL223J	R	22k	0.1W	Metal Film	AA
R256	VRN-MD2AL223J	R	22k	0.1W	Metal Film	AA
R262	VRN-MD2AL560J	R	56	0.1W	Metal Film	AB
R263	VRN-MD2AL560J	R	56	0.1W	Metal Film	AB
R301	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R302	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R303	VRN-MD2AL561J	R	560	0.1W	Metal Film	AA
R304	VRN-MD2AL100J	R	10	0.1W	Metal Film	AA
R305	VRN-MD2AL274J	R	270k	0.1W	Metal Film	AA
R310	VRN-MD2AL473J	R	47k	0.1W	Metal Film	AA
R311	VRN-MD2AL473J	R	47k	0.1W	Metal Film	AA
R313	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R314	VRN-MD2AL472J	R	4.7k	0.1W	Metal Film	AA
R315	VRN-MD2AL272J	R	2.7k	0.1W	Metal Film	AA
R316	VRN-MD2AL272J	R	2.7k	0.1W	Metal Film	AA
R318	VRD-RA2BE680JY	R	68	1/8W	Carbon	AA
R333	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R334	VRN-MD2AL332J	R	3.3k	0.1W	Metal Film	AA
R335	VRN-MD2AL564J	R	560k	0.1W	Metal Film	AA
R352	VRN-MD2AL681J	R	680	0.1W	Metal Film	AA
R359	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R360	VRN-MD2AL103J	R	10k	0.1W	Metal Film	AA
R361	VRN-MD2AL104J	R	100k	0.1W	Metal Film	AA
R364	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
R366	VRN-MD2AL000J	R	0	0.1W	Metal Film	AA
R431	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R432	VRN-MD2AL820J	R	82	0.1W	Metal Film	AA
R458	VRN-MD2AL103J	R	10k	0.1W	Metal Film	AA
R459	VRD-RA2BE680JY	R	68	1/8W	Carbon	AA
R501	VRD-RA2BE272JY	R	2.7k	1/8W	Carbon	AA
R502	VRD-RM2HD102JY	R	1k	1/2W	Carbon	AA
R503	VRN-VV3AB2R7J	R	2.7	1W	Metal Film	AA
R504	VRN-MD2AL181J	R	180	0.1W	Metal Film	AA
R505	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R506	VRS-VV3AB331J	R	330	1W	Metal Oxide	AA
R507	VRN-VV3AB1R0J	R	1	1W	Metal Film	AA
R508	VRD-RA2BE153JY	R	15k	1/8W	Carbon	AA
R509	VRD-RA2BE153JY	R	15k	1/8W	Carbon	AA
R511	VRN-MD2AL181J	R	180	0.1W	Metal Film	AA
R512	VRD-RM2HD5R6JY	R	5.6	1/2W	Carbon	AA
R521	VRD-RA2BE333JY	R	33k	1/8W	Carbon	AA
R529	VRD-RA2BE223JY	R	22k	1/8W	Carbon	AA
R530	VRS-CY1JF334JY	R	330k	1/16W	Metal Oxide	AA
R531	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R532	VRN-MD2AL101J	R	100	0.1W	Metal Film	AA
R533	VRD-RA2BE393JY	R	39k	1/8W	Carbon	AA
R601	VRS-SV2HC102J	R	1k	1/2W	Metal Oxide	AA
R602	VRD-RA2BE393JY	R	39k	1/8W	Carbon	AA
R603	VRD-RA2BE273JY	R	27k	1/8W	Carbon	AA
R604	VRD-RA2BE563JY	R	56k	1/8W	Carbon	AA
R605	VRD-RM2HD124JY	R	120k	1/2W	Carbon	AA
R606	VRN-VV3AB1R5J	R	1.5	1W	Metal Film	AA
R607	VRD-RM2HD270JY	R	27	1/2W	Carbon	AA
R609	VRD-RA2BE154JY	R	150k	1/8W	Carbon	AA
R610	VRD-RA2BE102GY	R	1k	1/8W	Carbon	AB
R611	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R612	VRN-MD2AL123J	R	12k	0.1W	Metal Film	AA
R613	VRN-MD2AL103J	R	10k	0.1W	Metal Film	AA
R614	VRS-SV2HC150J	R	15	1/2W	Metal Oxide	AA
R615	VRS-VV3DB682J	R	6.8k	2W	Metal Oxide	AA
R616	VRN-VV3ABR47J	R	0.47	1W	Metal Film	AA
R618	VRS-VV3DB391J	R	390	2W	Metal Oxide	AA
R619	VRS-VV3LB103J	R	10k	3W	Metal Oxide	AB
R620	VRS-VV3AB472J	R	4.7k	1W	Metal Oxide	AA
R622	VRD-RA2BE102JY	R	1k	1/8W	Carbon	AA
R623	VRD-RM2HD184JY	R	180k	1/2W	Carbon	AA
R624	VRN-MD2AL472J	R	4.7k	0.1W	Metal Film	AA
R625	VRN-VV3DB8R2J	R	8.2	2W	Metal Film	AB
R626	VRD-RM2HD470JY	R	47	1/2W	Carbon	AA
R633	VRD-RA2BE333JY	R	33k	1/8W	Carbon	AA
R634	VRD-RA2BE103JY	R	10k	1/8W	Carbon	AA
R641	VRN-SV2HCR47J	R	0.47	1/2W	Metal Film	AA
R651	VRN-MD2AL223J	R	22k	0.1W	Metal Film	AA
R652	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R653	VRN-MD2AL822J	R	8.2k	0.1W	Metal Film	AA
R654	VRN-MD2AL273J	R	27k	0.1W	Metal Film	AA
R655	VRN-MD2AL391J	R	390	0.1W	Metal Film	AA
R656	VRN-MD2AL100J	R	10	0.1W	Metal Film	AA
R658	VRD-RA2BE101JY	R	100	1/8W	Carbon	AA
R663	VRD-RA2BE101JY	R	100	1/8W	Carbon	AA
R701	VRW-KQ3NC3R9K	R	3.9	7W	Cement	AE
R707	VRS-VV3DB104J	R	100k	2W	Metal Oxide	AB
R708	VRD-RA2BE681JY	R	680	1/8W	Carbon	AA
R709	VRN-VV3DBR47J	R	0.47	2W	Metal Film	AB
R710	VRN-VV3DBR47J	R	0.47	2W	Metal Film	AB
R711	VRD-RA2BE682JY	R	6.8k	1/8W	Carbon	AA
R712	VRD-RA2BE152JY	R	1.5k	1/8W	Carbon	AA
R716	VRD-RA2BE562JY	R	5.6k	1/8W	Carbon	AA

Ref. No.	Part No.	★	Description	Code
⚠ R751	VRC-UA2HG825KY	R	8.2M 1/2W Solid	AA
⚠ R752	VRC-UA2HG825KY	R	8.2M 1/2W Solid	AA
R753	VRD-RM2HD124JY	R	120k 1/2W Carbon	AA
R754	VRD-RM2HD150JY	R	15 1/2W Carbon	AA
R755	VRD-RA2BE221JY	R	220 1/8W Carbon	AA
R756	VRD-RM2HD270JY	R	27 1/2W Carbon	AA
R757	VRN-MD2AL151J	R	150 0.1W Metal Film	AA
R801	VRN-MD2AL221J	R	220 0.1W Metal Film	AA
R802	VRN-MD2AL221J	R	220 0.1W Metal Film	AA
R803	VRN-MD2AL221J	R	220 0.1W Metal Film	AA
R804	VRN-MD2AL221J	R	220 0.1W Metal Film	AA
R805	VRN-MD2AL822J	R	8.2k 0.1W Metal Film	AA
R806	VRN-MD2AL123J	R	12k 0.1W Metal Film	AA
R807	VRN-MD2AL103J	R	10k 0.1W Metal Film	AA
R808	VRN-MD2AL221J	R	220 0.1W Metal Film	AA
R809	VRD-RA2BE224JY	R	220k 1/8W Carbon	AA
R812	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R813	VRN-MD2AL221J	R	220 0.1W Metal Film	AA
R1001	VRN-MD2AL221J	R	220 0.1W Metal Film	AA
R1002	VRN-MD2AL331J	R	330 0.1W Metal Film	AA
R1003	VRN-MD2AL471J	R	470 0.1W Metal Film	AA
R1004	VRN-MD2AL821J	R	820 0.1W Metal Film	AA
R1005	VRN-MD2AL181J	R	180 0.1W Metal Film	AA
R1011	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1012	VRD-RA2BE271JY	R	270 1/8W Carbon	AA
R1013	VRD-RA2BE101JY	R	100 1/8W Carbon	AA
R1014	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1015	VRN-MD2AL332J	R	3.3k 0.1W Metal Film	AA
R1016	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1017	VRN-MD2AL332J	R	3.3k 0.1W Metal Film	AA
R1019	VRN-MD2AL392J	R	3.9k 0.1W Metal Film	AA
R1020	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1021	VRN-MD2AL153J	R	15k 0.1W Metal Film	AA
R1022	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1023	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1024	VRN-MD2AL122J	R	1.2k 0.1W Metal Film	AA
R1025	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1026	VRN-MD2AL224J	R	220k 0.1W Metal Film	AA
R1028	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1030	VRN-MD2AL102J	R	1k 0.1W Metal Film	AA
R1031	VRD-RA2BE562JY	R	5.6k 1/8W Carbon	AA
R1032	VRN-MD2AL332J	R	3.3k 0.1W Metal Film	AA
R1034	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1035	VRN-MD2AL332J	R	3.3k 0.1W Metal Film	AA
R1036	VRN-MD2AL332J	R	3.3k 0.1W Metal Film	AA
R1037	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1038	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1039	VRN-MD2AL223J	R	22k 0.1W Metal Film	AA
R1040	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1041	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1042	VRD-RA2BE101JY	R	100 1/8W Carbon	AA
R1046	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1048	VRS-CY1JF102JY	R	1k 1/16W Metal Oxide	AA
R1050	VRN-MD2AL392J	R	3.9k 0.1W Metal Film	AA
R1051	VRN-MD2AL683J	R	68k 0.1W Metal Film	AA
R1072	VRN-MD2AL101J	R	100 0.1W Metal Film	AA
R1073	VRN-MD2AL101J	R	100 0.1W Metal Film	AA

SWITCHES

⚠ S702	QSW-PA006WJZZ	R	Switch, POWER	AG
S1001	QSW-K0003AJZZ+	R	Switch, CH UP	AB
S1002	QSW-K0003AJZZ+	R	Switch, CH DOWN	AB
S1003	QSW-K0003AJZZ+	R	Switch, VOL UP	AB
S1004	QSW-K0003AJZZ+	R	Switch, VOL DOWN	AB
S1005	QSW-K0003AJZZ+	R	Switch, PICTURE	AB

BALUN

FB601	RBLN-0091GEZZY	R	Balun	AB

MISCELLANEOUS PARTS

⚠ ACC701	QACCZA020WJPZ	R	AC Cord	
⚠ F701	QFS-C3229CEZZ	R	Fuse, 15A, 250V	AD
⚠ FH701	QFSHD1013CEZZ+	R	Fuse Holder	AC
⚠ FH702	QFSHD1014CEZZ+	R	Fuse Holder	AC

Ref. No.	Part No.	★	Description	Code
J402	QJAKEA046WJ04	R	Jack, Video	AC
J403	QJAKEA046WJ09	R	Jack, Audio	AC
J409	QJAKHA004WJZZ	R	Jack, AV-1 IN	AE
P302	QPLGNA109WJZZ	R	Plug, 4Pin	AB
P303	QPLGNA110WJZZ	R	Plug, 5Pin HP	AB
P601	QPLGN0660CEZZ	R	Plug, 6Pin (F)	AC
P602	LHLDW1104PEZZ	R	Holder, 4Pin (H)	AB
P603	QPLGNA108WJZZ	R	Plug, 3Pin	AB
P701	QPLGN0260CEZZ	R	Plug, 2Pin (M)	AC
P702	QPLGA0201PEZZ	R	Plug, 2Pin	AB
P1001	LHLDW1105PEZZ	R	Holder, 5Pin (K)	AB
P1002	QPLGNA110WJZZ	R	Plug, 5Pin (BC)	AB
RDA302	PRDAR0340PEFW	R	Heat Sink for IC302	AE
RDA701	PRDARA028WJFW	R	Heat Sink for IC701	AE
RDA501	PRDAR0118GJFW	R	Heat Sink for IC501	AD
RMC1001	RRMCUA009WJZZ	R	Remote Receiver	AF
	LHLDP1066PE00	R	Holder	AC

DUNTKA542WEE9
PWB-B CRT UNIT

TRANSISTORS

Q870	RH-TX0110BMZZ+	R	TX0110BM	AC
Q871	RH-TX0110BMZZ+	R	TX0110BM	AC
Q872	RH-TX0110BMZZ+	R	TX0110BM	AC
Q883	RH-TX0124BMZZ+	R	TX0124BM	AC
Q885	RH-TX0124BMZZ+	R	TX0124BM	AC
Q887	RH-TX0124BMZZ+	R	TX0124BM	AC

DIODES

D881	VHD1SS244//-1Y	R	1SS244	AB
D882	VHD1SS244//-1Y	R	1SS244	AB
D883	VHD1SS244//-1Y	R	1SS244	AB
D884	VHD1SS119//-1Y	R	1SS119	AA
D885	VHD1SS119//-1Y	R	1SS119	AA
D886	VHD1SS82///1AY	R	1SS82	AC
D887	VHD1SS82///1AY	R	1SS82	AC
D888	VHD1SS82///1AY	R	1SS82	AC

CAPACITORS

C871	VCCCCY1HH471J	R	470p	50V	Ceramic	AA
C872	VCCCCY1HH471J	R	470p	50V	Ceramic	AA
C873	VCCCCY1HH471J	R	470p	50V	Ceramic	AA
C875	VCKYPA2HB102K+	R	1000p	500V	Ceramic	AA
C876	RC-KZ0150CEZZ	R	1000p	3kV	Ceramic	AB
C878	VCEA0A2EW106M+	R	10	250V	Electrolytic	AD
C880	VCCCCY1HH471J	R	470p	50V	Ceramic	AA
C881	VCKYPA1HB471K+	R	470p	50V	Ceramic	AA
C882	VCKYPA1HB471K+	R	470p	50V	Ceramic	AA
C886	VCKYPA2HB102K+	R	1000p	500V	Ceramic	AA

RESISTORS

R879	VRN-MD2AL471J	R	470	0.1W	Metal Film	AA
R880	VRN-MD2AL471J	R	470	0.1W	Metal Film	AA
R881	VRN-MD2AL471J	R	470	0.1W	Metal Film	AA
R882	VRS-VV3DB153J	R	15k	2W	Metal Oxide	AA
R883	VRD-RM2HD272JY	R	2.7k	1/2W	Carbon	AA
R884	VRS-VV3DB153J	R	15k	2W	Metal Oxide	AA
R885	VRD-RM2HD272JY	R	2.7k	1/2W	Carbon	AA
R886	VRS-VV3DB153J	R	15k	2W	Metal Oxide	AA
R887	VRD-RM2HD272JY	R	2.7k	1/2W	Carbon	AA
R888	VRN-MD2AL471J	R	470	0.1W	Metal Film	AA
R892	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R893	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R894	VRN-MD2AL102J	R	1k	0.1W	Metal Film	AA
R898	VRN-MD2AL471J	R	470	0.1W	Metal Film	AA
R899	VRN-MD2AL471J	R	470	0.1W	Metal Film	AA

MISCELLANEOUS PARTS

⚠ SC881	QSOCV0017PEZZ	R	Socket	AF
P882	LHLDW1105PEZZ	R	Holder, 4Pin (H)	AB
P884	LHLDW1104PEZZ	R	Holder, 5Pin (K)	AB

Ref. No.	Part No.	★	Description	Code
	DUNTKA543WEB1 PWB-C HEADPHONE UNIT			
	RESISTORS			
RJ60	VRN-MD2AL000J	R	0 0.1W Metal Film	AA
RJ61	VRN-MD2AL000J	R	0 0.1W Metal Film	AA
RJ62	VRN-MD2AL000J	R	0 0.1W Metal Film	AA
R370	VRN-MD2AL471J	R	470 0.1W Metal Film	AA
R371	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
	MISCELLANEOUS PARTS			
J351	QJAKJ0101SEZZ	R	Jack	AE
P351	QPLGNA109WJZZ	R	Plug, 4Pin (HP)	AB

Ref. No.	Part No.	★	Description	Code
	MISCELLANEOUS PARTS			
SP301	VSP9050PB35WA	R	Speaker (R)	AK
SP302	VSP9050PB35WA	R	Speaker (L)	AK
	QCNW-2380PEZZ	R	Connecting Cord	AG
	QCNW-2452PEZZ	R	Connecting Cord	AE
	QCNW-A293WJZZ	R	Connecting Cord	AC
	QCNW-A343WJZZ	R	Connecting Cord	AC
	QPLGJ0113CEZZ	R	Plug	AG
	QPLGA0017CEZZ	R	Plug	AK
	SUPPLIED ACCESSORIES			
	RRMCG1342PESA	R	Infrared R-C	AU
	TiNS-A933WJZZ	R	Operation Manual	
	TMAPCA041WJZZ	R	Map	
	QANTRA002WJZZ	R	Rod Antenna	AL
	ACCESSORY *(NOT REPLACEMENT ITEM)*			
	TCAUA0002PEZZ	–	Caution Card	–
	PACKING PARTS *(NOT REPLACEMENT ITEM)*			
	SPAKCA938WJZZ	–	Packing Case	–
	SPAKXA331WJZZ	–	Packing Add.	–
	SSAKH0015PEZZ	–	Polyethylene Bag	–

Ref. No.	Part No.	★	Description	Code
			CABINET PARTS	
1	CCABAA410WEV0	R	Front Cabinet Ass'y	
1-1	*Not Available*	–	Front Cabinet	–
1-2	JBTN-A215WJSA	R	Power Button	
1-3	MSPRCA040WJFW	R	Power Spring	
1-4	GCOVAA556WJSA	R	R/C Cover	
1-5	HBDGB0019PESB	R	SHARP Badge	AD
1-6	JBTN-A216WJSA	R	Control Button	
2	CCABBA096WEV1	R	Rear Cabinet Ass'y	
2-1	*Not Available*	–	Rear Cabinet	–

CABINET PARTS LOCATION

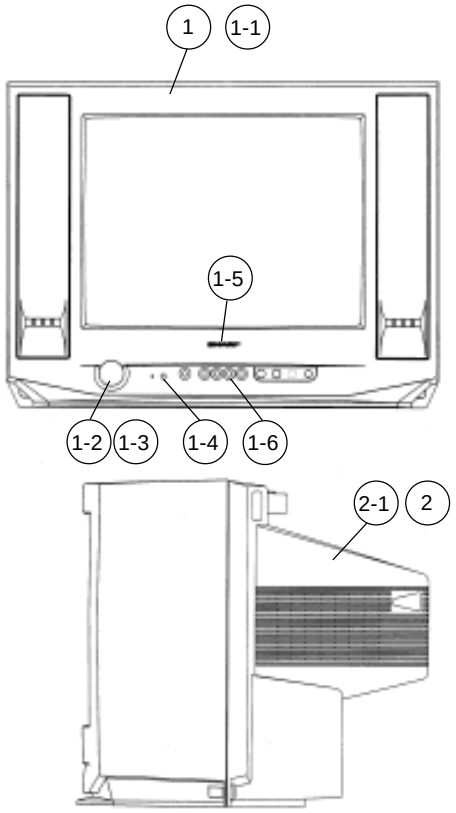

PACKING OF THE SET

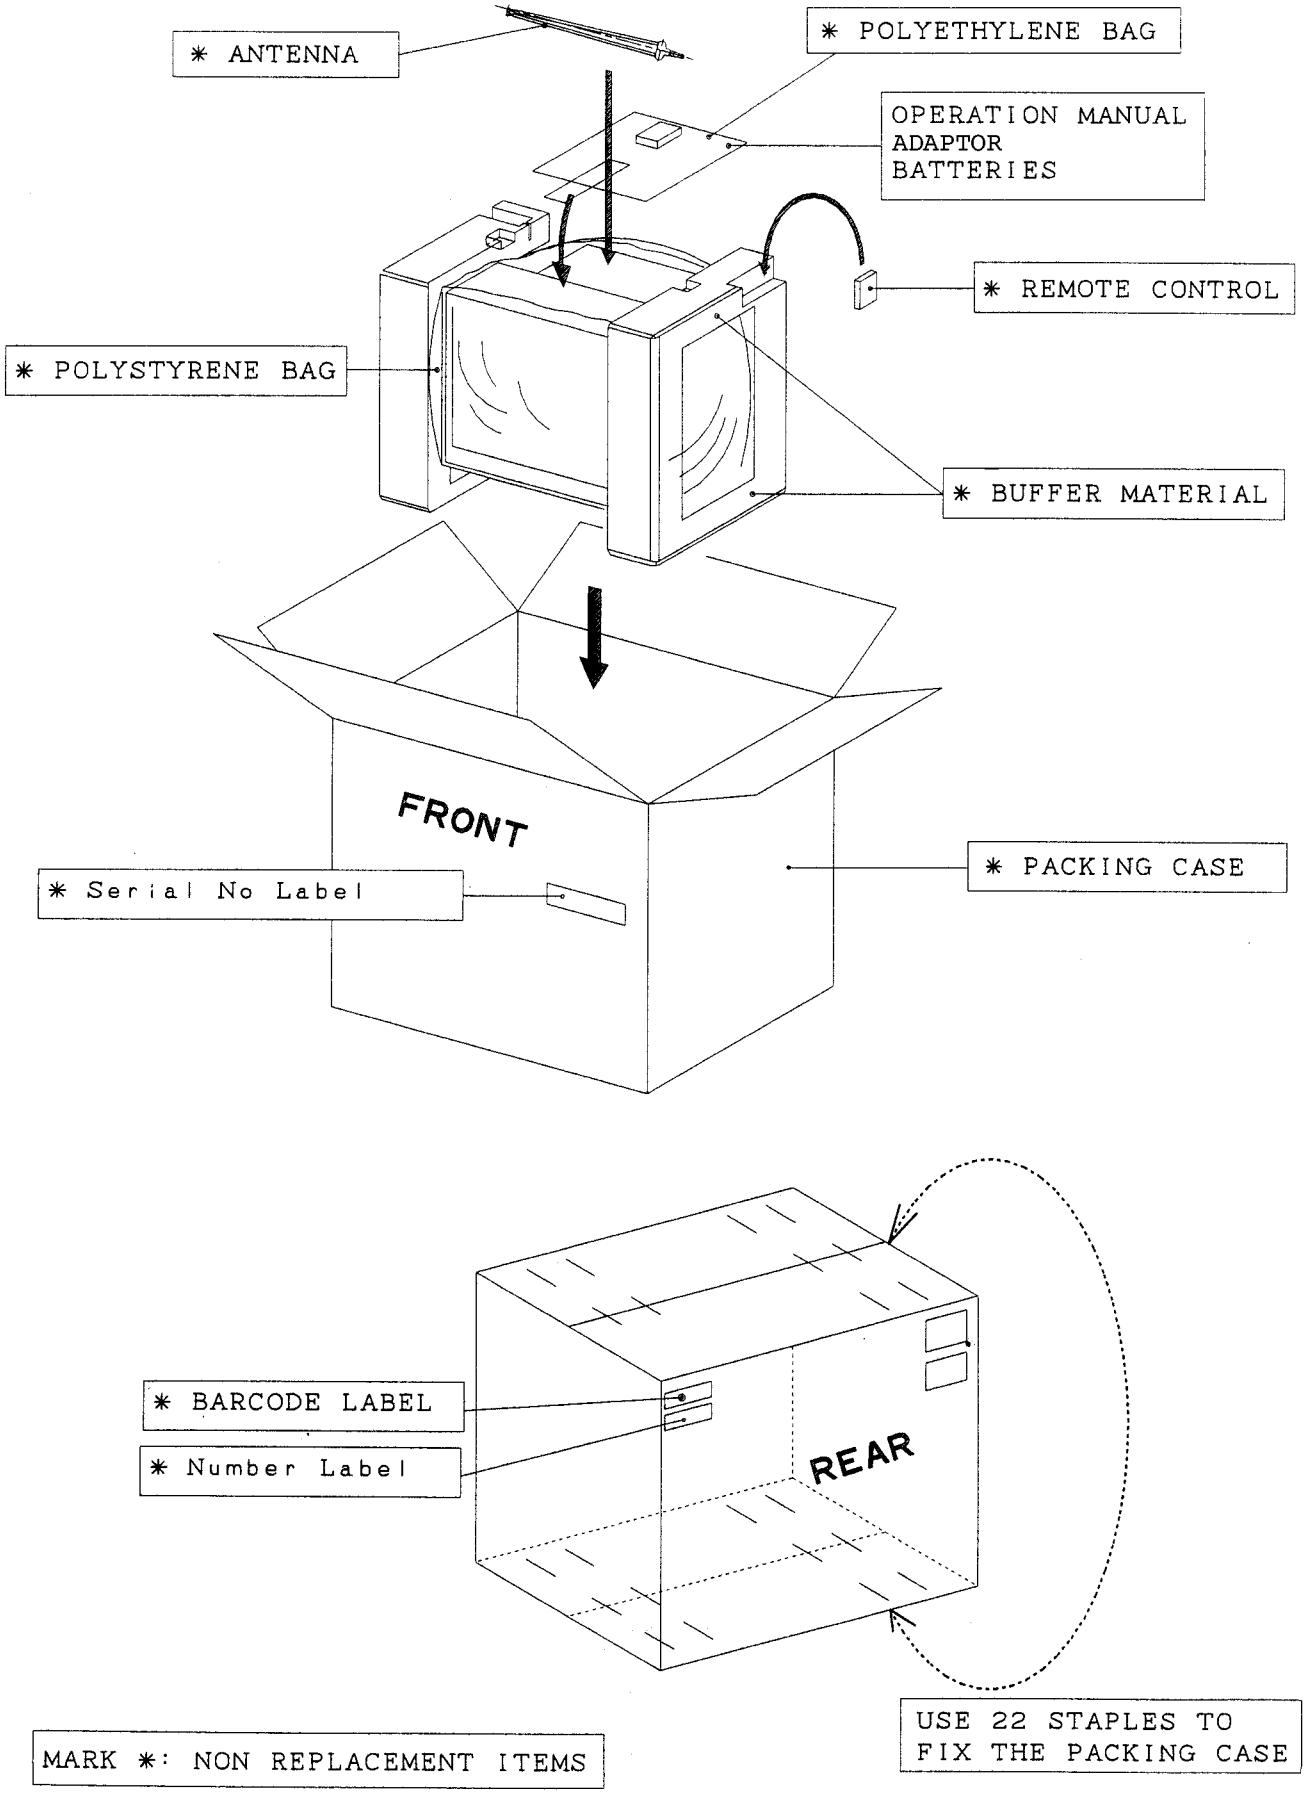

SHARP

COPYRIGHT © 2003 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1637-S
Oct. 2003 Printed in Japan
In Japan gedruckt

Design and Production Information	
Design	: SEM
Production	: SREC

MY. DS

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages